


LOADSPACE COVER

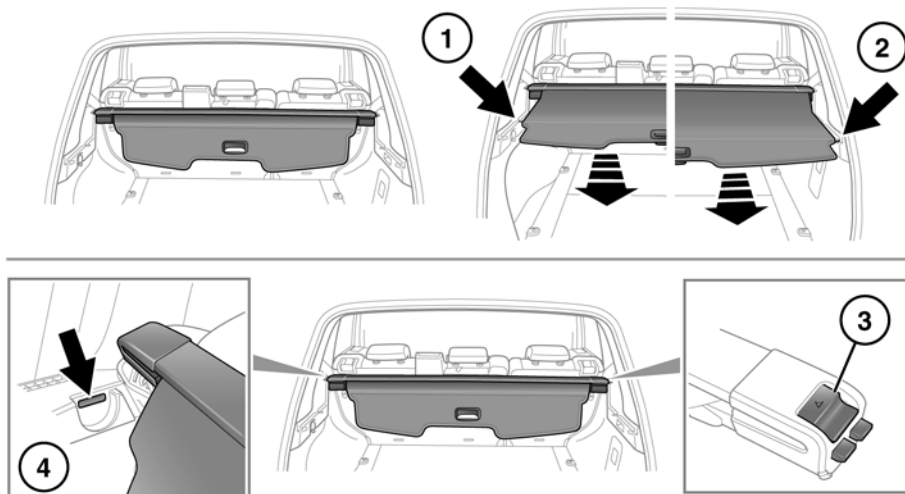

SL1078

⚠ Never place objects on top of the luggage cover. During an accident or sudden manoeuvre, loose objects can cause serious injury or death.

⚠ Do not store the loadspace cover loose in the vehicle.

Operation:


1. Pull the rigid portion of the cover to unroll.
2. Engage the end pieces into the recessed features moulded into the loadspace sides.

Removal:

3. With the cover retracted, press the release button on the right-hand end of the cover cassette.
Lift to release from the loadspace trim.
4. Manoeuvre and lift the cover to the right, releasing the left-hand end from the loadspace trim.

Note: Installation of the loadspace cover is the reverse of removal.

LUGGAGE ANCHOR POINTS

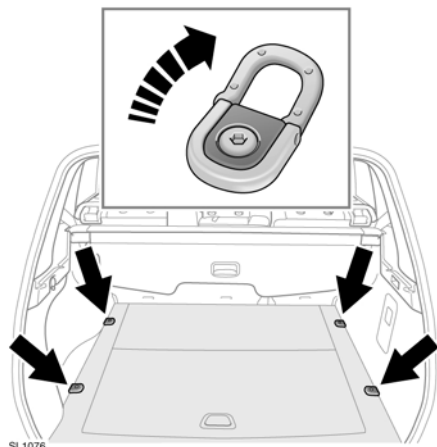

To assist in safely securing large items of luggage, four fixing points are located in the rear loadspace floor.



All items carried in the luggage area should be properly secured.

Note: A range of approved luggage retention accessories are available from your Land Rover Dealer/Authorised Repairer.