


INTERIOR LAMPS

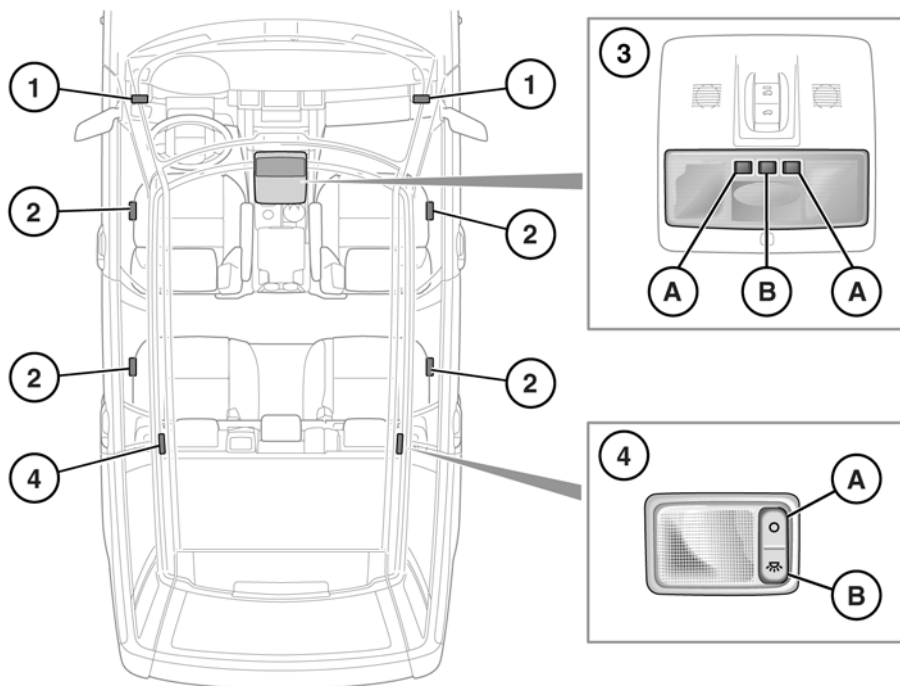

SL1062

1. Sun visor lamps:
Switch on or off as required using the switch.
2. Puddle lamps:
Automatically illuminate when the doors are opened.
3. Map reading/interior lamps:
 - A. Map light controls (on/off).
 - B. Main interior lamp control (on/off/Auto).
To activate or deactivate Auto mode, press and hold for longer than 3 seconds. In Auto mode the lamps will illuminate when a door is opened.
4. Loadspace interior lamps:
 - A. Press to turn off.
 - B. Press to turn on.