


INSTRUMENT PANEL

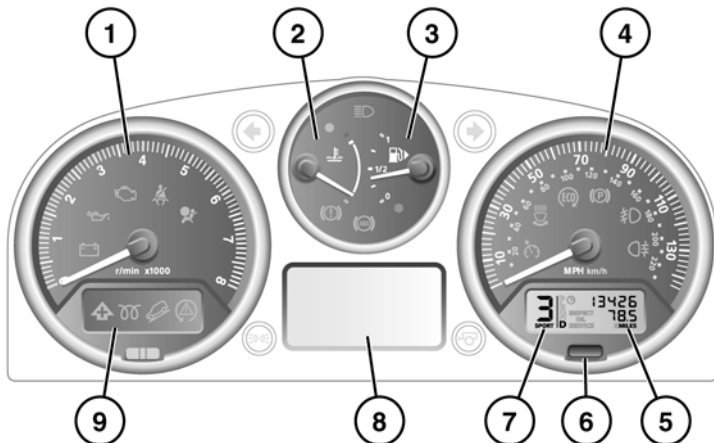

SL1448

1. Tachometer.
2. Temperature gauge

! Serious engine damage can occur if the vehicle is driven whilst the engine is overheating.

If the pointer moves onto the red line the engine is overheating. Stop the vehicle as soon as safety permits and allow the engine to idle until the temperature reduces. If, after several minutes, the temperature does not reduce, switch off the engine and allow to cool. If the problem persists, seek qualified assistance immediately.

Note: *If engine overheating occurs, there may be a noticeable reduction in engine power and the air conditioning may cease operation. This is a normal operating strategy, to reduce load on the engine and assist with cooling.*

3. Fuel gauge.



Never allow the engine to run out of fuel. The resultant misfire can seriously damage the catalytic convertor.

If the amber low fuel warning lamp illuminates, the vehicle should be refuelled as soon as possible. The approximate distance that can be travelled on the remaining fuel can be viewed via the trip computer range function.

As a reminder for the location of the fuel filler, there is an arrow next to the fuel pump symbol pointing to the relevant side of the vehicle.

4. Speedometer.
5. Total distance (odometer) and trip recorder.
6. Trip reset button.
7. Gear selector position display
8. Message centre.
9. Warning indicator panel.

TRIP COMPUTER

A short press (two seconds or less) or a series of short presses of the **i** button will change the trip computer display.

The options available are:-

- Approximate maximum range on the remaining fuel.
- Instantaneous fuel consumption.
- Average fuel consumption.
- Average speed.
- Review active warning messages.
- Blank message screen displaying only the external temperature.
- Trip distance.

To reset the trip values to zero, press and hold the **i** button for two seconds.

To reset the fuel consumption figures to zero, press and hold the **i** button until the display clears.

WARNINGS AND INFORMATION MESSAGES



If a warning message appears take appropriate action immediately. Failure to do so may result in serious damage to the vehicle.

The messages are displayed for twenty seconds when required and also when the ignition is switched on.

If the **i** symbol is displayed there are current warning messages waiting to be reviewed. To do so, press the **i** button repeatedly until the list of messages is displayed. The display will then cycle through the list of messages until the **i** button is pressed again.