


## ADJUSTING THE STEERING COLUMN

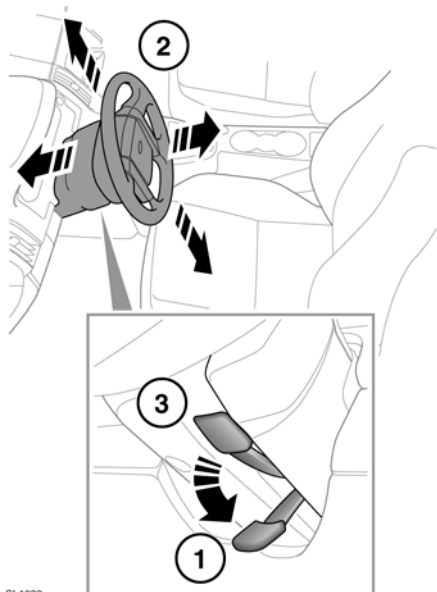

SL1020



**Never adjust the steering column while the vehicle is in motion.**

1. Move the lever fully down to unlock the column.
2. Move the steering column up, down, in or out, to the desired position.
3. Move the lever fully up to re-lock the column.