

## LOCKING AND ARMING THE ALARM



**CAUTION:** No modifications or additions should be made to the anti-theft system. Such changes could cause the system to malfunction.

Press the lock button on the Smart Key briefly, to lock the vehicle and activate the perimeter alarm. The hazard warning lamps will flash to confirm. Doors can still be unlocked and opened from inside the vehicle.

**Note:** *The vehicle will not lock if a door, the luggage compartment or the hood aperture is open.*

**Note:** *The gas filler flap can be opened only when the vehicle is unlocked.*

The perimeter alarm will sound if:

- The hood, tailgate or a door are opened.
- The vehicle battery is disconnected.
- An attempt is made to disconnect the alarm siren.

## ALARM INDICATOR

An indicator in the instrument panel will flash whenever the alarm is active.

## GLOBAL CLOSING



**WARNING:** **Ensure that no children, pets, or obstructions are in any open aperture before operating global closing. Safety mechanisms are in place to prevent serious injury, however injuries can still occur.**

Press and hold the Smart Key lock button for 3 seconds. All doors and the luggage compartment will lock and after 3 seconds all open windows and sunroof will be closed. The alarm will be activated.

Press any button on the Smart Key to cancel the operation.

## DRIVE-AWAY LOCKING

Drive away locking automatically locks all the doors when the vehicle is in motion. This feature can be enabled/disabled via the Vehicle settings menu. See **VEHICLE INFORMATION AND SETTINGS MENU, 60**.

**Note:** *Pressing the lock or unlock button on the Smart Key will override drive away locking for the current journey.*

## MISLOCK

When attempting to lock the vehicle with the Smart Key, if one of the doors, the hood or the luggage compartment is open, the vehicle will not lock and two tones will sound. Check that all doors, the hood and the luggage compartment are closed properly and lock the vehicle again.