

COMPACT DISCS



Do not force the disc into the slot.



Do not use discs with paper labels, Dual Discs or DVDPlus discs. The front loading CD player may load and play this type of disc, however, it is likely that the disc will not eject and will block the CD mechanism. Such damage to a CD player will not be covered under warranty.

Note: *Copy-protected CDs may fail to play in your CD changer or may be played subject to various limitations, e.g. sound quality may be impaired. If you experience a problem, try the CD in other players before contacting the CD vendor.*

This CD player is designed for use with CDs conforming to the RedBook standard. Other formats may not be recognised. Look for the “Compact Disc Digital Audio” logo on new CDs.

OrangeBook is the standard for CDR discs. When recording MP3 and WMA files, look for the “Compact Disc Recordable” logo. Other formats may not play on this player.

LOADING A CD

To insert a disc into the player, make sure that the label side of the disc is facing upwards and present the disc to the slot. Ease the disc into the slot until the mechanism takes over and draws the disc in fully.

LOADING ERRORS

If the player encounters a problem with a CD, one of the following messages may be displayed.

- Error 00 - cannot load the CD. Possible causes are;
 - Damaged CD
 - Not recorded to RedBook standard
- A foreign object has damaged the CD player mechanism
- Error 01 - mechanism fault. Possible causes are:
 - CD player damaged and no longer functions
- Error 02 - cannot read the CD data. Possible fault;
 - Dirty or scratched CD
 - CD is upside down
- Error 03 - cannot read the CD data.
 - CD is unreadable on this player

EJECTING A CD

Press and release the eject button. After a short pause, the disc will be presented. The disc should then be removed.


Note: *If the disc is not removed from the slot within ten seconds, it will be drawn back into the player.*

CD PLAYBACK

Playback will start when a CD is inserted. To move from another mode to CD, repeatedly press **MODE** until CD mode is selected. Playback will begin at one of two places:

- If the discs have not been removed since its last use, playback will begin from the point at which it was stopped previously.
- If the disc is being loaded, play will begin at the first track.

CD TRACK SEARCH

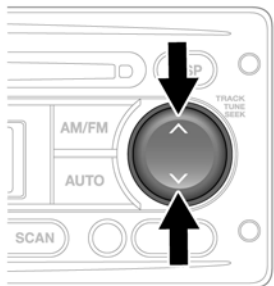


SL1276

Press either of the search arrows to find the start of the next or previous track.

To fast forward or reverse, hold down either of the search arrows. Release to play.

CD PAUSE

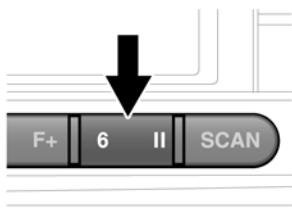

SL1278

To pause or stop CD playback, briefly press the pause button.

SHUFFLE/RANDOM CD PLAY

Random alters the playback sequence for the loaded discs. The tracks are selected randomly by the player.

1. Press the **RND** button to start random play.
2. Press again to return to normal play.

REPEAT PLAY CD TRACKS

Repeat allows the current track to play repeatedly until it is stopped or cancelled.

1. Press the **RPT** button to start repeat mode play.
2. Press again to return to normal play.

CD TRACK SCAN

CD track scan allows you to sample the music on a compact disc. This feature plays the first ten seconds of each track in numerical order. Play will then begin at the start of track one.

1. Press the **SCAN** button to start.
- Press the previous track button to play the currently scanned track.

MP3 FILE PLAYBACK


When a data disc (containing MP3 encrypted music data) is inserted into the compact disc slot, **MP3** will appear at the top of the display. **WMA** will display if the disc contains WMA encrypted files.

Press the **DISP** button repeatedly to scroll through the file information.

MP3 FOLDERS

To navigate through folders and select specific tracks, press the **F-** or **F+** buttons.

To select a track from a selection list, use the following procedure;

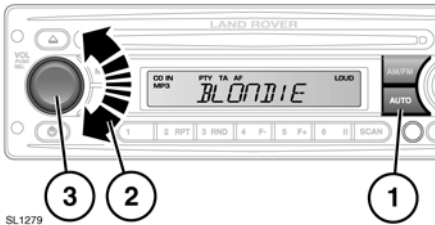

SL1279

1. Touch the **AUTO** button. **MP3 T*** will be displayed.
2. Rotate the volume control to scroll through the track list.
3. When a track is highlighted, press the volume control to select and play that track.

To search for a specific track, use the following procedure;


1. Press the **AUTO** button twice.
2. With dashes displayed, rotate the volume control to find the first letter of the track title.
3. Press the volume control to select the letter.
4. Repeat steps 2 and 3 to extend the first word of the track title.
5. When you have enough letters to recognise the word, press the up or down arrow on the search control to locate tracks starting with those letters.
6. Press the volume control to select and play.

To browse through an MP3 folder structure, use the following procedure;

1. Press the **AUTO** button three times.
2. Rotate the volume control to scroll through the folders.

3. With a folder highlighted, press the volume control to select and open the next level. If there are further folders or files, rotate the control again to scroll through.
4. Press the volume control to select and play.

A typical folder structure:

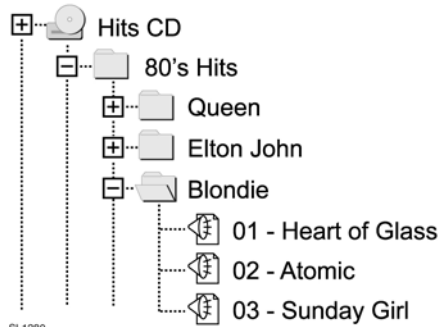

SL1280

Note: To move up the structure, select the entry in any list.