


## PASSENGER COMPARTMENT FUSE BOX

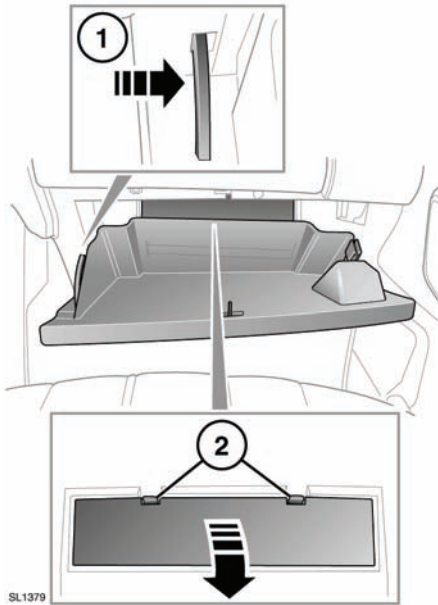

1. Support stay.
2. Fuse box cover catches.

To access the passenger compartment fuse box, open the lower glove box, push the support stay to the right and lower the glove box into the service position.

Press down on the fuse box cover catches and pull towards you. Put the cover in a safe place.

A label on the rear of the cover shows fuse and circuit information.

## CHANGING A FUSE

⚠ Fit Land Rover approved replacement fuses of the same rating and type, or fuses of matching specification. Using an incorrect fuse, may result in damage to the vehicle's electrical system and can result in a fire.

⚠ If the replacement fuse blows after installation, the system should be checked by your Land Rover Dealer/Authorised Repairer.

**Note:** Land Rover recommend that relays should be replaced only by qualified persons.

Always switch off the ignition and the affected electrical circuit, before replacing a fuse.

The fuse removal tweezers are located in the fusebox. Press the tweezers onto the head of a fuse and pull to remove. A break in the wire inside the fuse indicates that the fuse has blown and must be replaced.

There are some spare replacement fuses in the fusebox. See the fuse box cover label.

## ENGINE COMPARTMENT FUSE BOX

Fuses and relays located in the engine compartment fuse box should be accessed or replaced only by a qualified technician.

## PASSENGER COMPARTMENT FUSES

Fuse number	Rating (Amps)	Fuse colour	Circuits protected
1	5	Tan	Interior motion sensor, RF receiver, TPMS receiver
2	-	-	Spare
3	10	Red	Front fog lamps
4	-	-	Spare
5	5	Tan	Dynamic stability control, steering angle sensor
6	5	Tan	Adaptive cruise control, brake light switch
7	20	Yellow	Rear climate seats
8	30	Green	Passenger's electric seat, rear electric seats
9	5	Tan	Electric parking brake
10	5	Tan	Air suspension
11	10	Red	Trailer reverse lamp
12	5	Tan	Reverse lamps
13	-	-	Spare
14	5	Tan	Brake lamps, EMS (Diesel only)
15	30	Green	Heated rear screen
16	5	Red	Spare
17	5	Tan	Keyless entry/start
18	-	-	Spare
19	5	Tan	Engine control module
20	10	Red	Heated steering wheel
21	10	Red	Centre console switches, rear climate control, climatic seats
22	5	Tan	Transmission, transfer box, rear differential, centre console switches
23	5	Tan	Adaptive front lighting
24	10	Red	Right-hand side lamps, tail lamps
25	10	Red	Left-hand side lamps, tail lamps, number plate lamps
26	-	-	Spare
27	10	Red	Trailer side lamps
28	20	Yellow	Rear climate seats

# Fuses

Fuse number	Rating (Amps)	Fuse colour	Circuits protected
29	20	Yellow	Driver's climatic seat/heated seat
30	25	White	Front passenger door
31	5	Tan	Rain sensor
32	25	White	Driver's door
33	20	Yellow	Passenger's climatic seat/heated seat
34	10	Red	Electric fuel flap actuator
35	-	-	Spare
36	5	Tan	Battery back-up sounder
37	20	Yellow	Spare
38	15	Blue	Front screen washer
39	25	White	Rear left-hand door
40	5	Tan	Driver's window switch pack, seat switch packs, front seat lumbar, clock
41	5	Tan	Telephone
42	30	Green	Driver's electric seat, rear electric seats
43	15	Blue	Rear screen washer
44	25	White	Rear right-hand door
45	30	Green	Passenger's electric seat, rear electric seats
46	30	Green	Driver's electric seat, rear electric seats
47	20	Yellow	Sunroof
48	30	Green	Trailer connector (battery feed)
49	5	Tan	Adaptive front lighting (right-hand unit)
50	5	Tan	Adaptive front lighting (left-hand unit)
51	5	Tan	Steering wheel switches
52	20	Yellow	Front cigar lighter, centre console accessory socket
53	-	-	Spare
54	-	-	Spare
55	20	Yellow	Auxiliary power socket - rear
56	10	Red	Airbag SRS
57	10	Red	Interior lamps, battery saver circuits
58	30	Green	Deployable sidestep
59	-	-	Spare

Fuse number	Rating (Amps)	Fuse colour	Circuits protected
60	-	-	Spare
61	10	Red	Instrument panel
62	10	Red	Climate control ECU
63	20	Yellow	Rear cigar lighter, front auxiliary power socket
64	15	Blue	Audio unit, DVD player, touch screen
65	5	Tan	Surround camera system, Venture cam
66	5	Tan	Diagnostic socket
67	15	Blue	Rear seat entertainment
68	10	Red	Touch screen display, infotainment
69	5	Tan	CD autochanger

## REAR LOADSPACE FUSE BOX

The fuse box is located on the right hand side of the loadspace behind the rear loadspace access hatch. Pull the handle to open the panel.

Fuse number	Rating (Amps)	Fuse colour	Circuits protected
1	30	Green	Audio system amplifier
2	15	Blue	Adaptive dynamics
3	5	Tan	Parking aid, blind spot monitor, rear view camera
4	10	Red	Rear air conditioning
5	20	Yellow	Air suspension
6	30	Green	Electronic park brake
7	40	Orange	Rear climate seats
8	15	Blue	Trailer
9	-	-	Spare
10	-	-	Spare
11	5	Tan	Glove box
12	-	-	Spare
13	5	Tan	Air suspension compressor
14	15	Blue	Rear blower motor
15	15	Blue	Rear screen wiper
16	5	Tan	Spare
17	-	-	Spare

# Fuses

Fuse number	Rating (Amps)	Fuse colour	Circuits protected
18	-	-	Spare
19	-	-	Spare
20	30	Green	Rear seat heaters