


## EXTERIOR MIRRORS

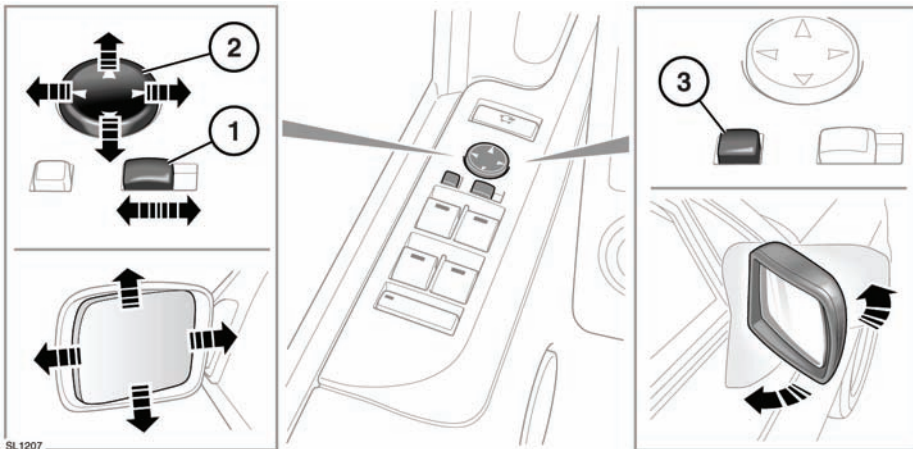

**Note:** Objects viewed in exterior mirrors may appear further away than they actually are.

1. Mirror select switch: Move left or right to select mirror to be adjusted.
2. Mirror adjustment switch: Move up/down/left or right to adjust the mirror glass.
3. Press the switch to fold/unfold the mirrors.

**Note:** If the mirrors are accidentally knocked out of position, an additional operation of the switch will re-synchronise them.

Ice or fogging will disperse from the mirrors when the ignition is switched on, depending on external temperature.

The mirrors are designed to fold forwards or rearwards on impact. They can also be folded back towards the side windows into a park position to enable the vehicle to negotiate narrower openings.

**Note:** The exterior mirrors position can be stored in the system's memory. See 17, **DRIVING POSITION MEMORY**

### MIRROR DIP WHEN REVERSING

When reverse gear is selected the door mirrors automatically adjust, providing an improved viewing angle for reversing.

The exact dip position can be adjusted when the mirrors are dipped. The next time reverse is selected, the newly adjusted position will be selected.

**Note:** If vehicle speed exceeds 7.5 mph (12 km/h) in reverse, the mirrors will return to their normal driving position for enhanced visibility.

The automatic mirror dip feature can be enabled or disabled from the Vehicle settings menu. See 63, **VEHICLE INFORMATION AND SETTINGS MENU**

## **AUTOMATIC FOLDING**

The mirrors will fold automatically when the vehicle is locked and unfold when it is unlocked.