

WARNING LAMPS

RED warning lamps are for primary warnings. A primary warning must be investigated immediately.

Seek qualified assistance before continuing.

AMBER and **YELLOW** warning lamps are for secondary warnings. Some indicate that a vehicle system is in operation, others indicate that the driver must take action and then seek qualified assistance as soon as possible

GREEN and **BLUE** lamps within the instrument panel indicate system status, such as green for turn signals, when in operation and blue for high beam.

BULB CHECK

A bulb check is initiated when the ignition system is switched on and lasts for 3 seconds (except for the air bag warning lamp which will remain on for 6 seconds). If any warning lamp remains on after this period, investigate the cause before driving.

Some warning lamps have associated messages displayed on the message center.

Note: *Not all warning lamps are included in the check (e.g. high beam headlamps and turn signals).*

CRITICAL WARNING MESSAGE (RED)



Illuminates when a critical warning message is available in the message center.

BRAKE SYSTEMS (RED)



USA.



Canada and Mexico.

Illuminates briefly when the ignition is switched on. If the lamp illuminates while driving, suspect low brake fluid level or a fault with the Electronic Brake Distribution (EBD) system. Stop the vehicle as soon as safety permits.

If the message **CHECK BRAKE FLUID** is displayed, check the brake fluid level and top-up if necessary.

If the lamp remains illuminated after topping up, seek qualified assistance before continuing.

PARKING BRAKE (RED or YELLOW)



USA.



Canada and Mexico.

Illuminates when the parking brake is correctly applied. If the lamp flashes red or illuminates yellow, a fault with the Electronic Parking Brake has been detected. Do not rely on the parking brake to secure the vehicle when parked.

Seek qualified assistance urgently.

BATTERY CHARGE (RED)



Illuminates briefly when the ignition is switched on and extinguishes when the engine is started. If the lamp remains on or illuminates while driving, there is a fault with the battery charging system.

Seek qualified assistance urgently.

Warning lamps

SEAT BELT (RED)



Illuminates when the ignition is on and an occupied front seat belt is unbuckled. The lamp will extinguish after sixty seconds or when the relevant seat belt(s) is buckled. In some markets a warning chime will sound while the lamp is illuminated.

Note: *The lamp will remain illuminated until the seatbelts of occupied front seats are fastened correctly.*

ENGINE MALFUNCTION (RED)



Illuminates briefly when the ignition is switched on. If the lamp flashes or illuminates at any other time, there is a fault with the engine.

Avoid high speeds and seek qualified assistance urgently.

GENERAL WARNING/INFORMATION MESSAGE (AMBER)



Illuminates when a non-critical warning message or an information message is available in the message center.

BRAKE SYSTEMS (AMBER)



USA.



Canada and Mexico.

Illuminates briefly when the ignition is switched on. If the lamp illuminates after starting the engine or while driving, suspect worn brake pads or a fault with the Emergency Brake Assist (EBA) system. The vehicle can still be driven with care, but avoid heavy brake application.

Seek qualified assistance urgently.

DYNAMIC STABILITY CONTROL (AMBER)



Illuminates briefly when the ignition is switched on and extinguishes when the engine is started. If the lamp flashes while driving, the DSC system is active. If the lamp illuminates continuously while driving, there is a fault with the DSC system. The vehicle can still be driven, but the DSC system will not activate under wheel spin or slide conditions.

Seek qualified assistance as soon as possible.

DYNAMIC STABILITY CONTROL OFF (AMBER)



Illuminates when DSC is switched off.

Deactivating DSC also reduces the level of Electronic Traction Control intervention and may lead to an increase in wheel spin.

ANTI-LOCK BRAKING SYSTEM (AMBER)



Illuminates briefly when the ignition is switched on. If the lamp remains on or illuminates while driving, there is a fault with the ABS system. Drive with care, avoiding heavy brake application.

Seek qualified assistance urgently.

AIR BAG SRS (AMBER)



Illuminates briefly when the ignition is switched on and extinguishes when the engine is started. If the lamp illuminates while driving, there is a fault with the air bag system. Seek qualified assistance as soon as possible.

ADAPTIVE CRUISE CONTROL (AMBER)



Illuminates when ACC is operating in follow mode.

REAR FOG LAMPS (AMBER)



Illuminates when the rear fog lamps are switched on.

EXTERNAL TEMPERATURE (AMBER)



Illuminates if the external temperature drops to 4°C (39°F) or less, a warning chime sounds, accompanied by a warning in the message centre. Take appropriate measures to defrost the vehicle and be aware that there may be ice on the roads.

TIRE PRESSURE MONITORING SYSTEM (YELLOW)



Illuminates briefly when the ignition is switched on. If the lamp remains on or illuminates while driving, one or more tires are significantly under-inflated. Stop the vehicle as soon as possible, check the tire pressures and inflate to the recommended pressure.

HIGH BEAM (BLUE)



Illuminates when the high beam headlamps are switched on or flashed.

AUTO HIGH BEAM (GREEN)



Illuminates when the auto high beam feature is enabled.

SIDE LAMPS (GREEN)



Illuminates when the side lamps are switched on.

FRONT FOG LAMPS (GREEN)



Illuminates when the front fog lamps are switched on.

TURN SIGNALS (GREEN)



The appropriate warning lamp will flash when the turn signals are operated.

HILL DESCENT CONTROL (GREEN)



Illuminates briefly when the ignition is switched on. Illuminates continuously when HDC is selected and HDC operating conditions are met. If the lamp flashes, HDC has been selected, but the operating conditions are not being met (e.g. vehicle speed is too high) or HDC fade-out is occurring.

LOW RANGE TRANSMISSION (GREEN)



Illuminates when Low range has been selected.

CRUISE CONTROL ACTIVE (GREEN)



Illuminates when cruise control is active.

Warning lamps

TRAILER TURN SIGNALS (GREEN)



Illuminates briefly when the ignition is switched on and extinguishes when the engine is started.

If a trailer is attached, the warning lamp will flash in conjunction with the turn signals warning lamp. If the lamp fails to flash, the signal bulb on the trailer may be faulty.

FORWARD ALERT (GREEN)



Illuminates when Forward Alert is active.