


CONTROLS

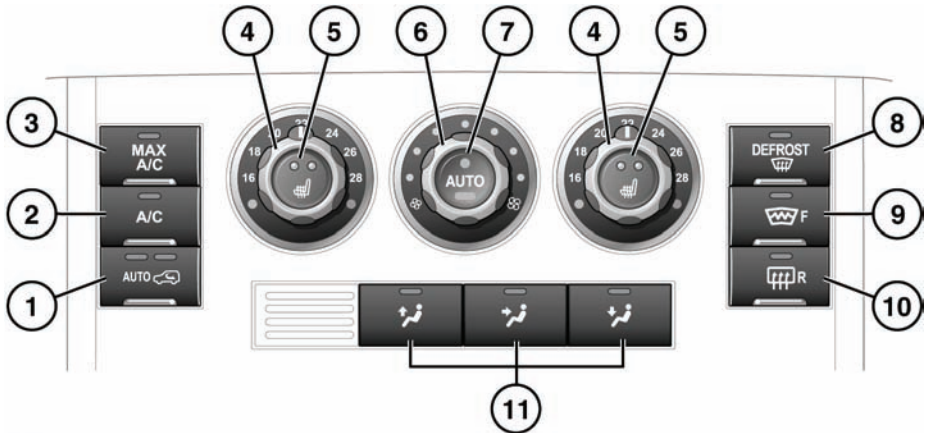

SL1212

1. Recirculation with pollution sensor.
2. Air conditioning.
3. Maximum cooling.
4. Temperature controls. For individual driver/passenger settings.
5. Front seat heaters.
6. Blower speed control.
7. Auto mode.
8. Defrost.
9. Heated front windshield.
10. Heated rear screen.
11. Air distribution.

Note: The indicator lights in the switches will illuminate when the function is selected.

Note: In low temperatures it is advisable to close the center face level vent and direct air flow from the outer face level vents towards the side windows. This will help to keep the windows clear of ice.

RECIRCULATION WITH POLLUTION SENSOR

Press once to activate automatic air recirculation. In this mode, air recirculation is regulated to achieve optimum air conditioning performance.

Press again for manual control.

Press a third time to switch off.

Note: The windows can fog if recirculation is used for long periods.

AIR CONDITIONING

Press for cool and dehumidified air.

Recommended for use throughout a journey to control window fogging and odors.

TEMPERATURE CONTROLS

Rotate to set a temperature.

Note: The system will not achieve a temperature differential from left to right of more than 6°F (3°C).

MAXIMUM COOLING

Press to turn on air conditioning and initiate maximum blower speed directed through the face level vents.

MAX A/C can be used after the engine is switched off, to provide residual engine heat for up to 20 minutes. It will operate until the engine cools or until switched off.

FRONT SEAT HEATERS

Press once to turn on high, twice to turn on low and a third time to turn off.

Note: *Seat heaters consume a great amount of battery power. They will operate only when the engine is running.*

BLOWER SPEED CONTROL

Rotate to adjust blower speed.

Rotate fully counter clockwise to turn the climate control system off.

AUTO MODE

Press **AUTO** to select fully automatic operation.

The system will adjust the heat output, blower speed, air intake, airflow distribution and recirculation to maintain the selected temperature(s) and reduce fogging without further adjustments.

The air distribution and blower controls may be operated independently to override Auto mode. If you do this, the indicator lamp on the **AUTO** switch will go out.

Press **AUTO** again to return to automatic operation.

DEFROST

Press to remove frost or heavy fogging from the windshield. The system will adjust the front blower output for maximum clearing and activate the rear blower. In addition the front and rear screen heaters will be activated.

Press again to switch off defrost mode. The screen heaters will remain on.

HEATED SCREENS

Press to operate the required screen heater. The screen heater(s) will operate for a predetermined timed period before automatically switching off.

The screen heaters will be automatically switched on if defrost mode is activated or if the external air temperature is low.

NOTICE

Do not attach labels to the rear screen. Do not scrape or use abrasive materials to clean the inside of the screen.

AIR DISTRIBUTION


Press to select the desired distribution setting.

Note: *More than one setting may be selected at a time to achieve the desired distribution.*

WATER DEPOSITS

The climate control system removes moisture from the air and deposits the excess water beneath the vehicle. Puddles may form but this is normal and is no cause for concern.


FACE LEVEL VENT TEMPERATURE CONTROL

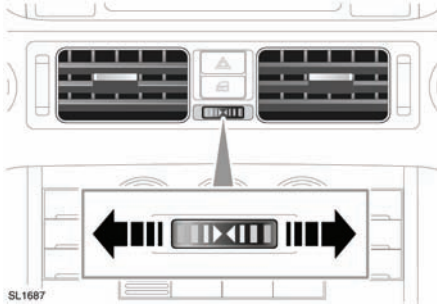

Temperature of air delivered through the climate control system via the center level vent can be fine tuned. Rotate the thumbwheel to adjust temperature.

CLIMATIC SEATS

Climatic seats provide heated or cooled ventilated air to either the seat back or seat back and cushion.

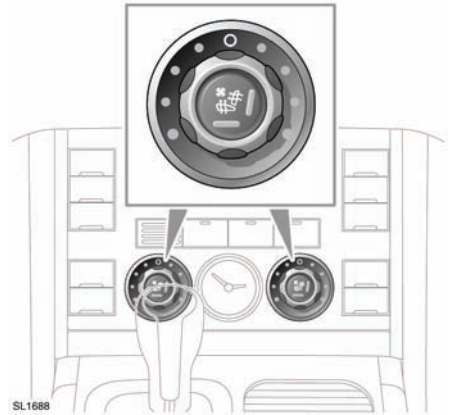

1. Rotate a control in either direction to adjust temperature. Red or blue indicators illuminate to show temperature selection.
2. Press the center of the control for seat back ventilation.
3. Press again for seat back and seat cushion ventilation. A further press will turn off seat cushion ventilation.
4. Rotate the control to **0** to turn off ventilation.

Note: Climatic seats consume a great amount of battery power. They will operate only when the engine is running.

REAR ENVIRONMENT




Press to activate rear climate control for the rear seat passengers. The indicator lamp will illuminate.

REAR ENVIRONMENT CONTROLS

There are two levels of rear environment climate control. These are referred to as 2 Zone and 4 Zone. 4 Zone gives greater flexibility of control for individual passenger settings.

Note: When **DEFROST** is selected at the front, rear control is suspended until the defrost program ends.

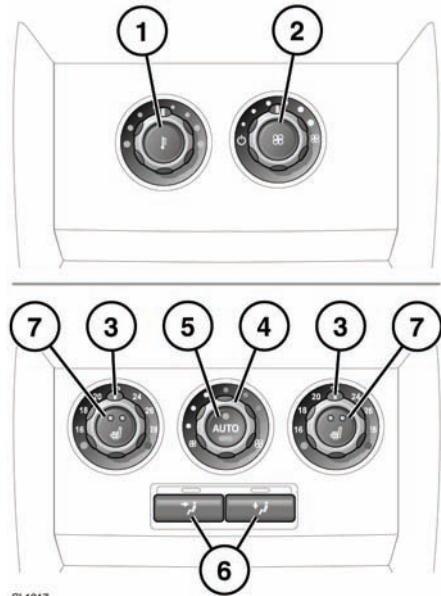

2 Zone

1. Temperature control.
2. Blower control.

Until the blower control is activated, airflow is delivered at the same temperature as set by the front climate control.

Note: Temperature set at the front climate control will restrict levels set at the rear.

4 Zone

1. Temperature controls.
2. Blower control.
3. Auto mode.

Press **AUTO** to select fully automatic operation.

The system will adjust the heat output, blower speed, air intake and airflow distribution to maintain the selected temperature(s) without further

adjustments.

The air distribution and blower controls may be operated independently to override Auto mode. If you do this, the indicator lamp on the **AUTO** switch will go out.

Press **AUTO** again to return to automatic operation.

4. Air distribution.

Press to select the desired distribution setting.

Note: *More than one setting may be selected at a time to achieve the desired distribution.*

5. Rear seat heaters.

Press once to turn on high, twice to turn on low and a third time to turn off.

Note: *Seat heaters consume a great amount of battery power. They will operate only when the engine is running.*