


## STEERING COLUMN

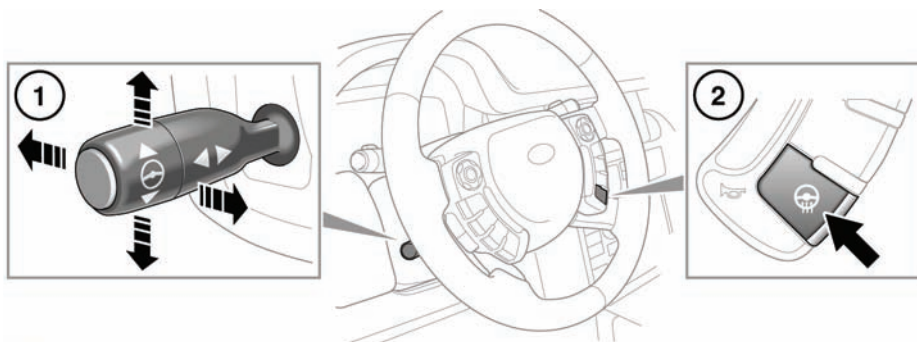

SL1198

### **⚠ WARNING**

**Never adjust the steering column while the vehicle is in motion. Doing so may cause a loss of control, potentially resulting in an accident.**

- 1. Steering column adjustment:** Move the control up or down to adjust the tilt/height. Move the control forwards or rearwards to adjust reach.

**Note:** The steering wheel position can be stored in the system's memory. **17, DRIVING POSITION MEMORY**

- 2. Heated steering wheel:** Press to operate. When switched on the temperature is thermostatically controlled.