


# Touch screen and settings

## OVERVIEW

**Note:** Physical controls on the audio fascia are referred to as hard keys. Virtual buttons on the touch screen are referred to as soft keys.

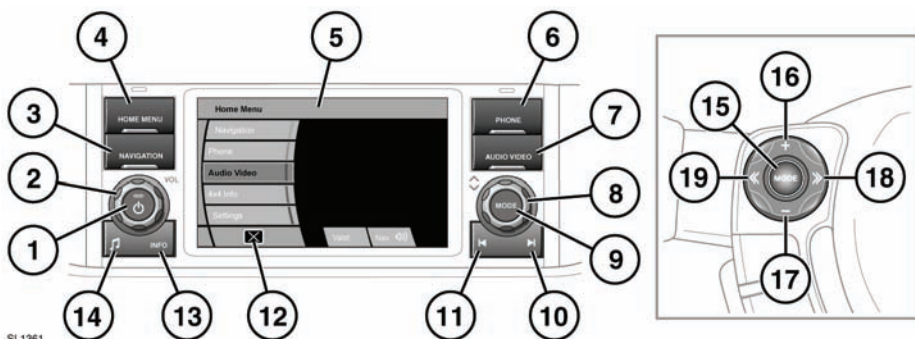

SL1361

1. On/off. The first time of switching on will display the **Home Menu**. Subsequent switch on will display the last used screen or menu.
2. Volume. Maximum volume is restricted if the engine is turned off.
3. **NAVIGATION**. Press to display the Navigation menu.
4. **HOME MENU**. Press for direct access.
5. Touch screen Home Menu.
6. **PHONE**. Press to display the Phone menu.
7. **AUDIO VIDEO**. Press to display the Audio/Video menu.
8. Scroll up/down a menu.
9. **MODE**. Press to display modes. Rotate the control to make a selection.
10. Search up/increase. Press to select the next radio station frequency up or next track on the chosen audio source.
11. Search down/decrease. Press to select the next radio station frequency down or previous track on the chosen audio source.
12. Touch screen turn off. Touch the blank screen to turn on again.
13. **INFO**. Briefly press to turn on TA (Traffic Announcement). The **TA** indicator will appear in the information display. When a selected radio station is capable of providing traffic information, **TP** will also be displayed. When a traffic message is received, **TRAFFIC** will alternate with the station name.  
Press and hold to select **NEWS**. This feature works in the same manner as **TA**.  
To cancel an announcement, press **INFO**.
14. Tone. Press to display the Tone menu.
15. Mode select.
16. Volume up.
17. Volume down.
18. Search up.
19. Search down.

## WARNING

**Do not adjust the touch screen controls, or allow the system to distract the driver while the vehicle is moving. Driver distraction can lead to accidents, causing serious injury or death.**

## HOME MENU

Press the hard key. Selection of **Navigation**, **Phone** and **Audio Video** menus can be made from this menu or from hard keys.

Selection of the **4 x 4 Info** and **Settings** menus can be made only from the **Home Menu**.

**Valet** is an area for applying security settings to the luggage compartment, glove box and touch screen functions when you are passing the vehicle to another person.

**Valet** can also be accessed via the **Vehicle Settings** menu.

**Rear Entertainment** will access the RSE Supervisor screen. This gives control over all rear screen activity.

**Cameras** gives access to the surround camera system. This is described in the **Camera systems** section of the handbook.

## SETTINGS

Settings can be adjusted to suit your personal requirements.

From the **Home Menu**, touch the **Settings** soft key. Select a category soft key.

## SYSTEM SETTINGS

Touch to change the display language, to change display units, e.g. miles or kms, to adjust audible feedback when a soft key selection is made and to adjust the clock time and date settings. Use the scroll soft keys to view selection choices. When a change is made, confirm it by touching the **OK** softkey.

***Note:** The navigation system language must be set separately. When Navigation is selected, touch the **Language** soft key on the **CAUTION** screen.*

## SCREEN SETTINGS

Touch to adjust screen brightness. The **Reset** soft key will return brightness to the center setting.

## VEHICLE SETTINGS

**Valet mode** can be selected.

At times when another person will be driving your vehicle during your absence, e.g., a parking attendant, you may wish to use the security settings for luggage compartment, glove box and touch screen.

Touch the **Valet** soft key. Use the keypad to enter a four digit code. Cancel any entered number with the **C** soft key. Touch **OK** to enter the code. Enter the same code again and touch **OK** to confirm.

This process will lock the luggage compartment and glove box and limit touch screen functions.

***Note:** Remember to take the emergency key blade with you to ensure security is complete.*

When you take back the vehicle, enter your four digit code on the **Valet Mode** screen. Touch **OK** to confirm. The security settings will be turned off.

**Note:** If you forget your four digit code, only a Land Rover Retailer will be able to deactivate it.

## VOICE SETTINGS

In this area changes can be made to the language used by the system when communicating with the driver and to voice tags added to telephone numbers. The voice tags are described later in the **Telephone** section.

A **Help** feature with examples of voice commands can be accessed.

Use the scroll soft keys to view selection choices. When a change is made, confirm it by touching the **OK** softkey.

## AUDIO SOUND SETTINGS

### WARNING

**Sustained exposure to high sound levels can damage your hearing.**

Tone and volume settings are accessed via the hard key on the audio system facia.

Briefly press the tone hard key to display the **Tone** screen.

Bass, treble and sub woofer settings can be adjusted on the sliders.

Balance and fade can be adjusted to set the focus point for sound delivery.

**Source Memory** allows personal settings to be memorized for individual audio sources.

**Logic 7** is particularly useful when the original audio source is of high quality. When selected, a seven channel feed provides enhanced audio effects.

To access volume settings, press and hold the tone hard key until the **Volume** screen is displayed.

**AVC** (Automatic Volume Control), **INFO**, **NAV**, **Phone** and **Voice** can be adjusted individually to suit personal requirements.

Use the + and - soft keys to make adjustments. The volume setting is displayed alongside the feature.

For **AVC**, the screen setting represents the amount by which volume will increase with vehicle speed. The higher the setting, the greater will be the volume boost at higher speeds.

The **INFO** setting relates to any radio announcements that may interrupt your current mode.

**NAV** and **Voice** are used to adjust the system feedback voice.

Use **Phone** to adjust call volume.

## TOUCH SCREEN CARE

### **NOTICE**

*Always run the engine during prolonged use of the touch screen. Failure to do so may discharge the vehicle battery, preventing the engine from starting.*

### **NOTICE**

*Avoid spilling or splashing liquids onto the touch screen.*

Do not use any abrasive cleaners on the touch screen.

The touch screen and inner bezel must be kept clean to maintain optimum performance. Clean finger marks with a soft cloth and Land Rover approved cleaning agent. Contact your Retailer for details.

Avoid exposing the screen to direct sunlight for long periods.

When operating touch screen soft keys, use only one finger. Using more than one finger at a time may cause false inputs.