 


UNLOCKING THE VEHICLE

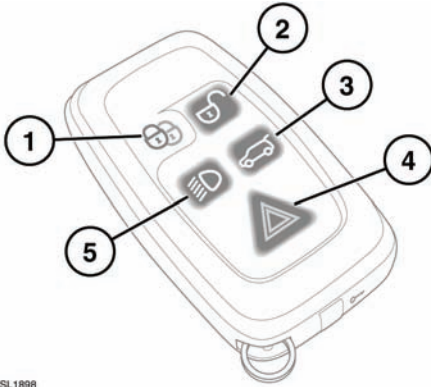

SL1898

 
⚠ WARNING

To prevent accidental or unauthorized operation, never leave the Smart Key unattended in the vehicle. Never leave children or animals unattended in the vehicle. The vehicle can be operated when the Smart Key is inside the vehicle.

Note: There are two designs of Smart Key, refer to the information which is relevant to the design of Smart Key supplied with the vehicle.

Note: The operational range of the Smart Key will vary considerably depending on atmospheric conditions and interference from other transmitting devices.

Note: If any door or the tailgate is unlocked 10 times within a short period, the latch is disabled for approximately one minute.

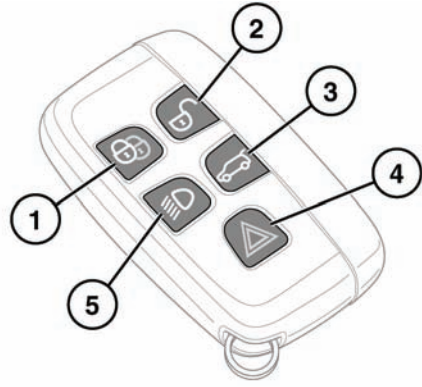

The vehicle is supplied with two Smart Keys (of the same design). The Smart Keys act as remote controls for the locking and alarm system and allow the vehicle to be locked, unlocked and driven without the use of a conventional key. See **LOCKING AND ARMING THE ALARM** (page 13). See **KEYLESS STARTING** (page 84).

1. Lock.
 - Press once to lock the vehicle and activate the alarm system. The hazard warning lamps will flash once to confirm.
2. Unlock.
 - Press briefly to unlock the vehicle and deactivate the alarm. The hazard warning lamps will flash twice to confirm. The interior lamps will illuminate to assist entry to the vehicle. See **SINGLE/MULTI-POINT ENTRY** (page 9).

3. Tailgate release.

- Press briefly to release the tailgate. The vehicle security system will remain active while the tailgate is open, but intrusion and inclination sensing systems will be disabled. On closing of the tailgate, the hazard warning lamps will flash after a few seconds to confirm the full alarm system has been reactivated (if previously armed). **10, OPENING THE TAILGATE.**

4. Panic alarm.

- Press and hold for 3 seconds (or press 3 times within 3 seconds) to activate the horn and the hazard lamps.

Note: The horn and hazard lamps will switch off automatically after approximately 2 minutes and 45 seconds.

- Once active for more than 5 seconds, the alarm can be cancelled by pressing the button and holding for 3 seconds (or pressing 3 times within 3 seconds).
- The emergency alarm will also be cancelled if a valid smart key is present when the START/STOP button is pressed.

5. Approach lighting.

- When approaching the vehicle during darkness, press to switch on the approach illumination. Press again to turn the approach lamps off.
- The approach illumination period set at the factory is 30 seconds. This delay period may be configured to provide illumination lasting between 0 and 180 seconds. **63, VEHICLE INFORMATION AND SETTINGS MENU**

Note: In some markets a second press of the button will turn on the headlamps and reversing lamps. A third press will be required to turn the lamps off.

 
 
Note: A replacement Smart Key can be obtained only from your Land Rover Retailer. The Retailer will require proof of ownership.

Notify your Retailer immediately if a Smart Key is lost or stolen.

Note: The gas filler flap can only be opened when the vehicle is unlocked.

Entering the vehicle



EMERGENCY KEY

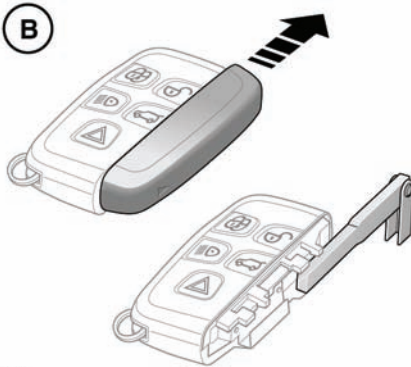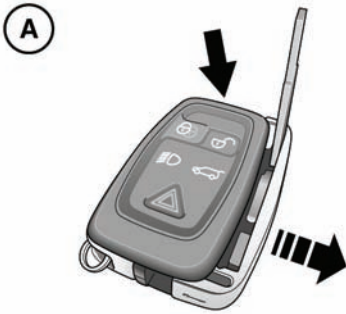

SL1929

Note: There are two designs of Smart Key, refer to the information which is relevant to the design of Smart Key supplied with the vehicle.

  - A. Press emergency key release button and slide out side cover to release the key.
- B. Slide and remove cover to expose the emergency key.

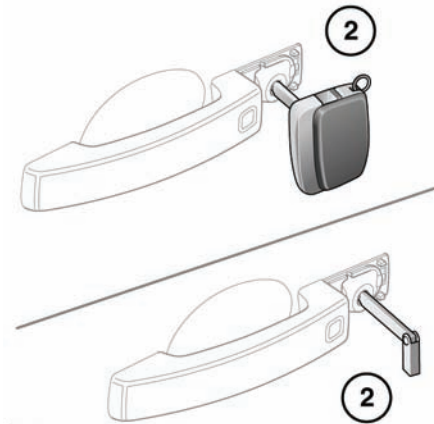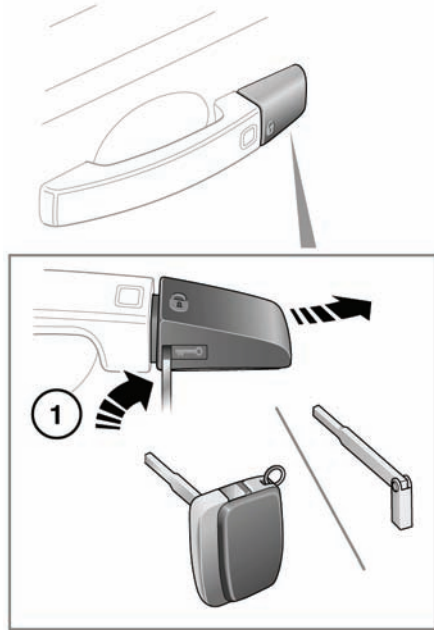

SL1930

1. Insert the key blade into the slot at the base of the door lock cover and gently lever the key blade upwards.

Carefully twist the key blade, to lever the cover off the retaining clips.

2. Insert the key blade into the exposed lock and turn to operate.

AUTOMATIC RELOCKING

If the vehicle is unlocked but neither a door nor the tailgate is opened within 1 minute, all doors will lock again automatically.

SINGLE/MULTI-POINT ENTRY

When you press the unlock button, your vehicle will unlock in one of two ways:

1. Single Point Entry: Unlocks the driver's door and gas filler flap only. A second press is required to unlock the remaining doors and the tailgate.
2. Multi Point Entry: Unlocks all doors, gas filler flap and the tailgate on the first press.

Single point entry can be disabled on individual Smart Keys by unlocking the vehicle then simultaneously pressing and holding the lock and unlock buttons for 3 seconds. The vehicle will lock and then unlock and the hazard warning lights will flash twice to confirm the change. You can now unlock all doors with a single press. Repeating the procedure will re-enable Single point entry.

This feature may also be set via the settings menu. **63, VEHICLE INFORMATION AND SETTINGS MENU.**

GLOBAL OPENING

Press and hold the Smart Key unlock button for 3 seconds. The alarm will disarm, the vehicle will unlock (either single or multi-point) and all of the windows will open.

Press any button on the Smart Key to cancel the operation.

SMART KEY CHECK

If there is no Smart Key inside the vehicle when the last door is closed, the message **Smart Key Not Found - Refer to handbook** will be displayed for 4 seconds in the vehicle message center, to alert the driver to the absence of a Smart Key. See **KEYLESS START BACKUP** (page 84).

DISARMING WHEN THE UNLOCK BUTTON FAILS TO WORK

If the unlock button fails to operate, the vehicle can still be unlocked and the alarm disabled. To unlock the vehicle:-

1. Unlock the drivers door using the key blade.
2. Position the Smart Key underneath the steering column. See **KEYLESS START BACKUP** (page 84).

***Note:** When the driver's door is unlocked using the key, the alarm will sound until the Smart Key is positioned correctly.*

DEACTIVATING THE ALARM WHEN TRIGGERED

If the alarm has been triggered it can be deactivated by pressing the Smart Key unlock button, or by positioning the Smart Key underneath the steering column. See **KEYLESS START BACKUP** (page 84).

SMART KEY SYSTEM TRANSMITTERS

⚠WARNING

Any person fitted with an implanted medical device should be kept at a distance of at least 8.7 inches (22 cm) away from any transmitter mounted in the vehicle. This is to avoid any possibility of interference between the system and the device. Interference may cause the implanted medical device to malfunction, causing serious injury or death. For information concerning the locations of the security system transmitters. See **SMART KEY SYSTEM TRANSMITTERS** (page 213).

STEERING COLUMN LOCK

 
NOTICE

Your vehicle is fitted with an electronic steering column lock. The column unlocks when a Smart Key is detected inside the vehicle.


Any malfunction of the steering column lock will be indicated by the message **STEERING COLUMN LOCKED** being displayed in the message center. If this occurs:

1. Lock and then unlock the vehicle using the Smart Key.
2. Try again to unlock the steering column lock, by turning the steering wheel gently to the left and right.
3. If the problem persists, seek qualified assistance immediately.

OPENING THE TAILGATE



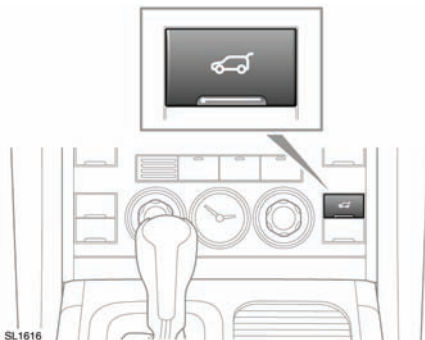


Press to release the tailgate.

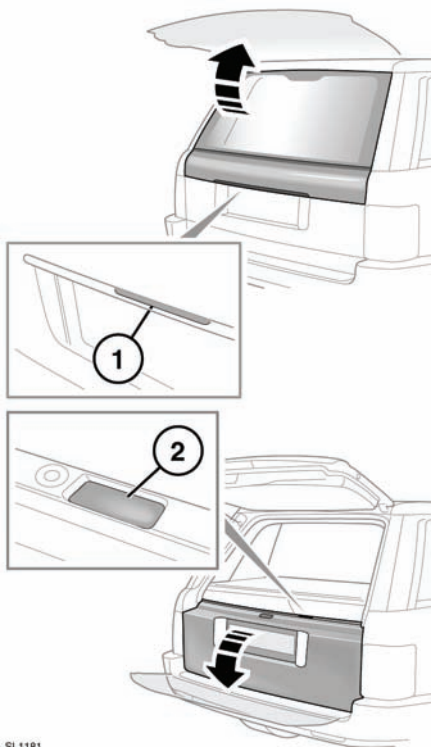 

1. With the vehicle unlocked, press the touchpad on the underside of the handle to release the upper tailgate.
2. With the upper tailgate open, press the touchpad on the lower tailgate waist moulding to release the lower tailgate.

   TAILGATE EMERGENCY MANUAL OPERATION

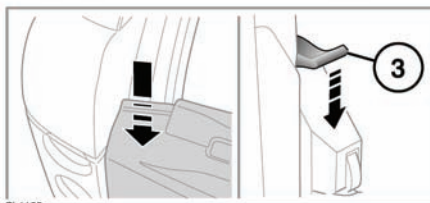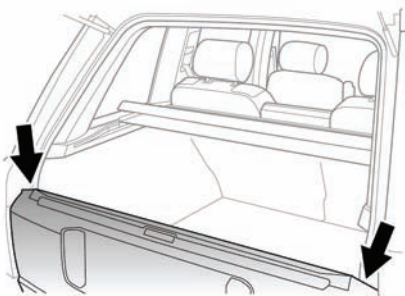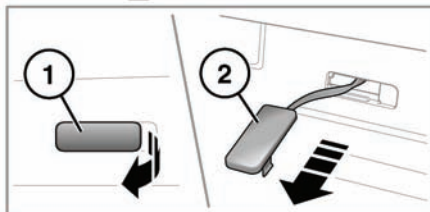


SL1188

If the battery has been disconnected or has discharged, the tailgate can be opened manually.

1. Fold the rear loadspace cover and lever out the plastic tab.
2. Pull the tab to release the upper tailgate.
3. Push down on the two hidden catches to release the lower tailgate.

CHANGING THE SMART KEY BATTERY

 
When the battery needs renewing, there will be a significant decrease in the effective range and the message **SMART KEY BATTERY LOW** will be displayed in the message center.

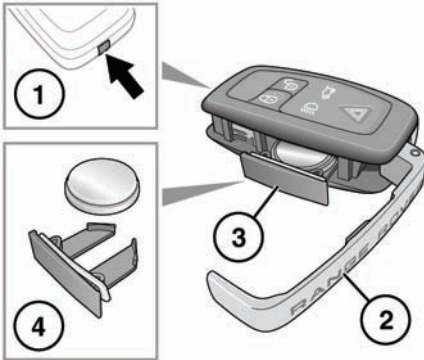

SL1190

To renew the battery:

 1. Press and hold the release button.
2. Open the side cover.
3. Remove the battery drawer and remove the battery.
4. Fit a new CR2032 type battery (available from your Retailer), with the positive (+) side upwards.

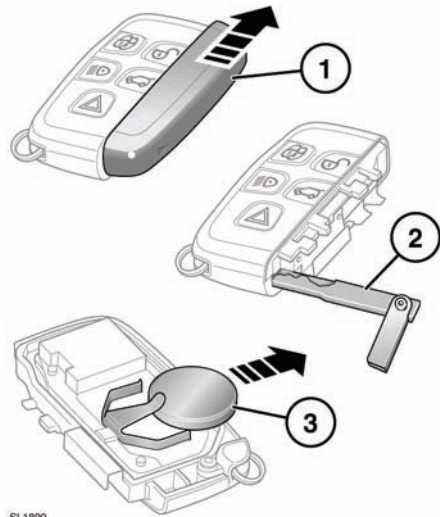

SL1899

To renew the battery:

1. Slide the cover in the direction of the arrow until a click is heard. Remove the cover.
2. Use the emergency key blade to separate the Smart key body.
3. Fit a new CR2032 type battery (available from your Retailer), with the positive (+) side upwards.

Note: Avoid touching the new battery, as moisture/oil from fingers can reduce battery life and corrode the contacts.

Refit the parts in reverse order, ensuring that they click securely into place.



Battery disposal: Used batteries must be disposed of correctly, as they contain harmful substances. Seek advice on disposal from your Retailer and/or your local authority.