

2012 MY Maintenance Schedule Range Rover Evoque

NOTE: The maintenance intervals listed are for vehicles operating under normal driving, road, and climatic conditions. More frequent attention may be necessary if the vehicle is subject to routine stop & go driving, extreme temperatures, dusty conditions, off-road driving, or frequent trailer towing. Consult your Land Rover Retailer for more information.

		Maintenance Interval - whichever occurs first (based on expected vehicle display).											
SERVICE		Miles x 1000	16	32	48	64	80	96	112	128	144	160	
		Years	1	2	3	4	5	6	7	8	9	10	
	Kilometers x 1000	26	52	78	104	130	156	182	208	234	260	286	
Change engine oil and replace filter		●	●	●	●	●	●	●	●	●	●	●	
VEHICLE INTERIOR													
Reset the Service Interval Indicator		●	●	●	●	●	●	●	●	●	●	●	
Check operation of all lights, warning indicators and horn		●	●	●	●	●	●	●	●	●	●	●	
Check operation of front/rear wiper/washer systems		●	●	●	●	●	●	●	●	●	●	●	
Check condition and security of seats and seat belts		●	●	●	●	●	●	●	●	●	●	●	
Replace pollen filters		●	●	●	●	●	●	●	●	●	●	●	
VEHICLE EXTERIOR													
Check condition of wiper blades		●	●	●	●	●	●	●	●	●	●	●	
Check operation of all door checks, hood latch, and fuel flap; lubricate door checks		●	●	●	●	●	●	●	●	●	●	●	
ENGINE COMPARTMENT													
Check battery condition; check/ top up electrolyte level		●	●	●	●	●	●	●	●	●	●	●	
Check / top up fluid levels (brake, power steering, windshield washer)		●	●	●	●	●	●	●	●	●	●	●	
Check / top up coolant level; check specific gravity		●	●	●	●	●	●	●	●	●	●	●	
Check condition of accessory drive belt		●	●	●	●	●	●	●	●	●	●	●	
Change brake fluid: every 3 years		●	●	●	●	●	●	●	●	●	●	●	
Change engine coolant: every 10 years		●	●	●	●	●	●	●	●	●	●	●	
Replace spark plugs		●	●	●	●	●	●	●	●	●	●	●	
Replace air cleaner element		●	●	●	●	●	●	●	●	●	●	●	
Replace accessory drive belt		●	●	●	●	●	●	●	●	●	●	●	

2012 MY Maintenance Schedule Range Rover Evoque

SERVICE	Maintenance interval – whichever occurs first (based on expected vehicle display).											
	Miles x 1000	16	32	48	64	80	96	112	128	144	160	160
	Kilometers x 1000	26	52	78	104	130	156	182	208	234	260	260
VEHICLE UNDERBODY												
NOTE: Remove all road wheels before inspecting brake components.												
Inspect brake pads for wear, calipers for leaks, and discs for condition	●	●	●	●	●	●	●	●	●	●	●	●
Check operation of parking brake	●	●	●	●	●	●	●	●	●	●	●	●
Inspect tire pressures, condition, and tread depth	●	●	●	●	●	●	●	●	●	●	●	●
Inspect exhaust system for leaks, security and damage	●	●	●	●	●	●	●	●	●	●	●	●
Inspect for fluid leaks	●	●	●	●	●	●	●	●	●	●	●	●
Inspect condition of driveshafts, suspension, and steering boots/gaiters	●	●	●	●	●	●	●	●	●	●	●	●
Inspect fuel, hydraulic and fluid pipes, hoses and unions	●	●	●	●	●	●	●	●	●	●	●	●
Inspect electrical harnesses, routing and connections	●	●	●	●	●	●	●	●	●	●	●	●
Lubricate wheel spigot bore with anti-seize compound;												
Install road wheels	●	●	●	●	●	●	●	●	●	●	●	●
Replace all flexible brake hoses: every 6 years												
Replace fuel filter: every 9 years												
Change transmission fluid and filter: every 10 years												
Change rear differential oil: every 10 years												
Change transfer box oil: every 10 years												
Conduct road test	●	●	●	●	●	●	●	●	●	●	●	●
If fault lamps are illuminated, interrogate with IDS and report findings	●	●	●	●	●	●	●	●	●	●	●	●
Check for any outstanding Recalls or Service Actions	●	●	●	●	●	●	●	●	●	●	●	●
Endorse Service Record	●	●	●	●	●	●	●	●	●	●	●	●