

2012 MY Maintenance Schedule Range Rover Evoque

NOTE: The maintenance intervals listed are for vehicles operating under normal driving, road, and climatic conditions. More frequent attention may be necessary if the vehicle is subject to routine stop & go driving, extreme temperatures, dusty conditions, off-road driving, or frequent trailer towing. Consult your Land Rover Retailer for more information.

		Maintenance Interval – whichever occurs first (based on expected vehicle display).												
		16	32	48	64	80	96	112	128	144	160			
Miles x 1000	Years	1	2	3	4	5	6	7	8	9	10			
	Kilometers x 1000	26	52	78	104	130	156	182	208	234	260			
SERVICE	Change engine oil and replace filter	•	•	•	•	•	•	•	•	•	•	•	•	
VEHICLE INTERIOR														
	Reset the Service Interval Indicator	•	•	•	•	•	•	•	•	•	•	•	•	
	Check operation of all lights, warning indicators and horn	•	•	•	•	•	•	•	•	•	•	•	•	
	Check operation of front/rear wiper washer systems	•	•	•	•	•	•	•	•	•	•	•	•	
	Check condition and security of seats and seat belts	•	•	•	•	•	•	•	•	•	•	•	•	
	Replace pollen filters	•	•	•	•	•	•	•	•	•	•	•	•	
VEHICLE EXTERIOR														
	Check condition of wiper blades	•	•	•	•	•	•	•	•	•	•	•	•	
	Check operation of all door checks, hood latch, and fuel flap; Lubricate door checks	•	•	•	•	•	•	•	•	•	•	•	•	
ENGINE COMPARTMENT														
	Check battery condition; check / top up electrolyte level	•	•	•	•	•	•	•	•	•	•	•	•	
	Check / top up fluid levels (brake, power steering, windshield washer)	•	•	•	•	•	•	•	•	•	•	•	•	
	Check / top up coolant level; check specific gravity	•	•	•	•	•	•	•	•	•	•	•	•	
	Check condition of accessory drive belt	•	•	•	•	•	•	•	•	•	•	•	•	
	Change brake fluid: every 3 years			•			•			•			•	
	Change engine coolant: every 10 years													
	Replace spark plugs						•							
	Replace air cleaner element	•	•	•	•	•	•	•	•	•	•	•	•	
	Replace accessory drive belt												•	

2012 MY Maintenance Schedule Range Rover Evoque

Maintenance Interval – whichever occurs first (based on expected vehicle display).												
	16	32	48	64	80	96	112	128	144	160		
Miles x 1000												
Years	1	2	3	4	5	6	7	8	9	10		
Kilometers x 1000	26	52	78	104	130	156	182	208	234	260		
SERVICE												
VEHICLE UNDERBODY												
NOTE: Remove all road wheels before inspecting brake components.												
Inspect brake pads for wear, calipers for leaks, and discs for condition	•	•	•	•	•	•	•	•	•	•	•	•
Check operation of parking brake	•	•	•	•	•	•	•	•	•	•	•	•
Inspect tire pressures, condition, and tread depth	•	•	•	•	•	•	•	•	•	•	•	•
Inspect exhaust system for leaks, security and damage	•	•	•	•	•	•	•	•	•	•	•	•
Inspect for fluid leaks	•	•	•	•	•	•	•	•	•	•	•	•
Inspect condition of driveshafis, suspension, and steering boots/gaeters	•	•	•	•	•	•	•	•	•	•	•	•
Inspect fuel, hydraulic and fluid pipes, hoses and unions	•	•	•	•	•	•	•	•	•	•	•	•
Inspect electrical harnesses, routing and connections	•	•	•	•	•	•	•	•	•	•	•	•
Lubricate wheel spigot bore with anti-seize compound; install road wheels	•	•	•	•	•	•	•	•	•	•	•	•
Replace all flexible brake hoses: every 6 years						•						
Replace fuel filter: every 9 years											•	
Change transmission fluid and filter: every 10 years												•
Change rear differential oil: every 10 years												•
Change transfer box oil: every 10 years												•
Conduct road test	•	•	•	•	•	•	•	•	•	•	•	•
If fault lamps are illuminated, interrogate with IDS and report findings	•	•	•	•	•	•	•	•	•	•	•	•
Check for any outstanding Recalls or Service Actions	•	•	•	•	•	•	•	•	•	•	•	•
Endorse Service Record	•	•	•	•	•	•	•	•	•	•	•	•