

2012 MY Maintenance Schedule Range Rover Evoque

NOTE: The maintenance intervals listed are for vehicles operating under normal driving, road, and climatic conditions. More frequent attention may be necessary if the vehicle is subject to routine stop & go driving, extreme temperatures, dusty conditions, off-road driving, or frequent trailer towing. Consult your Land Rover Retailer for more information.

		Maintenance Interval – whichever occurs first (based on expected vehicle display).												
		16	32	48	64	80	96	112	128	144	160			
Miles x 1000	Years	1	2	3	4	5	6	7	8	9	10			
	Kilometers x 1000	26	52	78	104	130	156	182	208	234	260			
SERVICE														
Change engine oil and replace filter		•	•	•	•	•	•	•	•	•	•	•	•	
VEHICLE INTERIOR														
Reset the Service Interval Indicator		•	•	•	•	•	•	•	•	•	•	•	•	
Check operation of all lights, warning indicators and horn		•	•	•	•	•	•	•	•	•	•	•	•	
Check operation of front/rear wiper washer systems		•	•	•	•	•	•	•	•	•	•	•	•	
Check condition and security of seats and seat belts		•	•	•	•	•	•	•	•	•	•	•	•	
Replace pollen filters		•	•	•	•	•	•	•	•	•	•	•	•	
VEHICLE EXTERIOR														
Check condition of wiper blades		•	•	•	•	•	•	•	•	•	•	•	•	
Check operation of all door checks, hood latch, and fuel flap; Lubricate door checks		•	•	•	•	•	•	•	•	•	•	•	•	
ENGINE COMPARTMENT														
Check battery condition; check / top up electrolyte level		•	•	•	•	•	•	•	•	•	•	•	•	
Check / top up fluid levels (brake, power steering, windshield washer)		•	•	•	•	•	•	•	•	•	•	•	•	
Check / top up coolant level; check specific gravity		•	•	•	•	•	•	•	•	•	•	•	•	
Check condition of accessory drive belt		•	•	•	•	•	•	•	•	•	•	•	•	
Change brake fluid: every 3 years				•			•			•			•	
Change engine coolant: every 10 years													•	
Replace spark plugs							•						•	
Replace air cleaner element		•	•	•	•	•	•	•	•	•	•	•	•	
Replace accessory drive belt													•	

2012 MY Maintenance Schedule Range Rover Evoque

Maintenance Interval – whichever occurs first (based on expected vehicle display).												
	16	32	48	64	80	96	112	128	144	160		
Miles x 1000												
Years	1	2	3	4	5	6	7	8	9	10		
Kilometers x 1000	26	52	78	104	130	156	182	208	234	260		
SERVICE												
VEHICLE UNDERBODY												
NOTE: Remove all road wheels before inspecting brake components.												
Inspect brake pads for wear, calipers for leaks, and discs for condition	•	•	•	•	•	•	•	•	•	•	•	•
Check operation of parking brake	•	•	•	•	•	•	•	•	•	•	•	•
Inspect tire pressures, condition, and tread depth	•	•	•	•	•	•	•	•	•	•	•	•
Inspect exhaust system for leaks, security and damage	•	•	•	•	•	•	•	•	•	•	•	•
Inspect for fluid leaks	•	•	•	•	•	•	•	•	•	•	•	•
Inspect condition of driveshafis, suspension, and steering boots/gaeters	•	•	•	•	•	•	•	•	•	•	•	•
Inspect fuel, hydraulic and fluid pipes, hoses and unions	•	•	•	•	•	•	•	•	•	•	•	•
Inspect electrical harnesses, routing and connections	•	•	•	•	•	•	•	•	•	•	•	•
Lubricate wheel spigot bore with anti-seize compound; install road wheels	•	•	•	•	•	•	•	•	•	•	•	•
Replace all flexible brake hoses: every 6 years						•						
Replace fuel filter: every 9 years										•		
Change transmission fluid and filter: every 10 years												•
Change rear differential oil: every 10 years												•
Change transfer box oil: every 10 years												•
Conduct road test	•	•	•	•	•	•	•	•	•	•	•	•
If fault lamps are illuminated, interrogate with IDS and report findings	•	•	•	•	•	•	•	•	•	•	•	•
Check for any outstanding Recalls or Service Actions	•	•	•	•	•	•	•	•	•	•	•	•
Endorse Service Record	•	•	•	•	•	•	•	•	•	•	•	•