

2012 MY Maintenance Schedule Range Rover Evoque

NOTE: The maintenance intervals listed are for vehicles operating under normal driving, road, and climatic conditions. More frequent attention may be necessary if the vehicle is subject to routine stop & go driving, extreme temperatures, dusty conditions, off-road driving, or frequent trailer towing. Consult your Land Rover Retailer for more information.

Maintenance Interval – whichever occurs first (based on expected vehicle display).														
SERVICE	Miles x 1000	16	32	48	64	80	96	112	128	144	160			
	Years	1	2	3	4	5	6	7	8	9	10			
	Kilometers x 1000	26	52	78	104	130	156	182	208	234	260			
Change engine oil and replace filter		•	•	•	•	•	•	•	•	•	•			
VEHICLE INTERIOR														
Reset the Service Interval Indicator		•	•	•	•	•	•	•	•	•	•			
Check operation of all lights, warning indicators and horn		•	•	•	•	•	•	•	•	•	•			
Check operation of front/rear wiper washer systems		•	•	•	•	•	•	•	•	•	•			
Check condition and security of seats and seat belts		•	•	•	•	•	•	•	•	•	•			
Replace pollen filters		•	•	•	•	•	•	•	•	•	•			
VEHICLE EXTERIOR														
Check condition of wiper blades		•	•	•	•	•	•	•	•	•	•			
Check operation of all door checks, hood latch, and fuel flap; lubricate door checks		•	•	•	•	•	•	•	•	•	•			
ENGINE COMPARTMENT														
Check battery condition; check / top up electrolyte level		•	•	•	•	•	•	•	•	•	•			
Check / top up fluid levels (brake, power steering, windshield washer)		•	•	•	•	•	•	•	•	•	•			
Check / top up coolant level; check specific gravity		•	•	•	•	•	•	•	•	•	•			
Check condition of accessory drive belt		•	•	•	•	•	•	•	•	•	•			
Change brake fluid: every 3 years				•			•			•				
Change engine coolant: every 10 years														•
Replace spark plugs								•						
Replace air cleaner element		•	•	•	•	•	•	•	•	•	•			
Replace accessory drive belt														•

2012 MY Maintenance Schedule Range Rover Evoque

Maintenance Interval – whichever occurs first (based on expected vehicle display).														
SERVICE	Miles x 1000	16	32	48	64	80	96	112	128	144	160			
	Years	1	2	3	4	5	6	7	8	9	10			
	Kilometers x 1000	26	52	78	104	130	156	182	208	234	260			
VEHICLE UNDERBODY														
NOTE: Remove all road wheels before inspecting brake components.														
Inspect brake pads for wear, calipers for leaks, and discs for condition		•	•	•	•	•	•	•	•	•	•			•
Check operation of parking brake		•	•	•	•	•	•	•	•	•	•			•
Inspect tire pressures, condition, and tread depth		•	•	•	•	•	•	•	•	•	•			•
Inspect exhaust system for leaks, security and damage		•	•	•	•	•	•	•	•	•	•			•
Inspect for fluid leaks		•	•	•	•	•	•	•	•	•	•			•
Inspect condition of driveshafts, suspension, and steering boots/gaeters		•	•	•	•	•	•	•	•	•	•			•
Inspect fuel, hydraulic and fluid pipes, hoses and unions		•	•	•	•	•	•	•	•	•	•			•
Inspect electrical harnesses, routing and connections		•	•	•	•	•	•	•	•	•	•			•
Lubricate wheel spigot bore with anti-seize compound; install road wheels		•	•	•	•	•	•	•	•	•	•			•
Replace all flexible brake hoses: every 6 years							•							
Replace fuel filter: every 9 years										•				
Change transmission fluid and filter: every 10 years											•			
Change rear differential oil: every 10 years														•
Change transfer box oil: every 10 years														•
Conduct road test		•	•	•	•	•	•	•	•	•	•			•
If fault lamps are illuminated, interrogate with IDS and report findings		•	•	•	•	•	•	•	•	•	•			•
Check for any outstanding Recalls or Service Actions		•	•	•	•	•	•	•	•	•	•			•
Endorse Service Record		•	•	•	•	•	•	•	•	•	•			•