

NOTE: The maintenance intervals listed are for vehicles operating under normal driving, road, and climatic conditions. More frequent attention may be necessary if the vehicle is subject to routine stop & go driving, extreme temperatures, dusty conditions, off-road driving, or frequent trailer towing. Consult your Land Rover Retailer for more information.

		Maintenance Interval – whichever occurs first (based on expected vehicle display).												
SERVICE	Miles x 1000	15	30	45	60	75	90	105	120	135	150			
	Months	12	24	36	48	60	72	84	96	108	120			
	Kilometers x 1000	24	48	72	96	120	144	168	192	216	240			
Change engine oil and replace filter		•	•	•	•	•	•	•	•	•	•			
VEHICLE INTERIOR														
Reset the Service Interval Indicator		•	•	•	•	•	•	•	•	•	•			
Reset engine oil level indicator		•	•	•	•	•	•	•	•	•	•			
Check operation of all lights, warning indicators and horn		•	•	•	•	•	•	•	•	•	•			
Check operation of front/rear wiper washer systems		•	•	•	•	•	•	•	•	•	•			
Check condition and security of seats and seat belts		•	•	•	•	•	•	•	•	•	•			
Replace pollen filter		•	•	•	•	•	•	•	•	•	•			
VEHICLE EXTERIOR														
Check condition of wiper blades		•	•	•	•	•	•	•	•	•	•			
Check operation of all door checks, hood latch, and fuel flap; lubricate door checks		•	•	•	•	•	•	•	•	•	•			
ENGINE COMPARTMENT														
Check / top up fluid levels (brake, power steering, windshield washer)		•	•	•	•	•	•	•	•	•	•			
Check / top up coolant level; check specific gravity		•	•	•	•	•	•	•	•	•	•			
Check condition of accessory drive belt(s)		•	•	•	•	•	•	•	•	•	•			
Change brake fluid: every 3 years				•			•			•				
Change engine coolant: every 10 years													•	
Replace spark plugs								•						
Replace air cleaner elements						•								
Replace accessory drive belt													•	

Maintenance Interval – whichever occurs first (based on expected vehicle display).												
	15	30	45	60	75	90	105	120	135	150		
Miles x 1000												
Months	12	24	36	48	60	72	84	96	108	120		
Kilometers x 1000	24	48	72	96	120	144	168	192	216	240		
SERVICE												
VEHICLE UNDERBODY												
NOTE: Remove all road wheels before inspecting brake components.												
Inspect brake pads for wear, calipers for leaks, and discs for condition	•	•	•	•	•	•	•	•	•	•	•	•
Check adjustment of electronic parking brake	•	•	•	•	•	•	•	•	•	•	•	•
Inspect tire pressures, condition, and tread depth	•	•	•	•	•	•	•	•	•	•	•	•
Inspect exhaust system	•	•	•	•	•	•	•	•	•	•	•	•
Inspect for fluid leaks	•	•	•	•	•	•	•	•	•	•	•	•
Inspect condition of driveshatts, suspension, and steering boots/gaiters	•	•	•	•	•	•	•	•	•	•	•	•
Inspect fuel, hydraulic and fluid pipes, hoses and unions	•	•	•	•	•	•	•	•	•	•	•	•
Inspect electrical harnesses, routing and connections	•	•	•	•	•	•	•	•	•	•	•	•
Lubricate wheel spigot bore with anti-seize compound; install road wheels to opposite side of same axle (except unidirectional tires, which install on same side)	•	•	•	•	•	•	•	•	•	•	•	•
Replace all flexible brake hoses: every 6 years						•						
Replace fuel filter: every 10 years												•
Change transmission fluid and filter: every 10 years												•
Change rear locking differential oil					•							•
Change front and rear axle oil (non-locking differential): every 10 years												•
Change transfer box oil; replace drain and fill plugs and washers					•							•
Conduct road test: select LOW range gears and drive the vehicle 3 – 4 vehicle lengths, then reselect HIGH range gears	•	•	•	•	•	•	•	•	•	•	•	•
If fault lamps are illuminated, interrogate with IDS and report findings	•	•	•	•	•	•	•	•	•	•	•	•
Check for any outstanding Recalls or Service Actions	•	•	•	•	•	•	•	•	•	•	•	•
Endorse Service Record	•	•	•	•	•	•	•	•	•	•	•	•