

NOTE: The maintenance intervals listed are for vehicles operating under normal driving, road, and climatic conditions. More frequent attention may be necessary if the vehicle is subject to routine stop & go driving, extreme temperatures, dusty conditions, off-road driving, or frequent trailer towing. Consult your Land Rover Retailer for more information.

		Maintenance Interval – whichever occurs first (based on expected vehicle display).											
		Miles x 1000	15	30	45	60	75	90	105	120	135	150	
SERVICE		Months	12	24	36	48	60	72	84	96	108	120	
		Kilometers x 1000	24	48	72	96	120	144	168	192	216	240	
VEHICLE INTERIOR		Change engine oil and replace filter	●	●	●	●	●	●	●	●	●	●	
		Reset the Service Interval Indicator	●	●	●	●	●	●	●	●	●	●	
		Reset engine oil level indicator	●	●	●	●	●	●	●	●	●	●	
		Check operation of all lights, warning indicators and horn	●	●	●	●	●	●	●	●	●	●	
		Check operation of front/rear wiper washer systems	●	●	●	●	●	●	●	●	●	●	
		Check condition and security of seats and seat belts	●	●	●	●	●	●	●	●	●	●	
		Replace pollen filter	●	●	●	●	●	●	●	●	●	●	
VEHICLE EXTERIOR		Check condition of wiper blades	●	●	●	●	●	●	●	●	●	●	
		Check operation of all door checks, hood latch, and fuel flap: lubricate door checks	●	●	●	●	●	●	●	●	●	●	
ENGINE COMPARTMENT		Check / top up fluid levels (brake, power steering, windshield washer)	●	●	●	●	●	●	●	●	●	●	
		Check / top up coolant level; check specific gravity	●	●	●	●	●	●	●	●	●	●	
		Check condition of accessory drive belt(s)	●	●	●	●	●	●	●	●	●	●	
		Change brake fluid: every 3 years	●	●	●	●	●	●	●	●	●	●	
		Change engine coolant: every 10 years	●	●	●	●	●	●	●	●	●	●	
		Replace spark plugs	●	●	●	●	●	●	●	●	●	●	
		Replace air cleaner elements	●	●	●	●	●	●	●	●	●	●	
		Replace accessory drive belt	●	●	●	●	●	●	●	●	●	●	

SERVICE	Maintenance interval – whichever occurs first (based on expected vehicle display).											
	Miles x 1000	15	30	45	60	75	90	105	120	135	150	
	Kilometers x 1000	24	48	72	96	120	144	168	192	216	240	
VEHICLE UNDERBODY												
NOTE: Remove all road wheels before inspecting brake components.												
Inspect brake pads for wear, calipers for leaks, and discs for condition	●	●	●	●	●	●	●	●	●	●	●	
Check adjustment of electronic parking brake	●	●	●	●	●	●	●	●	●	●	●	
Inspect tire pressures, condition, and tread depth	●	●	●	●	●	●	●	●	●	●	●	
Inspect exhaust system	●	●	●	●	●	●	●	●	●	●	●	
Inspect for fluid leaks	●	●	●	●	●	●	●	●	●	●	●	
Inspect condition of driveshafts, suspension, and steering boots/gaiters												
Inspect fuel, hydraulic and fluid pipes, hoses and unions												
Inspect electrical harnesses, routing and connections												
Lubricate wheel spigot bore with anti-seize compound; Install road wheels to opposite side of same axle (except unidirectional tires, which install on same side)												
Replace all flexible brake hoses: every 6 years												
Replace fuel filter: every 10 years												
Change transmission fluid and filter: every 10 years												
Change rear locking differential oil												
Change front and rear axle oil (non-locking differential): every 10 years												
Change transfer box oil; replace drain and fill plugs and washers												
Conduct road test; Select LOW range gears and drive the vehicle 3 – 4 vehicle lengths, then reselect HIGH range gears												
If fault lamps are illuminated, interrogate with IDS and report findings												
Check for any outstanding Recalls or Service Actions												
Endorse Service Record												