

NOTE: The maintenance intervals listed are for vehicles operating under normal driving, road, and climatic conditions. More frequent attention may be necessary if the vehicle is subject to routine stop & go driving, extreme temperatures, dusty conditions, off-road driving, or frequent trailer towing. Consult your Land Rover Retailer for more information.

		Maintenance Interval – whichever occurs first (based on expected vehicle display).											
		Miles x 1000	15	30	45	60	75	90	105	120	135	150	
SERVICE		Months	12	24	36	48	60	72	84	96	108	120	
		Kilometers x 1000	24	48	72	96	120	144	168	192	216	240	
VEHICLE INTERIOR		Change engine oil and replace filter	●	●	●	●	●	●	●	●	●	●	
		Reset the Service Interval Indicator	●	●	●	●	●	●	●	●	●	●	
		Reset engine oil level indicator	●	●	●	●	●	●	●	●	●	●	
		Check operation of all lights, warning indicators and horn	●	●	●	●	●	●	●	●	●	●	
		Check operation of front/rear wiper washer systems	●	●	●	●	●	●	●	●	●	●	
		Check condition and security of seats and seat belts	●	●	●	●	●	●	●	●	●	●	
		Replace climate controlled seat cushion motor filters (where fitted)	●	●	●	●	●	●	●	●	●	●	
VEHICLE EXTERIOR		Check condition of wiper blades	●	●	●	●	●	●	●	●	●	●	
		Check operation of all door checks, hood latch, and fuel flap: lubricate door checks	●	●	●	●	●	●	●	●	●	●	
		Lubricate all door edge seals	●	●	●	●	●	●	●	●	●	●	
ENGINE COMPARTMENT		Check battery condition; check / top up electrolyte level	●	●	●	●	●	●	●	●	●	●	
		Check / top up fluid levels (brake, power steering, windshield washer)	●	●	●	●	●	●	●	●	●	●	
		Check / top up coolant level; check specific gravity	●	●	●	●	●	●	●	●	●	●	
		Check condition of accessory drive belt(s) and, if fitted, supercharger drive belt	●	●	●	●	●	●	●	●	●	●	
		Replace pollen filter	●	●	●	●	●	●	●	●	●	●	
		Change brake fluid: every 3 years											
		Change engine coolant: every 10 years											
		Replace spark plugs											
		Replace air cleaner elements; naturally aspirated vehicles											

		Maintenance Interval – whichever occurs first (based on expected vehicle display).											
SERVICE	Miles x 1000	15	30	45	60	75	90	105	120	135	150		
	Months	12	24	36	48	60	72	84	96	108	120		
	Kilometers x 1000	24	48	72	96	120	144	168	192	216	240		
ENGINE COMPARTMENT (CONTINUED)													
Replace air cleaner elements; supercharged vehicles													
Replace accessory drive belt(s)													
Replace supercharger drive belt (supercharged vehicles)													
VEHICLE UNDERBODY													
NOTE: Remove all road wheels before inspecting brake components.													
Inspect brake pads for wear, calipers for leaks, and discs for condition													
Check adjustment of electronic parking brake													
Inspect tire pressures, condition, and tread depth													
Inspect exhaust system for leaks, security and damage													
Inspect for fluid leaks													
Inspect condition of drivestarts, suspension, and steering boots/gaiters													
Inspect fuel, hydraulic and fluid pipes, hoses and unions													
Inspect electrical harnesses, routing and connections													
Lubricate wheel spigot bore with anti-seize compound; install road wheels to opposite side of same axle (except uni-directional tires, which install on same side)													
Replace all flexible brake hoses: every 6 years													
Replace fuel filter: every 10 years													
Change transmission fluid and filter: every 10 years													
Change rear locking differential oil													
Change front and rear axle oil (non-locking differential): every 10 years													
Change transfer box oil; replace drain and fill plugs and washers													
Conduct road test; select LOW range gears and drive the vehicle 3 – 4 vehicle lengths, then reselect HIGH range gears													
If fault lamps are illuminated, interrogate with IDS and report findings													
Check for any outstanding Recalls or Service Actions													
Endorse Service Record													