

**NOTE:** The maintenance intervals listed are for vehicles operating under normal driving, road, and climatic conditions. More frequent attention may be necessary if the vehicle is subject to routine stop & go driving, extreme temperatures, dusty conditions, off-road driving, or frequent trailer towing. Consult your Land Rover Retailer for more information.

		Maintenance Interval – whichever occurs first (based on expected vehicle display).																				
SERVICE		Miles x 1000	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90	97.5	105	112.5	120	127.5	135	142.5	150
	Months	6	12	18	24	30	36	42	48	54	60	66	72	78	84	90	96	102	108	114	120	
	Kilometers x 1000	12	24	36	48	60	72	84	96	108	120	132	144	156	168	180	192	204	216	228	240	
Change engine oil and replace filter		●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	
<b>VEHICLE INTERIOR</b>																						
Reset the Service Interval Indicator		●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
Check operation of all lights, warning indicators and horn																						
Check operation of front/rear wiper/washer systems																						
Check condition and security of seats and seat belts																						
Replace pollen filter																						
<b>VEHICLE EXTERIOR</b>																						
Check condition of wiper blades																						
Check operation of all door checks, hood latch, and fuel flap; lubricate door checks																						
<b>ENGINE COMPARTMENT</b>																						
Check battery condition; check/ top up electrolyte level																						
Check / top up fluid levels (brake, power steering, windshield washer)																						
Check / top up coolant level; check specific gravity																						
Check condition of accessory drive belt(s)																						
Change brake fluid: <b>every 3 years</b>																						
Change engine coolant: <b>every 10 years</b>																						
Replace spark plugs																						
Replace air cleaner element																						
Replace accessory drive belt																						

		Maintenance Interval – whichever occurs first (based on expected vehicle display).																				
SERVICE	VEHICLE UNDERBODY	Miles x 1000	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90	97.5	105	112.5	120	127.5	135	142.5	150
		Months	6	12	18	24	30	36	42	48	54	60	66	72	78	84	90	96	102	108	114	120
		Kilometers x 1000	12	24	36	48	60	72	84	96	108	120	132	144	156	168	180	192	204	216	228	240
		Inspect brake pads for wear, calipers for leaks, and discs for condition	●																			
		Check operation of parking brake		●																		
		Inspect tire pressures, condition, and tread depth			●																	
		Inspect exhaust system				●																
		Inspect for fluid leaks					●															
		Inspect condition of driveshafts, suspension, and steering boots/gaiters						●														
		Inspect fuel, hydraulic and fluid pipes, hoses and unions							●													
		Inspect electrical harnesses, routing and connections								●												
		Lubricate wheel spigot bore with anti-seize compound; install road wheels								●												
		Replace all flexible brake hoses; every 6 years									●											
		Change transmission fluid and filter; every 10 years										●										
		Change rear differential oil; every 10 years											●									
		Change transfer box oil; every 10 years												●								
		Conduct road test												●								
		If fault lamps are illuminated, interrogate with IDS and report findings													●							
		Check for any outstanding Recalls or Service Actions														●						
		Endorse Service Record															●					