

NOTE: The maintenance intervals listed are for vehicles operating under normal driving, road, and climatic conditions. More frequent attention may be necessary if the vehicle is subject to routine stop & go driving, extreme temperatures, dusty conditions, off-road driving, or frequent trailer towing. Consult your Land Rover Retailer for more information.

		Maintenance Interval – whichever occurs first (based on expected vehicle display).																			
SERVICE		Miles x 1000		7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90	97.5	105	112.5	120	127.5	135
		Months		6	12	18	24	30	36	42	48	54	60	66	72	78	84	90	96	102	108
		Kilometers x 1000		12	24	36	48	60	72	84	96	108	120	132	144	156	168	180	192	204	216
Change engine oil and replace filter		•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
VEHICLE INTERIOR																					
Reset the Service Interval Indicator		•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
Check operation of all lights, warning indicators and horn			•		•		•		•		•		•		•		•		•		•
Check operation of front/rear wiper washer systems			•		•		•		•		•		•		•		•		•		•
Check condition and security of seats and seat belts					•		•		•		•		•		•		•		•		•
Replace pollen filter			•		•		•		•		•		•		•		•		•		•
VEHICLE EXTERIOR																					
Check condition of wiper blades			•		•		•		•		•		•		•		•		•		•
Check operation of all door checks, hood latch, and fuel flap; lubricate door checks			•		•		•		•		•		•		•		•		•		•
ENGINE COMPARTMENT																					
Check battery condition; check / top up electrolyte level			•		•		•		•		•		•		•		•		•		•
Check / top up fluid levels (brake, power steering, windshield washer)			•		•		•		•		•		•		•		•		•		•
Check / top up coolant level; check specific gravity			•		•		•		•		•		•		•		•		•		•
Check condition of accessory drive belt(s)					•				•				•				•				•
Change brake fluid: every 3 years								•							•						•
Change engine coolant: every 10 years																					
Replace spark plugs													•								
Replace air cleaner element					•		•		•		•		•		•		•		•		•
Replace accessory drive belt																	•				

		Maintenance Interval – whichever occurs first (based on expected vehicle display).																							
SERVICE	Miles x 1000	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90	97.5	105	112.5	120	127.5	135	142.5	150				
	Months	6	12	18	24	30	36	42	48	54	60	66	72	78	84	90	96	102	108	114	120				
	Kilometers x 1000	12	24	36	48	60	72	84	96	108	120	132	144	156	168	180	192	204	216	228	240				
VEHICLE UNDERBODY																									
NOTE: Remove all road wheels before inspecting brake components.																									
Inspect brake pads for wear, calipers for leaks, and discs for condition			●		●		●		●		●		●		●		●		●		●		●		
Check operation of parking brake			●		●		●		●		●		●		●		●		●		●		●		
Inspect tire pressures, condition, and tread depth			●		●		●		●		●		●		●		●		●		●		●		
Inspect exhaust system			●		●		●		●		●		●		●		●		●		●		●		
Inspect for fluid leaks			●		●		●		●		●		●		●		●		●		●		●		
Inspect condition of driveshafts, suspension, and steering boots/gaeters					●				●				●				●				●		●		
Inspect fuel, hydraulic and fluid pipes, hoses and unions					●				●				●				●				●		●		
Inspect electrical harnesses, routing and connections					●				●				●				●				●		●		
Lubricate wheel spigot bore with anti-seize compound; Install road wheels			●		●		●		●		●		●		●		●		●		●		●		
Replace all flexible brake hoses: every 6 years																	●								
Change transmission fluid and filter: every 10 years																									
Change rear differential oil: every 10 years																									
Change transfer box oil: every 10 years																									
Conduct road test			●		●		●		●		●		●		●		●		●		●		●		
If fault lamps are illuminated, interrogate with IDS and report findings			●		●		●		●		●		●		●		●		●		●		●		
Check for any outstanding Recalls or Service Actions			●		●		●		●		●		●		●		●		●		●		●		
Endorse Service Record			●		●		●		●		●		●		●		●		●		●		●		