


## TOUCH SCREEN OVERVIEW

**Note:** Physical controls are referred to as hard keys. Virtual buttons on the touch screen are referred to as soft keys.

Screen options will vary depending on vehicle specification and set-up.

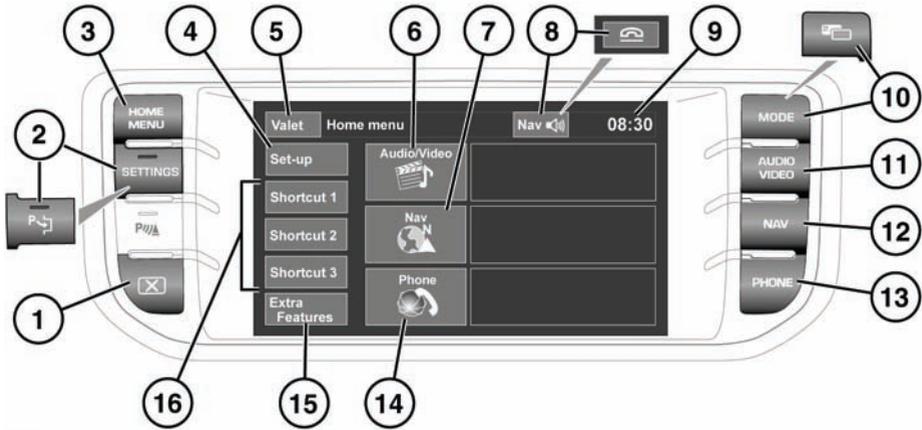

SL1987

1. Screen on/off. The first use after switching the ignition on will display the **Home Menu**. Subsequent switching on will display the last used screen or menu.
2. **SETTINGS**. Press for direct access to the settings menu. When Park Assist is specified, the icon is changed and the button will turn Park Assist on and off. The Settings menu is then accessed via the touch screen.
3. **HOME MENU**. Press for direct access to the **Home menu**. Content will depend upon vehicle specification and options selected.
4. Touch to select the **Set-up** menu.
5. Touch to select **Valet** mode.
6. Touch to select the **Audio/Video** menu. An overview of current audio/video information is displayed.
7. Touch to select the **On road Navigation** menu. Current set destination is displayed.
8. While navigation is operating, touch to repeat the last given navigation instruction. During a phone call, the icon is temporarily changed. Touch to end the call.
9. Time display. Touch to select time or date adjustment.
10. **MODE**. Press repeatedly to scroll through all audio/video sources. When Dual view is fitted, the button icon is changed.
11. **AUDIO VIDEO**. Press for direct access to the **Audio/Video** menu.

12. **NAVIGATION.** Press for direct access to the **Navigation** menu.
13. **PHONE.** Press for direct access to the **Telephone** menu.
14. Touch to select **Phone**.
15. **Extra features.** Touch to display list.
16. **Shortcut keys.** Use for personal shortcuts to any part of the system. Shortcuts can be made in the **Set-up** menu.

## USING THE TOUCH SCREEN

-  Always run the engine during prolonged use of the touch screen. Failure to do so may discharge the vehicle battery, preventing the engine from starting.
-  Avoid spilling or splashing liquids onto the touch screen.

### Switching on

- Switch on the ignition.
- Switch on the touch screen.  
The most recently used audio source controls will be displayed (e.g. Radio, CD etc.).
- Select **HOME MENU**.
- Select a source.

***Note:** Available sources will depend upon options selected at time of purchase.*

## TOUCH SCREEN DISPLAY ICONS

Some touch screen display icons are displayed on subsequent screens and may not all be displayed at the same time, e.g.



Back soft key: Touch to return to the previous screen displayed.

## POP-UPS

Some menus and control screens will appear as pop-ups, overlaying the current screen.

Warning and information pop-ups may also appear on the display. Take notice of any warnings and follow any on-screen instruction.

## HOME MENU

Press the hard key at any time to move from the current display to the Home menu.

## SET-UP

Select **Set-up** from the **Home menu**.

Set-up is divided into categories:

- Screen
- System
- Voice

## SCREEN

- **Screensaver:** Select to change the screensaver. Touch an option to select.
- **Screen animations:** Select to turn animated transitions between screens on or off.

***Note:** While screen animations are on, system response time will be slower than normal.*

- **Time out home:** Sub menu selection screens can be set to revert to the **Home menu** after a pre determined length of time.
- **Theme:** Changes appearance of the touch screen soft keys.

## SYSTEM

- **Button feedback:** Soft key confirmation tone on or off.
- **Clock adjust:** Select 12 or 24 hour clock. Set current time. Select **Date** to change the date, or to alter the date format. Select **Set**, to store new settings.  
***Note:** The clock can also be adjusted from the touch screen time display.*
- **Home menu shortcuts:** Select up to three items from the displayed list to appear as shortcuts on the **Home Menu**. Select **Clear** to deselect highlighted items.

- **Language:** Select the required language. Select **Male** or **Female** voice. Touch **Change** to select alternatives for Voice and text displays. Follow the on-screen instructions to confirm.

***Note:** Some languages are not yet available for both System display text and Voice control. In this event, it will be necessary to select a separate language for Voice control.*

- **Volume presets:** Adjust volume for the available systems (announcements, parking aid, phone, voice etc.).

## VOICE

- **Command list:** View the categories and the acceptable voice commands. Select an **Information** button to view alternative function commands.
- **Voicetags:** View the categories. Select a category to manage the voicetags for the chosen system. See **140, VOICETAGS**.
- **Operating guide:** View brief Voice system instructions. Select **Voice tutorial** for more detailed instructions (cancel via the displayed pop-up or by pressing and holding the voice button).
- **Preferences:** Select to alter the following settings:
  - **Voice profile:** The voice system can be trained to have a greater recognition of a particular voice or accent. The default setting is **Standard**. To build a voice profile for either **User 1** or **2**, it is necessary to complete a training program first.  
To complete the training for the first time, select either **User 1** or **User 2** and follow the on-screen and audible instructions.
  - **Voice feedback:** Select **On** or **Off**.

- **Feedback volume:** Adjust using the +/- buttons. It is not possible to reduce the volume to zero.
- **Voice training:** Select to access the voice system training program, designed to enable the system to better recognise the vocal characteristics of a user.  
Select **User 1** or **User 2** and follow the on screen and audible instructions. See **140, VOICE TRAINING**.

The training session can be cancelled at any time by touching the on-screen pop-up or by pressing and holding the Voice button on the steering wheel. See **139, OPERATION**.

## VALET

### Selection:

Valet mode allows the vehicle to be driven and locked by a parking attendant, without giving access to the luggage compartment. Valet mode also prevents operation of the touch screen, to prevent access to telephone numbers or navigation addresses.

From the **Home menu**, select **Valet**:

Enter a memorable four digit Personal identification Number (PIN). On completion, touch the **OK** soft key.

If you wish to cancel the PIN, select **Delete**.

If the PIN is cancelled, or incorrectly entered, you will be prompted to enter the PIN again.

**Valet mode activated** is displayed to indicate that the PIN has been accepted.

The luggage compartment is now securely locked in Valet mode and the Valet mode On screen is displayed.

### Deselection:

When you re-enter the vehicle, touch the Valet button to view the Valet mode screen.

Enter your four digit PIN and touch the **OK** button.

**Valet mode deactivated** is displayed to indicate that your PIN has been accepted.

- The luggage compartment will return to the previously set security requirement.
- The touch screen will be enabled.

**Note:** *If the PIN is forgotten, Valet mode can only be deactivated by your Dealer/Authorised Repairer.*

## EXTRA FEATURES

There are more features available than can be displayed at one time. This menu allows the selected features to be displayed, for example:

- **Ambient lighting:** While the headlamps are turned on, select this feature to turn ambient lighting on or off. Adjust the lighting level to suit. Adjusting to the minimum level will turn ambient lighting off. Selecting Auto allows the vehicle to control when and how ambient lighting is used.

Extra features are displayed in alphabetical order. Use the forward or back soft keys to move to the next screen.

## TOUCH SCREEN CARE



Do not use abrasive cleaners on the touch screen. For approved cleaning products, contact your Dealer/Authorised Repairer.

The touch screen and inner bezel must be kept clean to maintain optimum performance. Clean finger marks with a soft cloth and Land Rover approved cleaning agent. Contact your dealer for details.

Avoid exposing the screen to direct sunlight for long periods.

## Touch screen

When operating touch screen soft keys, use only one finger. Using more than one finger at a time may cause false inputs.