


## DVD/VIDEO MEDIA CONTROLS

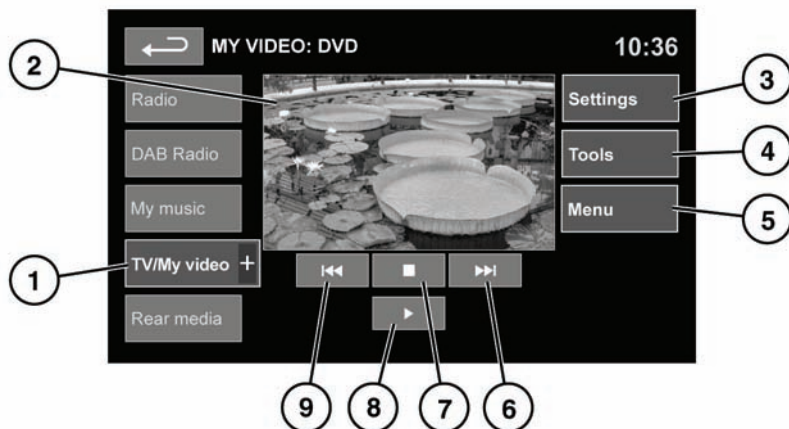

SL1891

See **104, TOUCH SCREEN OVERVIEW.**

**1. TV/My video.** TV band/video input selection:

- Touch the **+** icon to view and select DVD or other forms of video media (**CD/USB**), provided the relevant media is present. The selected option will be displayed.

**Note:** After 5 seconds without use, the TV/My video menu will close.

**2. Preview screen for video media information:** Touch to select full screen mode.

Briefly touch the screen again to view the controls at any time.

To return to preview mode, touch and hold the full screen view.

**3. Settings.** Depending on the video media specification, there are 2 sub-menus within settings: **Options** and **VOD** (Video On Demand).

**VOD** allows playing of DivX VOD content from a video media. The eight digit registration code will be displayed when the VOD soft key is touched.

The player must also be registered with DivX. See DivX information **114, LICENSING.**

**4. Tools.** The following options can be selected:

- **GOTO.**  
The GOTO menu allows you to access specific parts of the video, by **Chapter** or **Title number**.
- Subtitles.
- Angle.
- Audio.

**5. Menu.** Select to view the video media menu. On some screens this may be replaced by a **Browse** soft key.

6. Seek up: Select to view the next DVD chapter or next chapter of the video media
7. Select to pre-stop playback. A second touch will stop and reset the DVD.
8. Select to start/restart play.
9. Seek down: Select to view the previous DVD chapter or previous chapter of the video media.

For information on the CD/DVD loading slot and the eject button, and the use of the audio/video controls on the audio unit and steering wheel, see **111, AUDIO/VIDEO CONTROLS**.

## DivX VIDEO ON DEMAND

DivX content is encrypted to ensure copyright protection. The content will play only on registered playback devices. See DivX information **114, LICENSING**.

When the registration process is complete, a DVD with DivX VOD content can be played.

After the first playing of DivX VOD content, a new registration code will be displayed. Do NOT use this code when purchasing DivX VOD content. Use only the original registration code.

If a DVD with DivX VOD content has a different registration code to your unique code, it will not be possible to play it. **Authorisation Error** will be displayed on screen.

## FULL SCREEN VIEW CONTROLS

When full screen mode is selected, the seek controls operate in the same manner as they do in preview mode.

**Display format:** Use the relevant soft key to select the **4:3**, **16:9** or **Zoom** option.

**Digital TV display format:** The picture can be displayed in either the correct format as transmitted by the broadcaster (either **4:3** or **16:9**) or select **Zoom** to magnify the picture.

## TV/MY VIDEO MEDIA INHIBIT WITH VEHICLE MOVING

When the vehicle is moving the video picture will automatically be inhibited. The touch screen will display the **TV/My video** screen and the relevant safety message will be displayed. If Dual view is fitted, a prompt for the passenger to activate dual view is displayed. See **132, DUAL VIEW TOUCH SCREEN**.