


DVD/VIDEO MEDIA CONTROLS

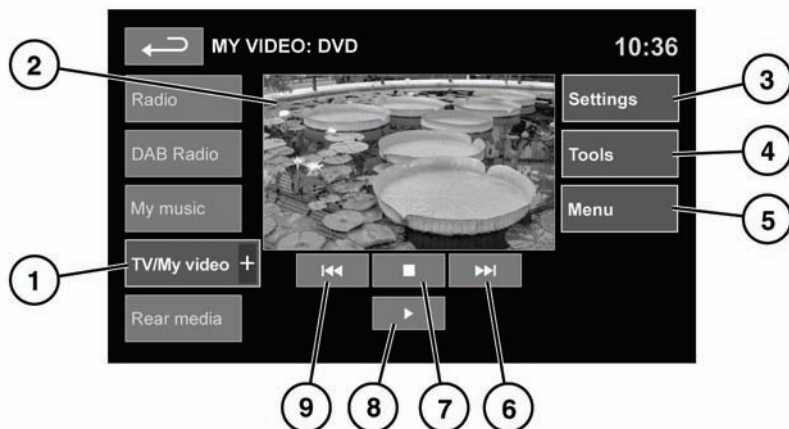

SL1891

See **104, TOUCH SCREEN OVERVIEW.**

1. TV/My video. TV band/video input selection:

- Touch the **+** icon to view and select DVD or other forms of video media (**CD/USB**), provided the relevant media is present. The selected option will be displayed.

Note: After 5 seconds without use, the TV/My video menu will close.

2. Preview screen for video media information: Touch to select full screen mode.

Briefly touch the screen again to view the controls at any time.

To return to preview mode, touch and hold the full screen view.

3. Settings. Depending on the video media specification, there are 2 sub-menus within settings: **Options** and **VOD** (Video On Demand).

VOD allows playing of DivX VOD content from a video media. The eight digit registration code will be displayed when the VOD soft key is touched.

The player must also be registered with DivX. See DivX information **114, LICENSING.**

4. Tools. The following options can be selected:

- **GOTO.**
The GOTO menu allows you to access specific parts of the video, by **Chapter** or **Title number**.
- Subtitles.
- Angle.
- Audio.

5. Menu. Select to view the video media menu. On some screens this may be replaced by a **Browse** soft key.

6. Seek up: Select to view the next DVD chapter or next chapter of the video media
7. Select to pre-stop playback. A second touch will stop and reset the DVD.
8. Select to start/restart play.
9. Seek down: Select to view the previous DVD chapter or previous chapter of the video media.

For information on the CD/DVD loading slot and the eject button, and the use of the audio/video controls on the audio unit and steering wheel, see **111, AUDIO/VIDEO CONTROLS**.

DivX VIDEO ON DEMAND

DivX content is encrypted to ensure copyright protection. The content will play only on registered playback devices. See DivX information **114, LICENSING**.

When the registration process is complete, a DVD with DivX VOD content can be played.

After the first playing of DivX VOD content, a new registration code will be displayed. Do NOT use this code when purchasing DivX VOD content. Use only the original registration code.

If a DVD with DivX VOD content has a different registration code to your unique code, it will not be possible to play it. **Authorisation Error** will be displayed on screen.

FULL SCREEN VIEW CONTROLS

When full screen mode is selected, the seek controls operate in the same manner as they do in preview mode.

Display format: Use the relevant soft key to select the **4:3**, **16:9** or **Zoom** option.

Digital TV display format: The picture can be displayed in either the correct format as transmitted by the broadcaster (either **4:3** or **16:9**) or select **Zoom** to magnify the picture.

TV/MY VIDEO MEDIA INHIBIT WITH VEHICLE MOVING

When the vehicle is moving the video picture will automatically be inhibited. The touch screen will display the **TV/My video** screen and the relevant safety message will be displayed. If Dual view is fitted, a prompt for the passenger to activate dual view is displayed. See **132, DUAL VIEW TOUCH SCREEN**.