

## WARNING LAMPS

**RED** warning lamps are for primary warnings. A primary warning must be investigated immediately.

Seek qualified assistance before continuing.

**AMBER** and **YELLOW** warning lamps are for secondary warnings. Some indicate that a vehicle system is in operation, others indicate that the driver must take action and then seek qualified assistance as soon as possible

**GREEN** and **BLUE** lamps within the instrument panel indicate system status, such as green for direction indicators, when in operation and blue for high beam.

## BULB CHECK

A warning lamp bulb check is initiated when the ignition system is switched on and lasts for 3 seconds (except for the airbag warning lamp which will remain on for 6 seconds). If any warning lamp remains on after this period, investigate the cause before driving.

Some warning lamps have associated messages displayed on the message centre.

**Note:** *Not all warning lamps are included in the check (e.g. high beam headlamps and direction indicators).*

## CRITICAL WARNING MESSAGE (RED)



Illuminates when a critical warning message is available in the message centre.

## LOW OIL PRESSURE (RED)



Illuminates briefly when the ignition is switched on and extinguishes when the engine is started. If the lamp remains on, flashes or illuminates while driving, stop the vehicle as soon as safety permits and then switch off the engine immediately. Check the oil level. Seek qualified assistance before starting the engine.

## BRAKE SYSTEMS (RED)



Illuminates briefly when the ignition is switched on. If the lamp illuminates while driving, suspect low brake fluid level or a fault with the Electronic Brake Distribution (EBD) system. Stop the vehicle as soon as safety permits. If the message **CHECK BRAKE FLUID** is displayed, check the brake fluid level and top-up if necessary. If the lamp remains illuminated, seek qualified assistance before continuing.

## PARKING BRAKE (RED)



Illuminates when the parking brake is applied. If the lamp illuminates and **Caution! Park Brake Applied** is displayed, the vehicle is moving with the parking brake applied. Release the parking brake or stop the vehicle. If the lamp flashes, there is a fault and the parking brake cannot be applied. Seek qualified assistance.

## BATTERY CHARGE (RED)



Illuminates briefly when the ignition is switched on and extinguishes when the engine is started. If the lamp remains on or illuminates while driving, there is a fault with the battery charging system.

Seek qualified assistance urgently.

## SEAT BELT (RED)



Illuminates when the ignition is on and an occupied front seat belt is unbuckled. The lamp will extinguish after sixty seconds or when the relevant seat belt(s) is buckled. In some markets a warning chime will sound while the lamp is illuminated.

**Note:** *In some markets, the lamp will remain illuminated until the seat belts of occupied front seats are fastened correctly.*

## ENGINE MALFUNCTION (AMBER)



Illuminates briefly when the ignition is switched on. If the lamp flashes or illuminates at any other time, there is a fault with the engine.

Avoid high speeds and seek qualified assistance urgently.

## GENERAL WARNING/INFORMATION MESSAGE (AMBER)



Illuminates when a non-critical warning message or an information message is available in the message centre.

## BRAKE SYSTEMS (AMBER)



Illuminates briefly when the ignition is switched on. If the lamp illuminates after starting the engine or while driving, suspect worn brake pads or a fault with the Emergency Brake Assist (EBA) system. The vehicle can still be driven with care, but avoid heavy brake application. Seek qualified assistance urgently.

## DYNAMIC STABILITY CONTROL (AMBER)



Illuminates briefly when the ignition is switched on and extinguishes when the engine is started. If the lamp flashes while driving, the DSC system is active. If the lamp illuminates continuously while driving, there is a fault with the DSC system. The vehicle can still be driven, but the DSC system will not activate under wheel spin or slide conditions.

Seek qualified assistance as soon as possible.

## DYNAMIC STABILITY CONTROL OFF (AMBER)



Illuminates when DSC is switched off.

Deactivating DSC also reduces the level of Electronic Traction Control intervention and may lead to an increase in wheel spin.

## ANTI-LOCK BRAKING SYSTEM (AMBER)



Illuminates briefly when the ignition is switched on. If the lamp remains on or illuminates while driving, there is a fault with the ABS system. Drive with care, avoiding heavy brake application.

Seek qualified assistance urgently.

## AIRBAG SRS (AMBER)



Illuminates briefly when the ignition is switched on and extinguishes when the engine is started. If the lamp illuminates while driving, there is a fault with the airbag system.

Seek qualified assistance as soon as possible.

## ADAPTIVE FRONT LIGHTING (AMBER)



Illuminates when there is a fault. The headlamps will still operate, but without this feature operating correctly.

Seek qualified assistance as soon as possible.

## REAR FOG LAMPS (AMBER)



Illuminates when the rear fog lamps are switched on.

## DIESEL GLOW PLUG (AMBER)



Illuminates when the ignition is switched on to indicate that the glow plugs are active. Wait until the lamp extinguishes before starting the engine.

## EXTERNAL TEMPERATURE (AMBER)



Illuminates when the external temperature is low enough that ice may be present on the road.

## TYRE PRESSURE MONITORING (YELLOW)



Illuminates briefly when the ignition is switched on. If the lamp remains on or illuminates while driving, one or more tyres are significantly under-inflated. Stop the vehicle as soon as possible, check the tyre pressures and inflate to the recommended pressure.

## HILL DESCENT CONTROL (GREEN)



Illuminates when HDC is selected and HDC operating conditions are met. If the lamp flashes, HDC has been selected, but the operating conditions are not being met (e.g. vehicle speed is too high) or HDC fade-out is occurring.

## CRUISE CONTROL ACTIVE (GREEN)



Illuminates when cruise control is active.

## SIDE LAMPS (GREEN)



Illuminates when the side lights are switched on.

## FRONT FOG LAMPS (GREEN)



Illuminates when the front fog lamps are switched on.

## DIRECTION INDICATORS (GREEN)



The appropriate warning lamp will flash when the direction indicators are operated.

## TRAILER DIRECTION INDICATORS (GREEN)



Illuminates briefly when the ignition is switched on and extinguishes when the engine is started.

If a trailer is attached, the warning lamp will flash in conjunction with the direction indicator warning lamp. If the lamp fails to flash, the direction indicator bulb on the trailer may be faulty.

## AUTO HIGH BEAM (GREEN)



Illuminates when the auto high beam feature is enabled.

## HIGH BEAM (BLUE)



Illuminates when the high beam headlamps are switched on or flashed.

## ECO ACTIVE (GREEN)



Illuminates when the Stop/Start system is activated. The engine will automatically switch off when the vehicle comes to a stop, neutral is selected and the clutch is fully released.