

## STEERING COLUMN

**⚠ Never adjust the steering column while the vehicle is in motion.**

1. Move the lever fully down to unlock the column. Move the lever fully up to re-lock the column.
2. Move the steering column up, down, in or out, to the desired position.
3. Press to switch on the steering wheel heating. Temperature is thermostatically controlled.

