


## LABEL LOCATIONS



Warning labels attached to your vehicle bearing this symbol mean: Do not touch or adjust components until you have read the relevant instructions in the handbook.



Labels showing this symbol indicate that the ignition system utilises very high voltages. Do not touch any ignition components while the starter switch is turned on.

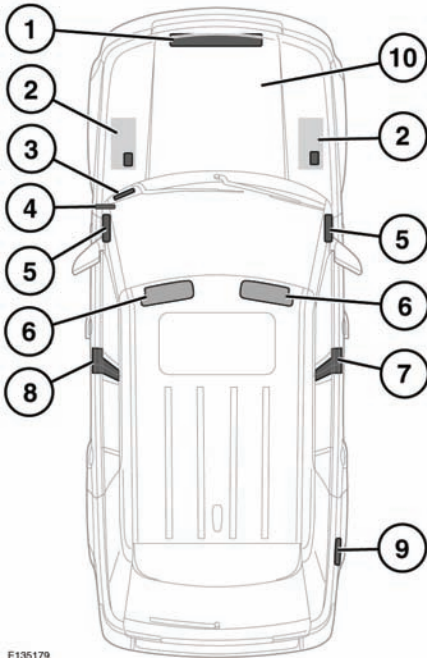

E135179

1. Bonnet locking platform - Air conditioning label.
2. Top of the battery - Battery warning symbols.

3. Top left of fascia - Vehicle Identification Number (VIN) label (China only).
4. Base of left-hand A pillar - VIN label.
5. End of the fascia (passenger side) - Passenger air bag label.
6. Sun visor - Air bag label, vehicle handling label.
7. Base of the right-hand B pillar - Tyre pressure label, air bag warning label.  
Right-hand B pillar - VIN label (right-hand drive vehicles).
8. Left-hand B pillar - Air bag warning label, VIN label (left-hand drive vehicles except China).
9. Inside the fuel filler flap - Fuel label.
10. Right side of engine block or camshaft cover - Engine number.

It is important that you are familiar with these subjects to ensure that your vehicle and its features are used safely.

**Note:** If you need to communicate with a Dealer/Authorised Repairer, you may be asked to quote the VIN number.

## VEHICLE BUILD DATE PLATE (Australia only)

This is the calendar month and year in which the body and power train assemblies were conjoined and the vehicle was driven from the production line.

The vehicle built date is shown on the tyre pressure label attached to the right-hand B pillar.

