

## Parking aids

With the ignition on, the front and rear parking aids are activated whenever reverse gear is selected. Parking sensors remain active when forward gear is subsequently selected until the vehicle exceeds 10mph (16km/h).

If an obstruction is detected, an intermittent tone will sound. Moving closer to the obstruction will increase the tone frequency.

### Manual control

Press the fascia switch to deactivate the parking aids.

The switch will illuminate. Press again to activate.



### Rear camera

When reverse gear is selected the camera provides a rear view image with overlaid guidelines to assist when vehicle reversing.

To view the parking aid display instead or to cancel camera display at any time, briefly touch the display.

1. Solid line - projected reversing path.
2. Broken line - full width of vehicle.
3. Shade - area required for tailgate access.
4. Parking sensors activated.
5. User options. Touch one of the mini views to select overlay options.



6. Hitch assist. Designed to aid the process of guiding the vehicle to the trailer tow hitch. A single hitch line is displayed as the reversing guideline. As the vehicle closes to within 23.5 inches (0.6m) of the tow hitch, an automated zoom is operated.

## Terrain response *See page 2, item 14.*

When the vehicle is started, Terrain Response will normally start in its **General** program.

Program selection is via the center console switches.



Use the switches to select a program. Icons will illuminate as selected. The Driver information center will also display an icon.

We recommend that a special program be engaged whenever driving conditions are difficult and then moved back to the **General** program once those conditions are no longer present.



**General** - Use for typical road surfaces.



**Dynamic** - Associated with driving style rather than with a type of terrain. The dynamic selection allows the vehicle's full on-road potential to be explored. Handling and driving characteristics are optimised for normal road surfaces.



**Grass-Gravel-Snow** - Suitable for surfaces which are firm but have a slippery surface, e.g. grass, snow, loose gravel, pebbles or icy conditions.



**Mud-Ruts** - Suitable for soft, muddy, uneven or rutted ground.




**Sand** - Suitable for soft, predominantly dry, yielding sandy ground, e.g. sand dunes and deserts. If the sand is damp or wet, the Mud-Ruts program may be more beneficial.

### Wading

Select the program most suitable for the surface beneath the water. DO NOT exceed 19.8 inches (500mm) water depth.

## Touch screen

The touch screen requires only light touches. Excess pressure could result in damage.

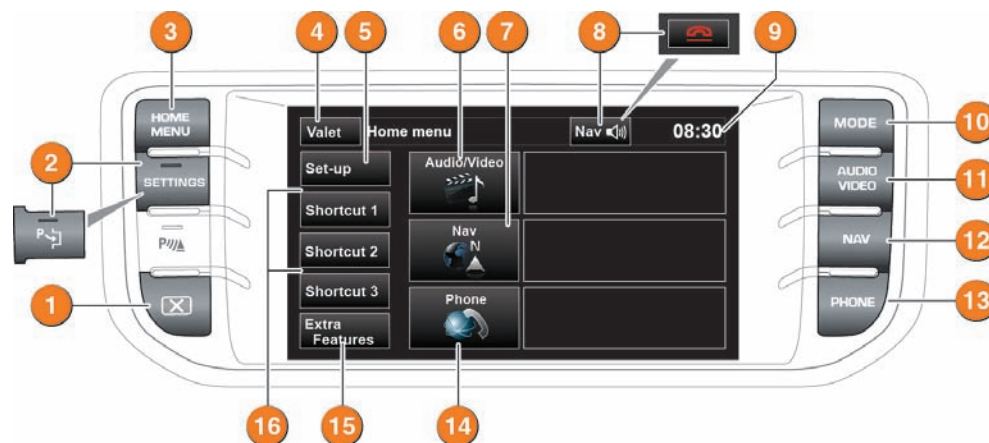

1. Screen on/off. Each time the ignition is turned on and this button is pressed, the **Home menu** will be displayed. If the ignition remains on and the touch screen is turned off and later turned on again, the last used screen or menu will be displayed.
2. **SETTINGS**. Direct access to the Settings menu. When Park Assist is specified, this icon is changed and the button will turn Park Assist on and off. The Settings menu is then accessed via the touch screen.
3. Direct access to the **HOME MENU**. Content will depend upon vehicle specification and options selected.
4. **Valet mode**. Locks the luggage areas and prevents access to the touch screen when allowing others, e.g., a parking attendant, to take charge of your vehicle. You will have to enter a four digit code of your choice. When you re-enter the vehicle the code will be used to unlock this security feature.
5. **Set-up** menu.
6. **Audio/Video** menu. An overview of current audio/video information is displayed.
7. On road **Navigation** menu. Current set destination is displayed.
8. Touch to repeat the last navigation voice instruction. During a phone call, the icon is temporarily changed to indicate a call is in progress. Touch to end the call.
9. Touch to select time or date adjustment.

10. **MODE**. Press repeatedly to scroll through all audio/video sources.
11. Direct access to the **Audio/Video** menu.
12. Direct access to the **Navigation** menu.
13. Direct access to the **Phone** menu.
14. Touch to select **Phone**.
15. **Extra features**. There are more features available than can be displayed at one time. Touch to display the feature list then use the forward and back soft keys to progress through it.
16. **Shortcut keys**. Use for personal shortcuts to any part of the system. Shortcuts can be made in the **Set-up** menu. Items in the **Extra features** list can be set as a shortcut. The shortcut softkeys can be changed at any time.