


Driver controls

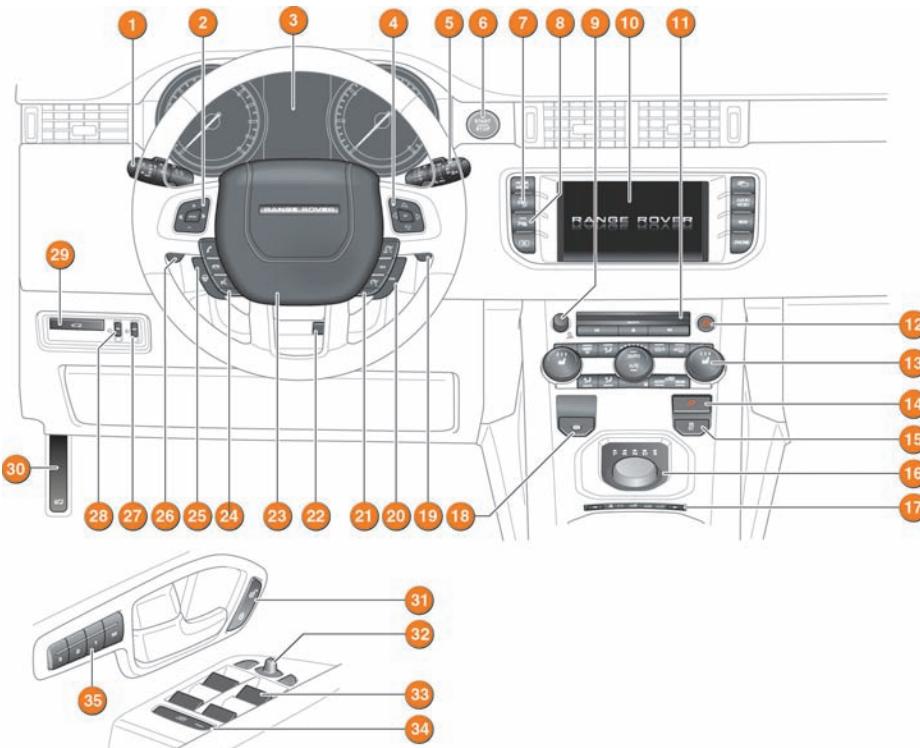

1. Headlamps, turn signals and trip computer
2. Audio system control
3. Instrument panel, warning lamps and Driver information center
4. Settings menu control
5. Wipers and washers
6. START/STOP
7. SETTINGS or Park assist.
8. Parking aid on/off
9. Audio on/off and volume
10. Touch screen
11. Audio system
12. Hazard warning
13. Heater/air conditioning
14. Hill Descent Control
15. DSC (Dynamic Stability Control)
16. Rotary drive selector
17. Terrain response
18. Electric parking brake
19. Up shift gear paddle
20. Cruise control cancel
21. Cruise control switches
22. Steering column adjuster
23. Horn
24. Telephone and voice recognition controls
25. Heated steering wheel
26. Down shift gear paddle
27. Headlamp levelling control
28. Interior lamps dimming control
29. Tailgate release/open
30. Hood release
31. Central locking switches
32. Mirror adjuster/power folding
33. Window controls
34. Rear windows isolation
35. Driving position memory switches

Vehicle access

Smart Key

 Press once to switch the headlamps on. Press again to switch off.

 Press to unlock and release the tailgate. A powered tailgate will open to the set height. If the alarm is armed, it will be inhibited while the tailgate is open.

 Press and hold for three seconds to activate/cancel the panic alarm.

Unlocking mode alternatives

 Single-point entry. Press once to unlock only the driver's door. Press twice to unlock all doors and luggage area.

Multi-point entry. Press once to unlock all doors and luggage area.

To change the mode - with the vehicle unlocked, press and hold the lock and unlock buttons simultaneously for three seconds. The hazard warning lamps will flash to confirm the change.

Keyless entry


The Smart Key needs only to be on the driver's person while using a door handle. It does not need to be exposed.

Operating note

The Smart Key could be shielded and undetected if placed in a metallic container or behind a device with an LCD screen, such as a smart phone, laptop (including laptop bag), games console etc. Keep the Smart Key clear of such devices when attempting Keyless entry or Keyless starting.

Emergency key release

Slide the side section up to remove. Remove the keyblade and unfold it. Use the blade to prise off the front left-hand door lock cover.

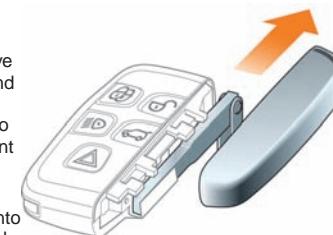

Insert the key into the exposed lock and turn towards the front of the vehicle, then release it to unlock.

If the security system was previously armed with the Smart Key, when the door is unlocked the alarm will sound. To disarm the alarm, press the unlock button on the Smart Key or press the START/STOP button with the Smart Key inside the vehicle.



Operating note

If the Smart Key fails to work, hold it under the steering column in the indicated position. Start the engine as normal. The Smart Key can now be removed.

Powered and manual tailgates See page 2, item 29.


1. To release the tailgate:-

- Press the external release switch or, use the Smart Key or, press the internal release switch.

A powered tailgate will continue to open to the set height.

To close the powered tailgate

2. Press and release the tailgate button.

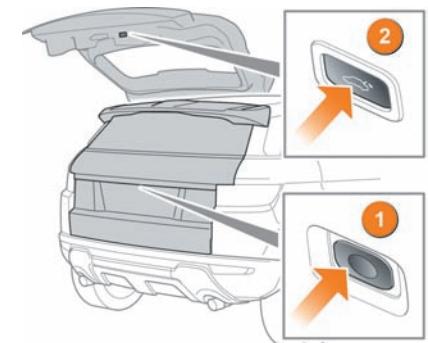

Operating note

When the powered tailgate closes onto the locking latch, it will continue to 'soft close' to the fully closed position.