

# Gas station information


## Fuel filling

### Fuel filler flap opening

The filler flap is located on the right side of the vehicle. Press the flap to open.

Twist the cap counter-clockwise to undo.


After refuelling, tighten the cap until it clicks three times.

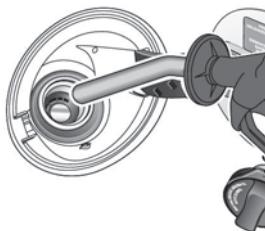

### Fuel specification

The correct fuel specification for your vehicle is shown on the inside of the fuel filler flap.

## Tire pressure label

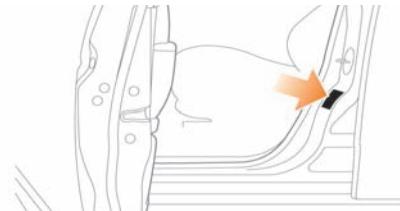

Tire pressures are shown on a label attached to the pillar behind the driver's door.

## Tire pressures

Pressures are given in Bar and PSI and relate to all load conditions.

Wheel size	Front tire	Rear tire
17 inch	2.4/35	2.1/30
18 inch	2.4/35	2.1/30
19 inch	2.5/36	2.2/32
20 inch	2.7/39	2.4/35

In high or low ambient temperatures, tire pressure compensation may be required. Refer to TIRE PRESSURE COMPENSATION in the Owner's Handbook.

Traction devices or snow chains can be fitted ONLY to 17 inch wheels at the front of the vehicle. TPMS wheels and tires substituted with 17 inch wheels and tires will require pressure compensation. Refer to TPMS INFLATION PRESSURE COMPENSATION in the Owner's Handbook.

### Incorrect fuelling

- DO NOT use E85 fuels (85% ethanol content). Equipment necessary for the use of fuels containing more than 10% ethanol is not fitted to this vehicle. If E85 fuels are used serious engine and fuel system damage will occur.

### Filling with the wrong fuel

If the vehicle is filled with the wrong type of fuel:

- DO NOT start the engine!
- Call for qualified assistance!

### Hood release

The hood release is located in the driver's side footwell.