


Touch screen navigation

The screen requires only a light touch to operate the function. Excess pressure could result in damage.

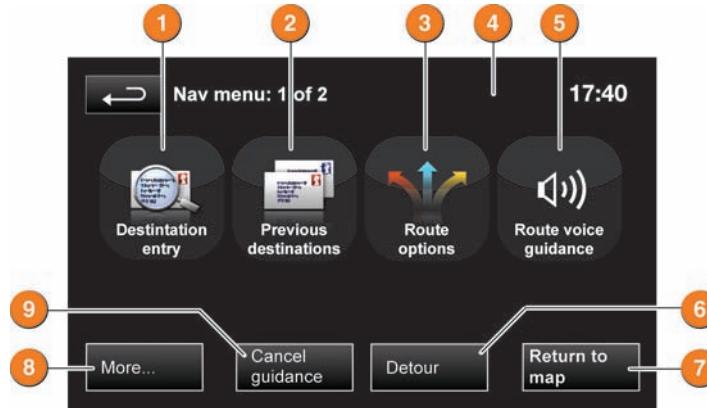

Note: To access navigation press either the NAV hardkey on the surround or touch the Navigation icon on the touch screen.

1. Use to enter a new destination. Provides a choice of options when entering a destination.
2. Displays previous destinations entered. Previous destinations can be selected as a new destination.
3. Allows selection of various options for the route.
4. When a destination is set, the Range Rover logo in this position is replaced by a soft key which enables the last voice instruction to be repeated.
5. Softkey is highlighted while voice guidance is enabled. Touch to turn voice guidance off.
6. Calculates a detour from the current route.
7. Advances to the main map screen.
8. Move to other Navigation menu. There are two navigation menu screens. The second map screen features soft keys for **Stored locations**, **TMC**, **Map POI** and **Navigation set-up**. Use the **More** soft key to toggle between them.
9. Cancel current route guidance.

On the second screen, **Stored locations** is used to manage the stored data. **TMC** (Traffic Message Channel) will provide data about road conditions and any events that may affect the current route. **Map POI** will turn on or off the POI (Point of interest) map icons and **Navigation set-up** is for setting personal preferences within the navigation system.

Selecting navigation

When navigation is selected after the ignition is turned on, a caution screen is displayed. Touch **Agree**.

Note: At the first time of accessing the caution screen, set the required language.

Bluetooth® phones

Compatible Bluetooth® phones can communicate with the vehicle's inbuilt telephone system.

Bluetooth® phone compatibility

For the latest list of compatible phones and their software, refer to www.landrover.com. Select **OWNERS** then **Bluetooth®**.

Connection must be made with ignition on or engine running.

Use the following procedure in conjunction with your Bluetooth® phone manufacturer's instructions.

Pairing and connecting using the cell phone

Note: The process of pairing and connecting a phone to the vehicle will vary depending on the type of cell phone used.

1. Switch the ignition on and ensure that the touch screen is active.
2. From the **Home menu**, select **Phone**.
3. A menu will appear. If no phone is connected, select **Search new**, otherwise select **Change phone** and then select **Search new**.
4. Select **Device to vehicle** option.
5. Using the cell phone, search for Bluetooth® devices. On some phones, this is referred to as new paired device. See your phone's operating instructions for further information.
6. When the vehicle's Bluetooth® system is discovered, begin the pairing process and follow the on-screen instructions.
7. When requested, enter a PIN of your choice into the cell phone and vehicle system.
8. Once your phone is paired it may automatically connect to the vehicle system. If not, use the device list shown on the touch screen or use the cell phone.

Note: Some cell phones require the Bluetooth® pairing to be set as 'authorised' or 'trusted' in order to automatically connect. Please refer to your phone's operating instructions for further information.

Downloading phonebook entries

When a cell phone with phonebook download capability is paired and docked, its phonebook directory can be automatically downloaded to the vehicle system.

See **PHONEBOOK** in the Owner's Handbook for more information.

Calls via the touch screen



With a paired and active cell phone press the **PHONE** button on the touch screen surround.

1. Select **Digit Dial**, **Phonebook** or **Last 10**. With **Digit Dial** selected, use the keypad to enter the number. With **Phonebook** selected, chose a number from the downloaded phonebook. **Last 10** displays the previous 10 calls. Choose one to dial.
2. Touch the connect icon to make the call. The icon will change to a connected call icon. Touch the icon to end a call.

Calls via the steering wheel controls

See page 2, item 24.

