

## WARNING LAMPS

**RED** warning lamps are for primary warnings. A primary warning must be investigated immediately.

Seek qualified assistance before continuing.

**AMBER** and **YELLOW** warning lamps are for secondary warnings. Some indicate that a vehicle system is in operation, others indicate that the driver must take action and then seek qualified assistance as soon as possible

**GREEN** and **BLUE** lamps within the instrument panel indicate system status, such as green for direction indicators, when in operation and blue for high beam.

## BULB CHECK

A warning lamp bulb check is initiated when the ignition system is switched on and lasts for 3 seconds (except for the air bag warning lamp which will remain on for 6 seconds). If any warning lamp remains on after this period, investigate the cause before driving.

Some warning lamps have associated messages displayed on the message center.

**Note:** *Not all warning lamps are included in the check (e.g. high beam headlamps and turn signals).*

## CRITICAL WARNING MESSAGE (RED)



Illuminates when a critical warning message is available in the message center.

## LOW OIL PRESSURE (RED)



Illuminates briefly when the ignition is switched on and extinguishes when the engine is started. If the lamp remains on, flashes or illuminates while driving, stop the vehicle as soon as safety permits and then switch off the engine immediately. Check the oil level.

Seek qualified assistance before starting the engine.

## BRAKE SYSTEMS (RED)



USA.



Canada.

Illuminates briefly when the ignition is switched on. If the lamp illuminates while driving, suspect low brake fluid level or a fault with the Electronic Brake Distribution (EBD) system. Stop the vehicle as soon as safety permits.

If the message **CHECK BRAKE FLUID** is displayed, check the brake fluid level and top-up if necessary.

If the lamp remains illuminated after topping up, seek qualified assistance before continuing.

## PARKING BRAKE (RED or YELLOW)



USA.



Canada.

## Warning lamps

Illuminates when the parking brake is correctly applied. If the lamp flashes red or illuminates yellow, a fault with the Electronic Parking Brake has been detected. Do not rely on the parking brake to secure the vehicle when parked.

Seek qualified assistance urgently.

### BATTERY CHARGE (RED)



Illuminates briefly when the ignition is switched on and extinguishes when the engine is started. If the lamp remains on or illuminates while driving, there is a fault with the battery charging system.

Seek qualified assistance urgently.

### SEAT BELT (RED)



Illuminates when the ignition is on and an occupied front seat belt is unbuckled. The lamp will extinguish after sixty seconds or when the relevant seat belt(s) is buckled. In some markets a warning chime will sound while the lamp is illuminated.

**Note:** In some markets, the lamp will remain illuminated until the seat belts of occupied front seats are fastened correctly.

### ENGINE MALFUNCTION (AMBER)



Illuminates briefly when the ignition is switched on. If the lamp flashes or illuminates at any other time, there is a fault with the engine.

Avoid high speeds and seek qualified assistance urgently.

### GENERAL WARNING/INFORMATION MESSAGE (AMBER)



Illuminates when a non-critical warning message or an information message is available in the message center.

### BRAKE SYSTEMS (AMBER)



USA.



Canada.

Illuminates briefly when the ignition is switched on. If the lamp illuminates after starting the engine or while driving, suspect worn brake pads or a fault with the Emergency Brake Assist (EBA) system. The vehicle can still be driven with care, but avoid heavy brake application.

Seek qualified assistance urgently.

### DYNAMIC STABILITY CONTROL (AMBER)



Illuminates briefly when the ignition is switched on and extinguishes when the engine is started. If the lamp flashes while driving, the DSC system is active. If the lamp illuminates continuously while driving, there is a fault with the DSC system. The vehicle can still be driven, but the DSC system will not activate under wheel spin or slide conditions.

Seek qualified assistance as soon as possible.

## DYNAMIC STABILITY CONTROL OFF (AMBER)



Illuminates when DSC is switched off.

Deactivating DSC also reduces the level of Electronic Traction Control intervention and may lead to an increase in wheel spin.

## ANTI-LOCK BRAKING SYSTEM (AMBER)



Illuminates briefly when the ignition is switched on. If the lamp remains on or illuminates while

driving, there is a fault with the ABS system. Drive with care, avoiding heavy brake application.

Seek qualified assistance urgently.

## AIR BAG SRS (AMBER)



Illuminates briefly when the ignition is switched on and extinguishes when the engine is started. If the lamp illuminates while driving, there is a fault with the air bag system.

Seek qualified assistance as soon as possible.

## ADAPTIVE FRONT LIGHTING (AMBER)



Illuminates when there is a fault. The headlamps will still operate, but without this feature operating

correctly.

Seek qualified assistance as soon as possible.

## REAR FOG LAMPS (AMBER)



Illuminates when the rear fog lamps are switched on.

## EXTERNAL TEMPERATURE (AMBER)



Illuminates when the external temperature is low enough that ice may be present on the road.

## TIRE PRESSURE MONITORING (YELLOW)



Illuminates briefly when the ignition is switched on. If the lamp remains on or illuminates while driving, one or more tires are significantly under-inflated. Stop the vehicle as soon as possible, check the tire pressures and inflate to the recommended pressure.

## CRUISE CONTROL ACTIVE (GREEN)



Illuminates when cruise control is active.

## HILL DESCENT CONTROL (GREEN)



Illuminates when HDC is selected and HDC operating conditions are met. If the lamp flashes, HDC has been selected, but the operating conditions are not being met (e.g. vehicle speed is too high) or HDC fade-out is occurring.

## SIDE LAMPS (GREEN)



Illuminates when the side lights are switched on.

## FRONT FOG LAMPS (GREEN)



Illuminates when the front fog lamps are switched on.

## TURN SIGNALS (GREEN)



The appropriate warning lamp will flash when the turn signals are operated.

# Warning lamps

## TRAILER TURN SIGNALS (GREEN)



Illuminates briefly when the ignition is switched on and extinguishes when the engine is started.

If a trailer is attached, the warning lamp will flash in conjunction with the turn signal warning lamp. If the lamp fails to flash, the signal bulb on the trailer may be faulty.

## AUTO HIGH BEAM (GREEN)



Illuminates when the auto high beam feature is enabled.

## HIGH BEAM (BLUE)



Illuminates when the high beam headlamps are switched on or flashed.