


## CONTROLS

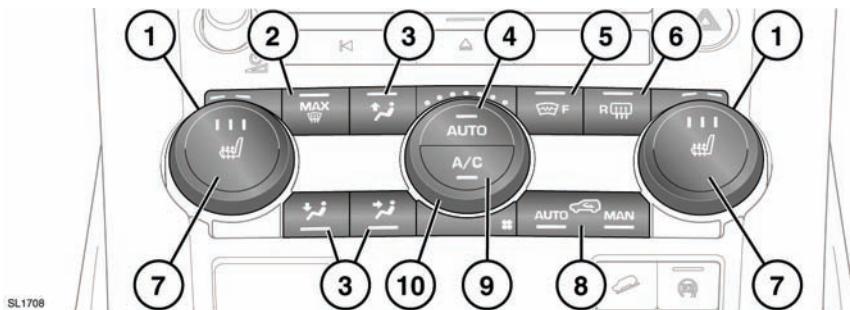

1. Temperature controls. For individual driver/passenger settings.
2. Maximum defrost program.
3. Air distribution.
- Note:** More than one setting may be selected at a time to achieve the desired distribution.
4. AUTO mode. For fully automatic operation.
5. Heated windshield.
6. Heated rear screen.
7. Front seat heaters.
8. Recirculation. Press repeatedly to cycle through options.
9. Air conditioning.
10. Blower speed control. In manual mode current speed selection is indicated by illuminated LED's.

**Note:** The indicator lights in the switches will illuminate when the function is selected.

**Note:** In low temperatures it is advisable to close the center face level vent and direct air flow from the outer face level vents towards the side windows. This will help to keep the windows clear of ice.

**AUTO MODE**

AUTO mode should be used as the normal operating mode. The air conditioning, heating and ventilation controls automatically provide an optimum environment at the selected temperature.

To resume fully automatic operation at any time, press the **AUTO** button.

**TEMPERATURE CONTROLS**

Rotate to set a temperature.

**Note:** The maximum possible temperature differential between the driver and passenger settings is 7°F (4°C).

**MAXIMUM DEFROST**

Press to remove frost or heavy fogging from the windshield. The system will adjust the front blower output for maximum clearing. In addition the screen heaters will be activated.

Press again to switch off defrost mode. The screen heaters will remain on.

**AIR DISTRIBUTION CONTROL**

An LED will illuminate in the selected switches.

## HEATED SCREENS

Press to operate the required screen heater.

The screen heater(s) will operate for a predetermined timed period before automatically switching off.

### NOTICE

*Do not attach labels to the rear screen. Do not scrape or use abrasive materials to clean the inside of the screen.*

## FRONT SEAT HEATERS

Press the relevant button to operate the required seat heater at high level. Three indicators will illuminate.

Press a second time to heat the seat at a medium level. Two indicators will illuminate.

Press a third time to heat the seat at the lowest level. One indicator will illuminate.

Press a fourth time to switch off.

**Note:** *Seat heaters consume a great amount of battery power. They will operate only when the engine is running.*

## RECIRCULATION

- Press briefly to activate timed recirculation. The button indicator illuminates when recirculation is on.
- Press and hold the button to activate latched recirculation. The button indicator will flash and then illuminate constantly.
- To cancel recirculation, press the button briefly.

**Note:** *Prolonged use at low temperatures may cause the windows to fog.*

## RECIRCULATION WITH POLLUTION AND HUMIDITY SENSING

- Press the AUTO button briefly to activate timed recirculation. The AUTO LED will illuminate. The system automatically selects fresh and recirculated air dependent on pollution and cabin humidity.
- Press and hold the AUTO button to activate latched recirculation. The AUTO LED will flash and then illuminate constantly.
- Press the MAN button briefly. The MAN LED will illuminate. Recirculation mode is selected permanently.
- To cancel recirculation, press a button briefly.

## WATER DEPOSITS

The climate control system removes moisture from the air and deposits the excess water beneath the vehicle. Puddles may form but this is normal and is no cause for concern.

## HEATED MIRRORS

The rear view door mirror heaters operate automatically according to the external temperature and windshield wiper operation.