


## SUPERVISOR SCREEN CONTROLS

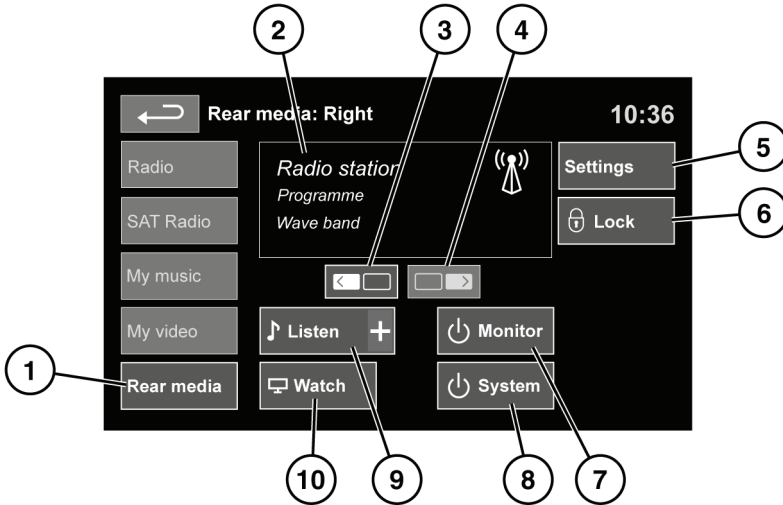

SL1946

1. Select rear media.
2. Current rear media display.
3. Left screen select.
4. Right screen select.
5. Settings screen.
6. Remote control lock.
7. Turns off the selected screen.
8. Turns off the selected system.
9. Audio source select.
10. Video source select.

### **⚠ WARNING**

**Do not adjust the touch screen controls, or allow the system to distract the driver, while the vehicle is moving. Driver distraction can lead to accidents, causing serious injury or death.**

## **INTRODUCTION TO REAR SEAT ENTERTAINMENT (RSE)**

The RSE system consists of two screens. Separate programs can be viewed or heard by rear seat occupants. Supervisory control is made from the front seats. Audio and video programs for each or both sides of the RSE, can be selected from the Supervisor screen. The remote control can be locked out.

While the Supervisor screen is displayed, the remote control will be locked out.

### **NOTICE**

*Always run the engine during prolonged use of the RSE system, otherwise, the vehicle battery may become discharged.*

### **NOTICE**


*Children should be supervised at all times and view/listen to only media suitable for their age group.*

### SETTINGS

The rear media settings screen allows **Limousine Mode** to be turned on or off.

When **Limousine Mode** is selected, the rear passengers can control the total cabin audio system via the remote control.

## TOUCH SCREEN REMOTE CONTROL

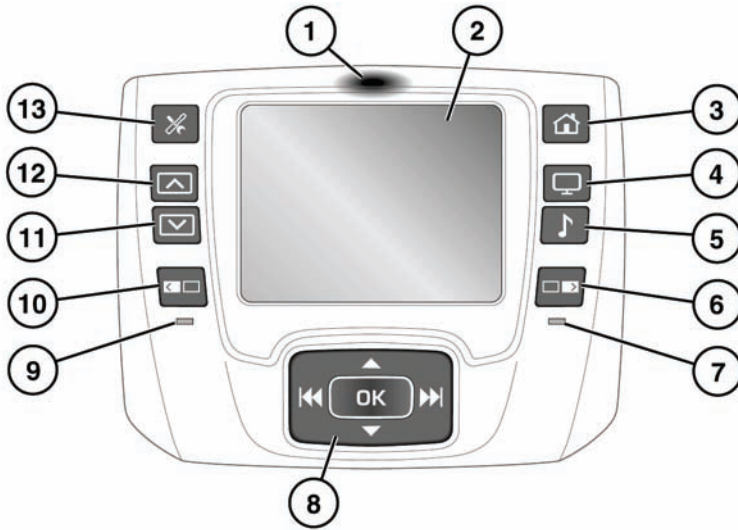

SL1871

1. Press here to undock remote control.

### **NOTICE**

*Do not press the touch screen to undock the remote control.*

- 2. Touch screen.
- 3. Home screen.
- 4. Video source select.
- 5. Audio source select.
- 6. Right screen select.
- 7. Right screen tell-tale. (illuminates when right screen has been selected).
- 8. Cursor movement and option select buttons.
- 9. Left screen tell-tale. (illuminates when left screen has been selected).
- 10. Left screen select.
- 11. Screen brightness - decrease.
- 12. Screen brightness - increase.

13. RSE settings.


## USING THE SYSTEM

The system is operated using the remote control.

To release the remote from the docked position, press at the top of the remote (1) to unlatch it.

### **NOTICE**

*Do not attempt to pull the remote control out of its docked position.*

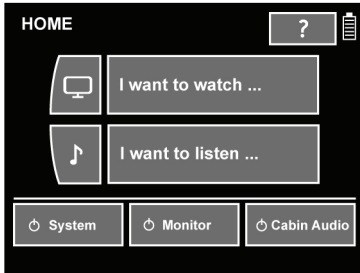

SL1872

Using the appropriate button (6) or (10) or on screen soft key (right or left) to select the required screen, will allow options to be set and selected.

**Note:** A help screen is available from each screen/menu. To view the help screen for guidance on the available functions and options, touch the question mark (?) icon.



SL1873

## HEADPHONES

The volume control for each set of headphones is adjusted on the headphones.

Press the channel selector button to cycle through available channels. Select the channel appropriate for the required screen.

**Note:** These headphones are not intended for use by the driver or outside the vehicle.

**Note:** The earpiece exteriors must remain exposed to the infra red transmitter in the overhead console. Any barrier will prevent them from working correctly.

When not in use, the headphones should be turned off.

## ⚠ WARNING

**Always store headphones safely when not in use. Do not leave them unsecured as they may cause injury in the event of sudden braking or impact.**

## REMOTE CONTROL BATTERY

The remote control battery is automatically recharged while the remote is docked. The battery is not serviceable and should not be changed or removed by the user.