

Steering wheel

STEERING COLUMN

⚠WARNING

Never adjust the steering column while the vehicle is in motion. Doing so may cause a loss of control, potentially resulting in an accident.

1. Move the lever fully down to unlock the column. Move the lever fully up to re-lock the column.
2. Move the steering column up, down, in or out, to the desired position.
3. Press to switch on the steering wheel heating. Temperature is thermostatically controlled.

