
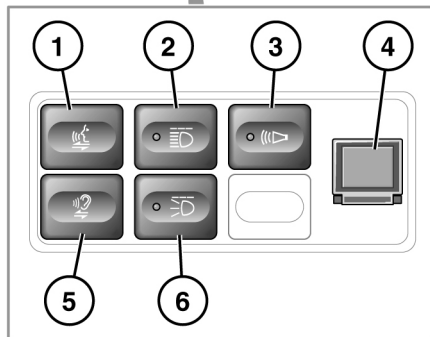


## SWITCH PANEL

Depending on the options specified, the vehicle may be fitted with a switch panel adjacent to the gear selector.

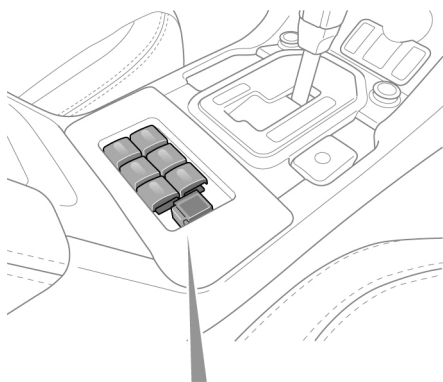


SL1906

1. Intercom - push to talk.
2. Alternating flashing headlights.
3. Siren.
4. Fire suppressant system.
5. Intercom - push to listen.
6. Covert lighting.

## FIRE SUPPRESSANT SYSTEM

If an under bonnet fire is sensed, the system (if fitted) will operate automatically.

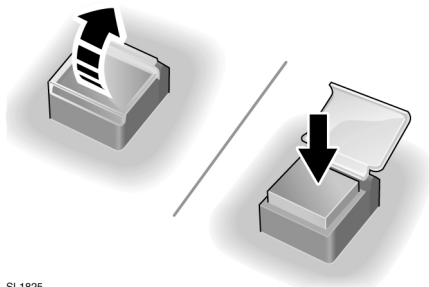

SL1825

The system can also be operated manually. Lift up the cover and press the button.

**Note:** The fire suppressant system electrical circuit continuity and battery condition, must be checked weekly by the vehicle user. Refer to the Maintenance section of this supplement.

**Note:** If the fire suppressant system has been operated, the vehicle must be returned to a Dealer/Authorised Repairer for repair.

## ALTERNATING FLASHING HEADLIGHTS



Press to operate.

Press again to turn off.

The flashing headlamps operate independently of the main vehicle lighting. When switched on, the headlamps will continue to flash regardless of the lighting master switch position.

# Armoured options

## COVERT LIGHTING



The covert lamps are mounted in the radiator grill.

Press to turn on the lamps.

Press again to turn off.

## SIREN



Press to arm the siren.

The siren is then operated by pressing the steering wheel horn switches. A further press of the horn switches toggles the tone of the siren. Two pushes of the horn switches in quick succession silences the siren.

The siren remains armed until the siren button is pressed again to disarm it.

## INTERCOM

The intercom system allows communication between the vehicle interior and exterior while the vehicle windows are closed.

The interior microphone is located in the roof console, adjacent to the interior light.

The exterior microphone is located in the driver's side B/C post.

To operate the intercom:



With the starter switch turned on or the engine running, press to listen.



Press to talk to the vehicle exterior.

**Note:** To maintain a two way conversation, press and hold the listen button and press the talk button when required.