


Rear seat entertainment

CONTROLS (FRONT TOUCH SCREEN)

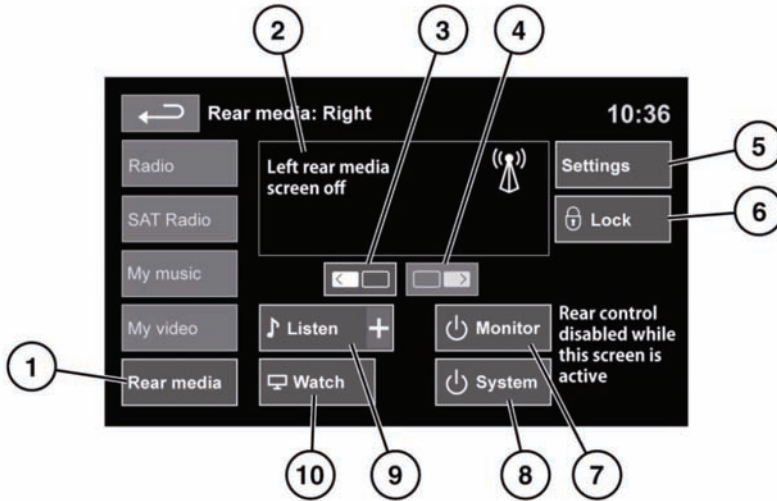

E136666

⚠ WARNING

Do not adjust the touch screen controls, or allow the system to distract the driver, while the vehicle is moving. Driver distraction can lead to accidents, causing serious injury or death.

1. Select rear media.
2. Current rear media display.
3. Left screen select.
4. Right screen select.
5. Settings screen.
6. Remote control lock.
7. Turns the selected screen on and off.
8. Turns the selected system on and off.
9. Audio source select.
10. Video source select.

REAR MEDIA CONTROL FROM THE TOUCH SCREEN


When the main rear media control screen is displayed on the touch screen, the rear media remote control will be locked out. No part of the rear media system will operate until it is turned on via the touch screen.

REAR MEDIA SETTINGS

The rear media settings screen allows **Limousine Mode** to be turned on or off.

When **Limousine Mode** is selected, the rear passengers can control the total cabin audio system via the remote control.

REMOTE CONTROL

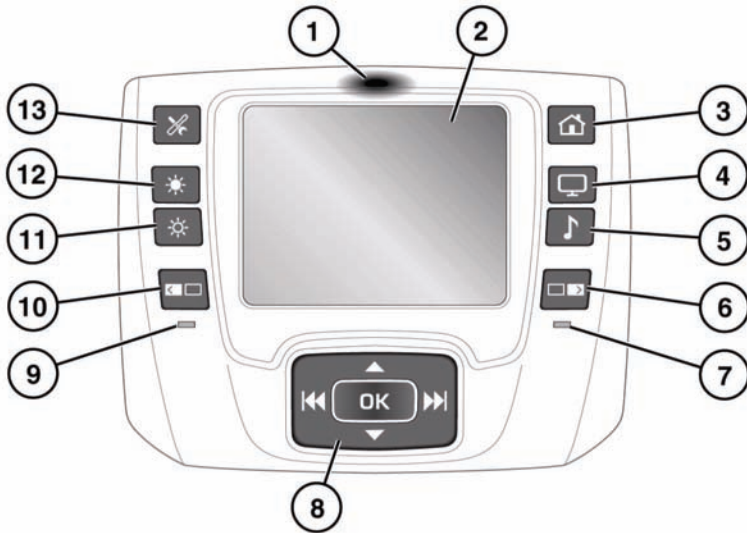

E132561

1. Press to undock remote control.

NOTICE

Do not press the touch screen to undock the remote control.

2. Touch screen.
3. Home screen.
4. Video source.
5. Audio source.
6. Right screen select.
7. Right screen tell-tale. Illuminates when right screen has been selected.
8. Cursor movement and option select buttons.
9. Left screen tell-tale. Illuminates when left screen has been selected.
10. Left screen select.
11. Touch screen brightness decrease.
12. Touch screen brightness increase.
13. Touch screen settings.

USING RSE

The system is operated using the remote control.

To release the remote from the docked position, press at the top of the remote to unlatch it.

NOTICE

Do not attempt to pull the remote control out of its docked position.

When the system is activated the remote control touch screen becomes active.

Rear seat entertainment



E135928

Using the appropriate button (**6** or **10**) or on screen soft key (right or left) to select the required screen, will allow options to be set and selected.

Note: A help screen is available from each screen/menu. To view the help screen for guidance on the available functions and options, touch the question mark (?) icon.



E132563

HEADPHONES

The volume control for each set of headphones is adjusted on the headphones.

Press the channel selector button to cycle through available channels. Select the channel appropriate for the required screen.

Note: These headphones are not intended for use by the driver or outside the vehicle.

Note: The earpiece exteriors must remain exposed to the infra red transmitter in the overhead console. Any barrier will prevent them from working correctly.

When not in use, the headphones should be turned off.

⚠ WARNING

Always store headphones safely when not in use. Do not leave them unsecured as they may cause injury in the event of sudden braking or impact.

REMOTE CONTROL BATTERY

The remote control battery is automatically recharged while the remote is docked. The battery is not serviceable and should not be changed or removed by the user.