

STABILITY CONTROL WARNING LAMPS



The DSC warning lamp in the instrument pack illuminates briefly when the ignition is turned on.

If the warning lamp flashes rapidly during driving, the system is active.

A fault with the DSC system is indicated by the DSC warning lamp illuminating and an associated warning message, or the DSC warning lamp flashing continuously when DSC has not been disabled. The vehicle can still be driven, but without DSC assistance. Seek qualified assistance as soon as possible.

SWITCHING DSC OFF

⚠ WARNING

Disabling the DSC may adversely affect vehicle stability and braking which in turn can lead to loss of control and increased braking distance, resulting in a rollover or crash.

In some driving conditions it may be appropriate to disable DSC to improve traction. These conditions include:

- Rocking the vehicle out of a hollow or deep rut.
- Pulling away in deep snow, or a loose surface.
- Driving through deep sand or mud.



E135631

To disable DSC, press and briefly hold the DSC OFF switch on the fascia (the DSC off warning lamp will illuminate continuously). Deactivating DSC also reduces the level of Traction control intervention and may lead to an increase in wheel spin.

SWITCHING DSC ON

DSC is re-enabled by one of the following:

- Press and briefly hold the DSC OFF switch.
- Start the engine.
- Select a new Terrain response special program.

ROLL STABILITY CONTROL (RSC)

⚠ WARNING

No electronic system can remove the need for safe driving practice. RSC can help to maintain control of the vehicle. It cannot regain control of the vehicle if it has been lost, or overcome driver errors. Always drive with due consideration for prevailing road and weather conditions.

RSC is an automatic feature that works in conjunction with DSC to try and prevent vehicle rollover.