


CLIMATE CONTROL

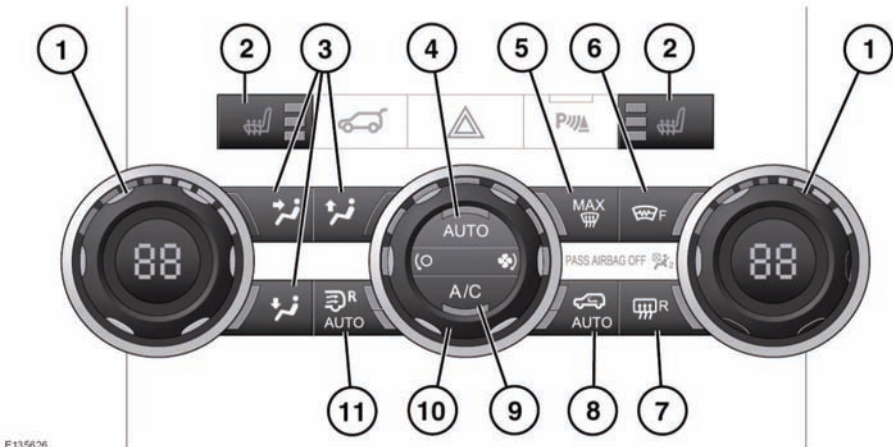

E135626

1. Temperature controls.
2. Seat heaters: Press once to turn on high, twice to turn on low, and a third time to turn off.
3. Air distribution buttons: Press to select the desired distribution setting. More than one setting may be selected at a time to achieve the desired distribution.
4. Auto mode.
5. Maximum defrost mode: Press to remove frost or heavy misting from the front screen. The system will automatically adjust the blower output for maximum clearing, in addition the front and rear screen heaters will be activated. Press again to switch off maximum defrost mode. The screen heaters will remain on.
6. Heated front windshield.
7. Heated rear screen.
8. Air recirculation control
9. Air conditioning on/off: With air conditioning off, the system operates in economy mode, improving fuel economy.

Note: Using the system without air conditioning for long periods can cause the windows to mist.

10. Blower control: Rotate to adjust blower speed.

Rotate fully anticlockwise to turn the climate control system off.

11. Rear environment.

Note: The indicator lights in the switches will illuminate when the function is selected.

Note: In low temperatures, it is advisable to close the center face level vent and direct air flow from the outer face level vents towards the side windows. This will help to keep the windows clear of ice.

Heating and ventilation

AUTOMATIC CLIMATE CONTROL

Press **AUTO** to select automatic operation.

The system will adjust the heat output, blower speed, air intake and airflow distribution to maintain the selected temperature(s) and reduce misting without further adjustments.

The air distribution and blower controls may be operated independently to override Auto mode. If you do this, the indicator lamp on the AUTO switch will go out. Press **AUTO** again to return to automatic operation.

Note: *The system will not achieve a temperature differential from left to right of more than 7°F (4°C).*

RECIRCULATION



When selected, the air is recirculated inside the vehicle. This helps to maintain a high or low temperature, and is useful for preventing fumes entering the vehicle.

Note: *The windows can mist if recirculation is used for long periods.*

AIR QUALITY SENSOR



Press once to activate air recirculation. Press again to activate automatic air recirculation.

In automatic mode, air recirculation is regulated to achieve optimum air conditioning performance.

Press a third time to switch off.

Note: *The windows can mist if recirculation is used for long periods.*

HEATED WINDSHIELDS



Heated windshield.



Heated rear glass.

Press button to operate the required screen heater. The screen heater(s) will operate for a predetermined timed period before automatically switching off.

The screen heaters will be automatically switched on if defrost mode is activated or if the external air temperature is low.

NOTICE

Do not attach labels to the rear glass. Do not scrape or use abrasive materials to clean the inside of the screen.