


## VIDEO MEDIA PLAYER CONTROLS

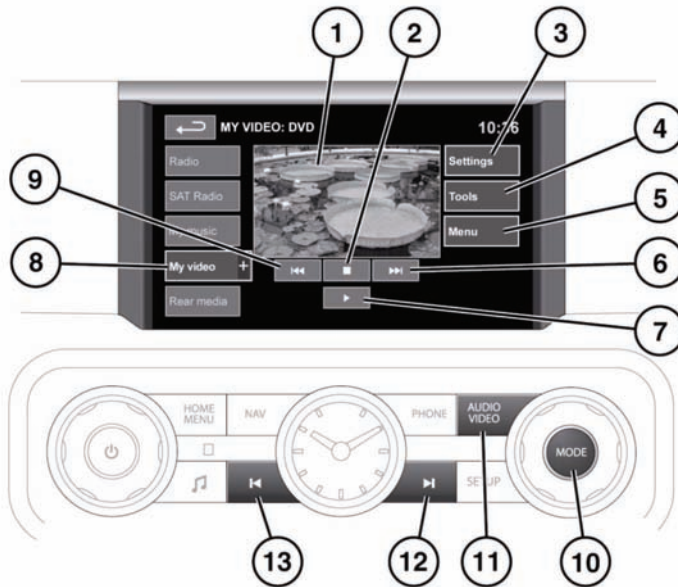

E138665

### **⚠ WARNING**

**Do not adjust the touch screen controls, or allow the system to distract the driver, while the vehicle is moving. Driver distraction can lead to accidents, causing serious injury or death.**

1. Preview screen for video media information: Touch to select full screen mode.  
Briefly touch the screen again to view the controls at any time.  
To return to preview mode, touch and hold the full screen view.
2. Select to pre-stop playback. A second touch will stop and reset the DVD.

3. **Settings:** Depending on the video media specification, there are 2 sub-menus within settings: **Options** and **VOD** (Video On Demand).

**VOD** allows playing of DivX VOD content from a video media. The eight digit registration code will be displayed when the VOD soft key is touched.

The player must also be registered with DivX. See **107, LICENSING**.

4. **Tools:** The following options can be selected:
  - GOTO: The GOTO menu allows you to access specific parts of the video, by **Chapter** or **Title number**.
  - Subtitles.
  - Angle.
  - Audio.

- 5. Menu:** Select to view the Video media menu. On some screens this may be replaced by a **Browse** soft key.
- 6. Seek up:** Select to view the next DVD chapter or previous chapter of the video media.
- 7.** Select to start/restart play.
- 8. My video:** Video input selection. Touch the + icon to view and select DVD or other forms of video media (**CD/USB**), provided the relevant media is present. The selected option will be displayed.  
***Note:** After 5 seconds without use, the My video menu will close.*
- 9. Seek down:** Select to view the previous DVD chapter or previous chapter of the video media.
- 10. MODE button:** Press to view alternative audio sources, rotate to select a source.
- 11. AUDIO VIDEO button:** Press to access the main DVD menu.
- 12.** Press to forward search.
- 13.** Press to backward search.

For information on the CD/DVD loading slot and the eject button, and the use of the audio/video controls on the audio unit and steering wheel, see **106, AUDIO/VIDEO CONTROLS**.

## LOADING DVDs

### **NOTICE**

*Do not force the disc into the slot.*

### **NOTICE**

*Do not use irregular shaped DVDs and DVDs with a scratch protection film or self-adhesive labels attached.*

### **NOTICE**

*Recordable (DVD-R or DVD+R) discs may not function correctly.*

### **NOTICE**

*Dual format, dual-sided discs (DVD Plus, CD-DVD format) are thicker than normal CDs and consequently playback cannot be guaranteed, and jamming may occur.*

It is recommended that only high quality 12 cm circular discs are used.

To locate the DVD load slot and the eject button, see **106, AUDIO/VIDEO CONTROLS**.

## VIDEO MEDIA INHIBIT WITH VEHICLE MOVING

When the vehicle is moving the video picture will automatically be inhibited. The touch screen will display the **TV/My video** screen and the relevant safety message will be displayed.

## FULL SCREEN VIEW

The video media menu displays a small preview image of the video. Touch the preview image to select full screen mode. The video media controls and the playback status information are displayed for 5 seconds before disappearing.

Touch the screen again to view the controls and status information at any time.

To return to preview mode, touch and hold the full screen view.

## FULL SCREEN VIEW CONTROLS

The seek controls operate in the same manner as they do in preview mode.

Use the relevant soft key to select the **4:3**, **16:9** or **Zoom** option.