


## FRONT CLIMATE CONTROL

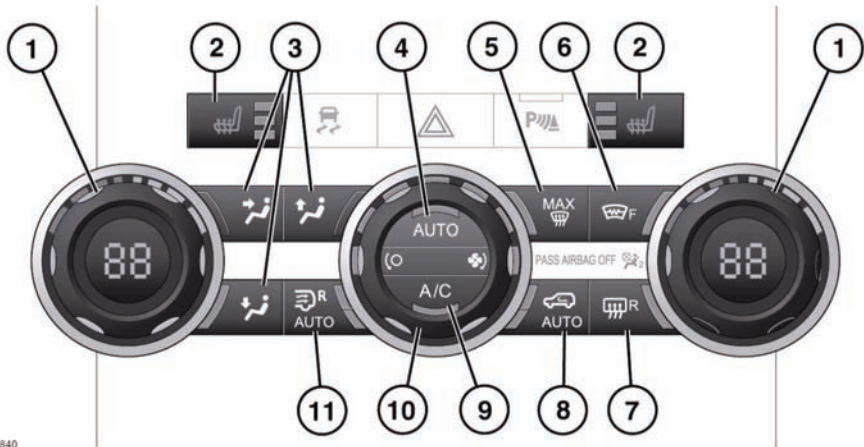

E134840

1. Temperature controls.
2. Seat heaters: Press once to turn on high, twice to turn on low, and a third time to turn off.
3. Air distribution buttons.
  - Windshield and side window vents.
  - Face level vents.
  - Foot level vents.

**Note:** More than one setting may be selected at a time to achieve the desired distribution.
4. Auto mode.
5. Maximum defrost mode.
6. Heated front windshield.
7. Heated rear glass.
8. Air recirculation control
9. Air conditioning on/off: With air conditioning off, the system operates in economy mode, improving fuel economy.
 

**Note:** Using the system without air conditioning for long periods can cause the windows to mist.
10. Blower control: Rotate to adjust blower speed.
 

Rotate fully counter-clockwise to turn the climate control system off.
11. Rear environment.
  - Press once to control the rear heating and air conditioning using the front controls only. The lower amber lamp is illuminated.
  - Press a second time to allow the rear passengers to have manual control. The upper amber light is illuminated. See **66, REAR CLIMATE CONTROL.**
  - Press a third time to switch off.

**Note:** The indicator lights in the switches will illuminate when the function is selected.

**Note:** In low temperatures, it is advisable to close the center face level vent and direct air flow from the outer face level vents towards the side windows. This will help to keep the windows clear of ice.

## AUTOMATIC CLIMATE CONTROL

Press **AUTO** to select automatic operation.

The system will adjust the heat output, blower speed, air intake and airflow distribution to maintain the selected temperature(s) and reduce misting without further adjustments.

The air distribution and blower controls may be operated independently to override Auto mode. If you do this, the indicator lamp on the AUTO switch will go out. Press **AUTO** again to return to automatic operation.

**Note:** The system will not achieve a temperature differential from left to right of more than 7°F (4°C).

## AIR QUALITY SENSOR



Press once to activate air recirculation. Press again to activate automatic air recirculation.

In automatic mode, air recirculation is regulated to achieve optimum air conditioning performance.

Press a third time to switch off.

**Note:** The windows can mist if recirculation is used for long periods.

## HEATED WINDSHIELDS



Heated windshield.



Heated rear glass.



Press button to operate the required screen heater. The screen heater(s) will operate for a predetermined timed period before automatically switching off.

The screen heaters will be automatically switched on if defrost mode is activated or if the external air temperature is low.

### **NOTICE**

*Do not attach labels to the rear glass. Do not scrape or use abrasive materials to clean the inside of the screen.*

## REAR CLIMATE CONTROL

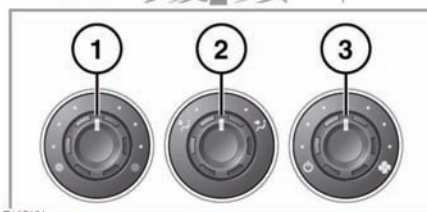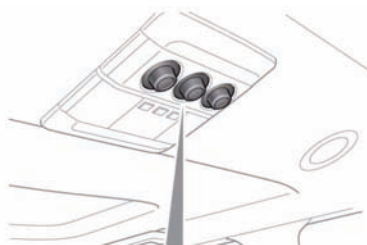

E135481

1. Temperature control: Clockwise rotation increases the temperature.
2. Distribution control: Turn to the relevant icon to direct airflow. The control may be turned to a position between icons to split airflow between different vents.
3. Blower control.

**Note:** These controls only operate when the rear environment button is pressed twice, enabling rear manual operation.