


## TOUCH SCREEN HOME MENU

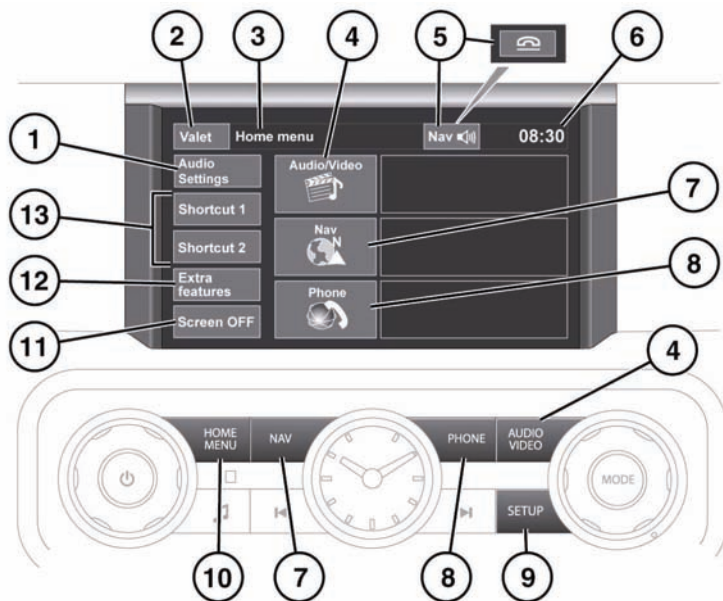

E135908

### **⚠ WARNING**

**Do not adjust the touch screen controls, or allow the system to distract the driver, while the vehicle is moving. Driver distraction can lead to accidents, causing serious injury or death.**

1. Touch to view the **Audio settings** menu.
2. Touch to select **Valet** mode.
3. Menu title.
4. Touch (soft key) or press (fascia button) to select the **Audio/Video** menu. An overview of current audio/video information is shown alongside the soft key.
5. Touch to end a call when using the phone, or to repeat the last given navigation instruction.
6. Time display. Touch to select time or date adjustment.

7. Touch (soft key) or press (fascia button) to select the **Navigation** menu. Current set destination is shown alongside the soft key.
8. Touch (soft key) or press (fascia button) to display the **Phone** menu.
9. Press to view the touch screen **Setup** menu.
10. Press to display the **Home** menu.
11. Touch to turn off the screen
12. Touch to access **Extra features** menu.
13. Home menu presets: 2 items can be selected as presets on the home menu. See **103, TOUCH SCREEN SETUP**.

**Note:** To enter/exit Valet mode, the correct PIN will need to be entered. See **104, SELECTING VALET MODE**.

## TOUCH SCREEN USE

### NOTICE

*Always run the engine during prolonged use of the touch screen. Prolonged use will cause the battery to discharge.*

### NOTICE

*Do not use excessive pressure when selecting items on the touch screen.*

The touch screen is operated by a combination of buttons on the fascia and steering wheel (referred to as hard keys), and virtual buttons on the touch screen (referred to as soft keys). The soft keys only require light pressure to function.

## TOUCH SCREEN DISPLAY ICONS



Back soft key: Touch to return to the previous screen displayed.

## TOUCH SCREEN CARE

### NOTICE

*Do not use abrasive cleaners on the touch screen. For approved cleaning products, contact your Land Rover Retailer/Authorized Repairer.*

## TOUCH SCREEN SETUP

Select Setup using the **SETUP** button on the fascia.

Setup is divided into categories:

- Screen.
- System.
- Voice.

## SCREEN SETTINGS

- **Volume pop-up:** Select to display Volume pop-up on or off.
- **Screensaver:** Select to change the screensaver. Touch an option to select.
- **Screen animations:** Select to turn animated transitions between screens on or off.

***Note:** Screen animations will slow down the system response time.*

- **Time out to home menu:** Sub menu selection screens can be set to revert to the **Home menu** after a pre determined length of time.
- **Theme:** changes the appearance of the touch screen soft keys.

## SYSTEM SETTINGS

- **Button feedback:** Soft key confirmation tone on or off.
- **Clock adjust:** Select 12 and 24 hour clock. Use the arrow soft keys to alter the time. Select **Date** to change the date, or to alter the date format (dd/mm or mm/dd). Select **Set**, to store new settings.
- **Home menu shortcuts:** Select to up to 2 items from the displayed list to appear as shortcuts on the **Home menu**. Select **Clear** to deselect highlighted items.
- **Language:** Select to change the vehicle Voice between **Male** and **Female** or to change the system language. Touch **Change** to select alternatives for Voice and text displays. Follow the on-screen instructions to confirm.

***Note:** Some languages are not yet available for both System display text and Voice control. In this event, it will be necessary to select a separate language for Voice control.*

- **Volume presets:** Select to alter the volume for the various audible systems (traffic and news announcements, parking aid, phone etc.).

## VOICE SETTINGS

- **Command list:** View the categories and the acceptable voice commands.  
Select an **Information** button to view alternative function commands.
- **Vocetags:** View the categories. Select a category to manage the vocetags for the chosen system. See **132, VOICETAGS**.
- **Operating guide:** View brief Voice system instructions. Select **Voice tutorial** for more detailed instructions (cancel via the displayed pop-up or by pressing and holding the voice button).
- Preferences: Select to alter the following settings:
  - **Voice profile:** The voice system can be trained to have a greater recognition of a particular voice or accent. The default setting is **Standard**. To build a voice profile for either **User 1** or **User 2**, it is necessary to complete a training program first.  
To complete the training for the first time, select either **User 1** or **User 2** and follow the on-screen and audible instructions.
  - **Voice feedback:** Select **On** or **Off**.
  - **Feedback volume:** Adjust using the +/- buttons. It is not possible to reduce the volume to zero.
- **Voice training:** Select to access the voice system training program, designed to enable the system to better recognise the vocal characteristics of a user.

Select **User 1** or **User 2** and follow the on screen and audible instructions. See **132, VOICE TRAINING**.

The training session can be cancelled at any time by touching the on-screen pop-up or by pressing and holding the Voice button on the steering wheel. See **131, USING VOICE CONTROL**.

## EXTRA FEATURES

There more features available than can be displayed at one time. This menu allows the selected features to be displayed, for example:

- **Ambient lighting:** While the headlamps are turned on, select this feature to turn ambient lighting on or off. Adjusting to the minimum level will turn ambient lighting off. Selecting **Auto** allows the vehicle to control when and how ambient lighting is used.

Extra features are displayed in alphabetical order. Use the forward or back soft keys to move to the next screen.

## SELECTING VALET MODE

Valet mode allows the vehicle to be locked by a parking attendant, without giving access to the loadspace. Valet mode also prevents operation of the touch screen, to prevent access to telephone numbers or navigation addresses.

From the **Home** menu, select **Valet**:

Enter a 4 digit Personal Identification Number (PIN) (personally chosen). On completion, touch the **OK** soft key.

If you wish to cancel the PIN, select **Delete**.

If the PIN is cancelled, or incorrectly entered, you will be prompted to enter the PIN again.

**Valet mode activated** is displayed to indicate that the PIN has been accepted.

The loadspace is now securely locked in Valet mode and the Valet mode On screen is displayed.

## DESELECTING VALET MODE

When you enter the vehicle, touch the **Valet** button to view the Valet mode screen.

Enter your 4 digit PIN and touch the **OK** button.

**Valet mode deactivated** is displayed to indicate that your PIN has been accepted.

- The loadspace will return to the previously set security requirement.
- The touch screen will be enabled.

**Note:** *If the PIN is forgotten, Valet mode can only be deactivated by your Land Rover Retailer/Authorized Repairer.*