

 
 
System Volume Settings

VOLUME ADJUSTMENT

WARNING



Sustained exposure to high sound levels can damage your hearing.

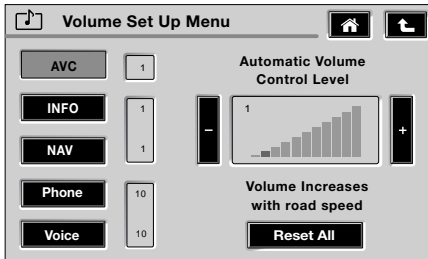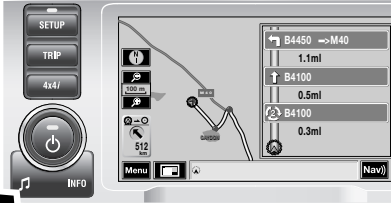



LAN1061 ENG

To access the volume set up menu, press and hold the Tone button until the volume set up menu is displayed. The icons to the left, allow you to choose a setting to adjust (**AVC**, **INFO**, **NAV**, **Phone** and **Voice**). The boxes to the right of the icons show the values currently set for each option. The bar graph and the +/- icons are used to change the settings and show the changes.

Note: If no change is made within ten seconds, the volume set up menu will disappear.

Automatic Volume Control (AVC)

  Automatic Volume Control adjusts the volume level as the vehicle speed increases. This compensates for the increase in noise at increased speeds.

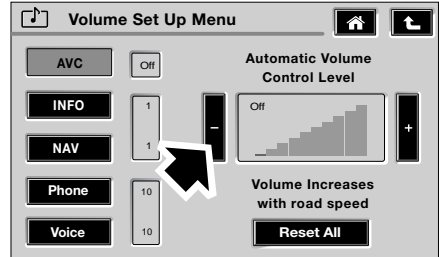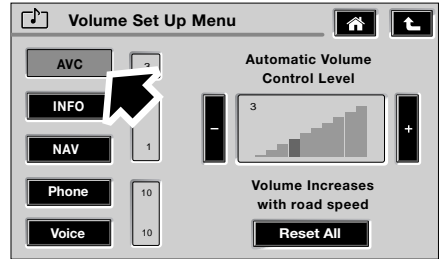

ICE2084 ENG

From the volume set up menu, touch the **AVC** icon to display the settings for AVC.


The bar graph represents the amount by which the volume level may increase. If the smallest bar is selected, the AVC function will be turned off. In this state the volume will not increase with vehicle speed. The remaining bars (from 1 to 9) will increase the volume level up to the maximum level selected.

To increase the level of volume change, press the + icon. Each press will select the next bar to the right, up to the maximum (9).

To decrease the level of volume change, press the - icon. Each press will select the next bar to the left, down to the minimum (1). A subsequent press of the - button will switch AVC off.

System Volume Settings

 Information announcements

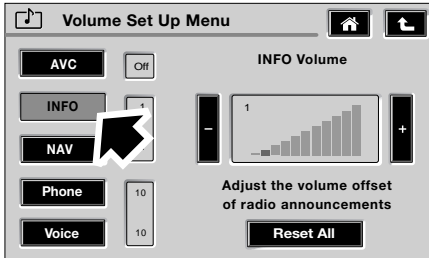


ICE2085 ENG

Press the **INFO** icon from the volume set up menu, to adjust the volume level for radio announcements, such as news broadcasts and traffic announcements on RDS.

To increase the volume level, press the + icon. Each press will select the next bar to the right, up to the maximum (9).

To decrease the volume level, press the – icon. Each press will select the next bar to the left, down to the minimum (1).

 Navigation guidance

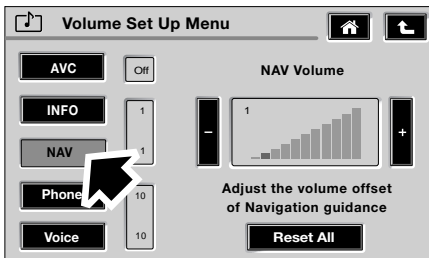


ICE2086 ENG

Press the **NAV** icon from the volume set up menu, to adjust the volume level for navigation guidance messages.

To increase the volume level, press the + icon. Each press will select the next bar to the right, up to the maximum (9).

To decrease the volume level, press the – icon. Each press will select the next bar to the left, down to the minimum (1).

 Telephone volume

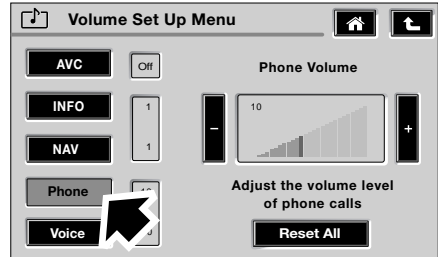

ICE2087 ENG

 
Press the **Phone** icon from the volume set up menu, to adjust the volume level for the telephone.

To increase the volume level, press the + icon. Each press will select the next bar to the right, up to the maximum (25).

To decrease the volume level, press the – icon. Each press will select the next bar to the left, down to the minimum (5).

System Volume Settings

Voice volume

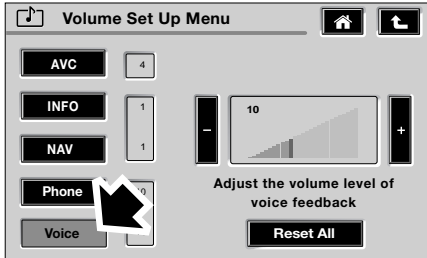


ICE2088 ENG

Press the **Voice** icon from the volume set up menu, to adjust the volume level for voice messages.

To increase the volume level, press the + icon. Each press will select the next bar to the right, up to the maximum (25).

To decrease the volume level, press the – icon. Each press will select the next bar to the left, down to the minimum (5).


 
Manual volume adjustment

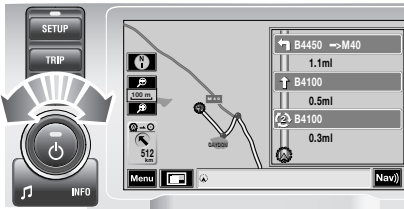

LAN1062 ENG

During normal audio/video playback, a news interrupt, navigation guidance, telephone interrupt or voice message, the volume level can be adjusted by turning the rotary control.

  Resetting the volume settings

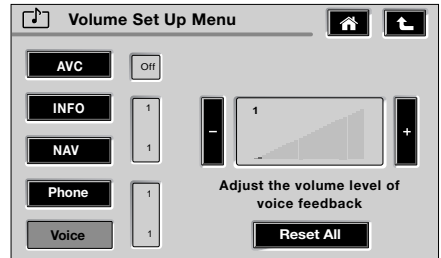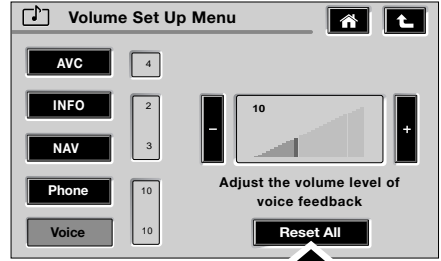


ICE2132 ENG

Press the **Reset All** icon from the volume set up menu, to move to default settings position.

System Volume Settings

 TONE ADJUSTMENT

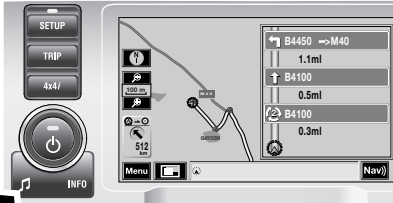


LAN1063 ENG



Press the Tone button (arrowed) to display the Tone menu. From this menu, the settings for Balance, Fade, LOGIC7, Bass, Treble and Sub-woofer can be adjusted/enabled.

Note: If no change is made within ten seconds, the screen will revert to that which was displayed prior to selecting the volume set up menu.

 Bass, treble and sub-woofer

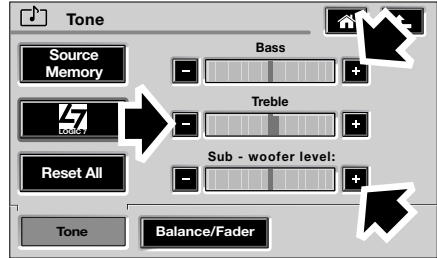


ICE2131 ENG

With the Tone menu displayed, press the **Tone** icon in the bottom left hand corner. The adjustments for Bass, Treble and Sub-woofer are made, using the + and - icons to increase or decrease the settings, as required.

System Volume Settings

 
Tone reset all

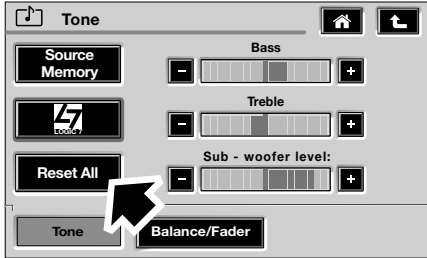

ICE2093 ENG

With the Tone menu displayed, press the **Reset All** icon. The settings revert to the mid position.

 Source memory

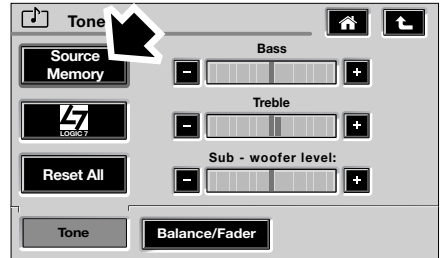


ICE2091 ENG

Source memory allows settings to be adjusted and memorized for individual audio sources. Further explanation can be obtained by pressing the **Source Memory** icon.



System Volume Settings

 LOGIC7


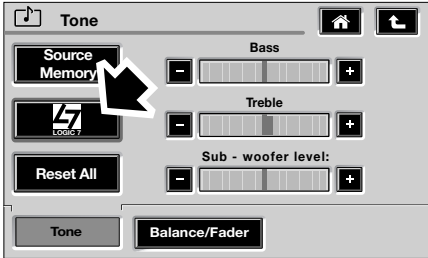


ICE2092 ENG

LOGIC7 delivers audio source output using a seven channel feed. This provides a three dimensional audio effect, by controlling the vehicle speakers individually. This allows instruments, sound effects and dialogue within recorded or broadcast audio sources, to be clearly placed around the passenger cabin.

To turn LOGIC7 on or off, press the **LOGIC7** icon.



 
 
Balance and fade

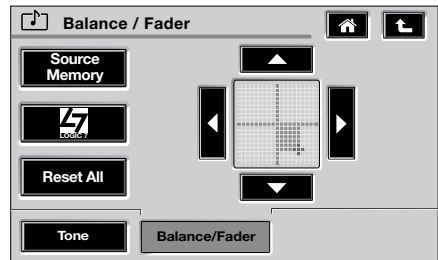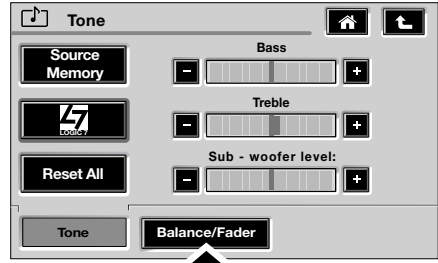

ICE2094 ENG

To access the Balance and Fade adjustment screen, press the **Balance/Fader** icon on the Tone menu screen.

    System Volume Settings

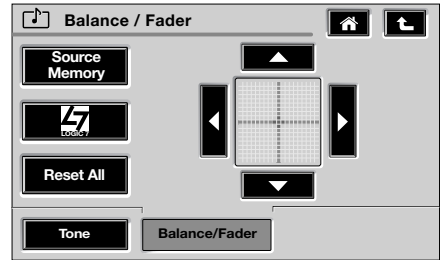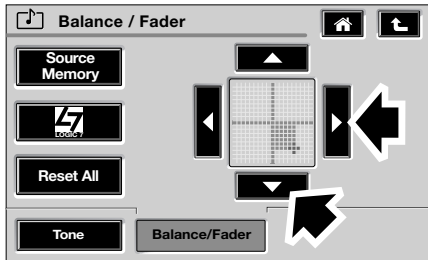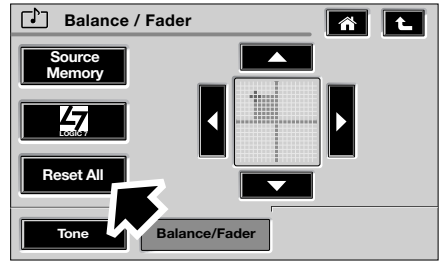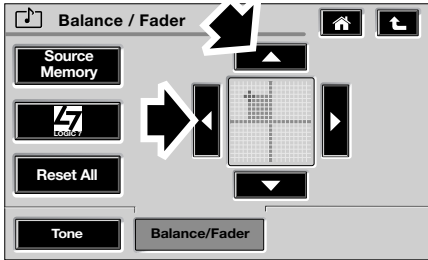

ICE2095 ENG

ICE2096ENG

The balance and fade adjustments are made by moving the position of the highlighted squares using the four arrow icons. The highlighted squares represent the bias direction for audio output.

To reset the balance and fade adjustments to the mid position, touch the **Reset All** icon arrowed.