

Audible Warnings

AUDIBLE WARNINGS

The market specification will determine which of the following audible warnings are appropriate to your vehicle.

Lamps on reminder

If the exterior lamps are left on after the starter switch is turned off, a warning chime will sound when the driver's door is opened. The chime will cease as soon as the lights are switched off or when the driver's door is closed.

Electronic air suspension warnings

Automatic height changes are inhibited whilst in Crawl mode, provided the vehicle does not exceed 40 km/h (25 mph). If vehicle speed exceeds 30 km/h (20 mph), a warning chime will sound. See **Crawl (locked at Access height)**, 205.

Dynamic stability control (DSC) warning

If a fault with the DSC system is detected, a warning chime will sound once and the DSC warning indicator will illuminate. The vehicle may still be driven with care, but seek qualified assistance at the earliest opportunity.

Starter key reminder

If the key is left in the starter switch while the driver's door is open, a warning will chime continuously. The chime stops as soon as the door is closed or the key is removed from the starter switch.



The starter key reminder can be enabled or disabled by a Land Rover Dealer/Authorised Repairer.

Seat belt reminder

In some markets, a warning chime will sound (one second frequency):

- If the driver's seat belt has not been fastened when the starter switch is turned on. The chime operates in conjunction with the seat belt warning indicator and sounds for 6 seconds, or until the seat belt is fastened (whichever occurs first).

If the seat belt remains unfastened, the chime will sound at intervals of 15 seconds.

External temperature warning

If the external temperature drops to 4°C (39°F) or less, a warning chime sounds, accompanied by a warning in the message centre. Take appropriate measures to defrost the vehicle and be aware that there may be ice on the roads.