

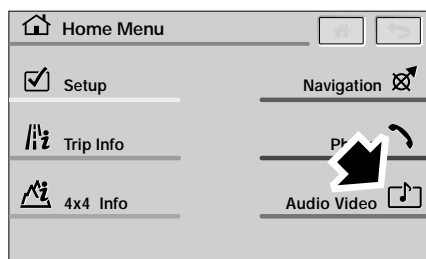


# Radio Operation

## RADIO OPERATION

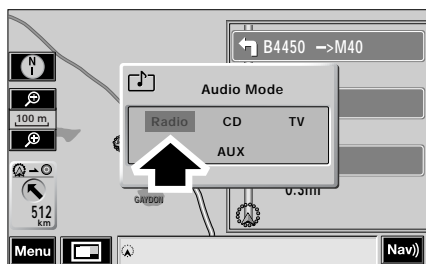

LAN1065 ENG

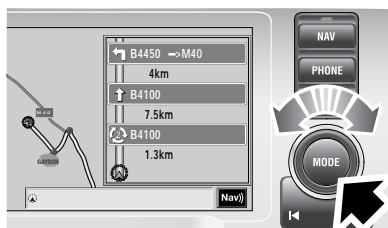


LAN1106 ENG

To access the radio mode, either touch the **Audio Video** icon on the home menu, or press the **MODE** button and turn the rotary control until **Radio** is highlighted.

**Note:** When the Audio system is operating in 1-HOUR mode, the audio controls on the steering wheel do not function.

## Band selection

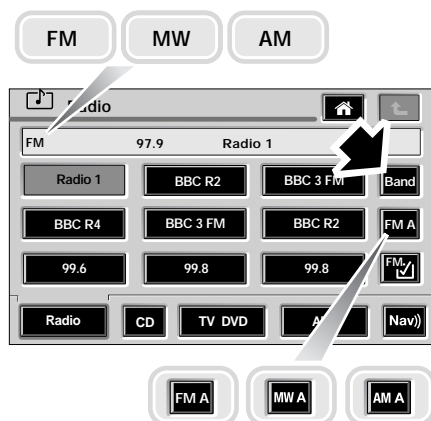


LAN1174

When in radio mode, touch the **Band** icon repeatedly, until the required band is selected (FM, MW, AM).

# Radio Operation

## Auto storing stations

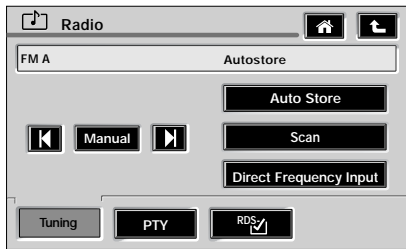

LAN1175 ENG

When in radio mode, to auto store stations, touch the FM settings icon (arrowed). Select the tuning screen by touching the **Tuning** icon at the bottom left of the settings screen.


Touch the **Auto Store** icon to start storing stations. Repeat for all other wavebands.

The other auto store bands are FMA, MWA and LWA.



LAN1176 ENG

Alternatively, touch and hold the **FM A** icon to start the auto store process.

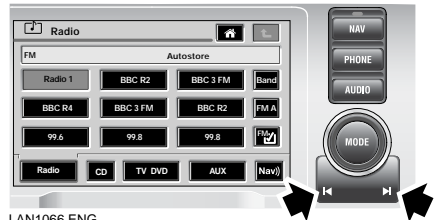

LAN1066 ENG



To stop auto store at any time, irrespective of the method used, press either of the seek buttons. The auto store search will stop, the preset station positions will remain as shown prior to the search beginning and the last station played will resume.

Pressing the mode button, or touching the **Radio**, **CD**, **Video** or **Aux** icons, will also cancel the auto store search and move to the relevant display.



# Radio Operation

## Selecting preset stations

Once the station frequencies have been auto stored, they can be selected by touching the icon for the required station.

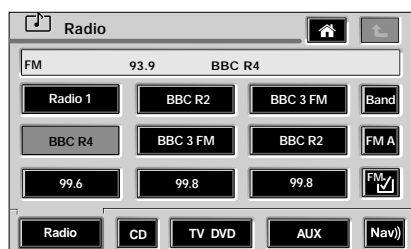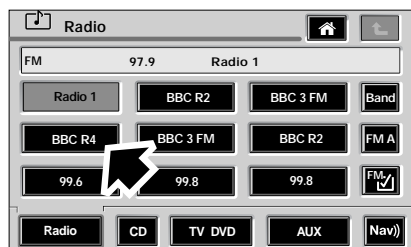

LAN1177ENG

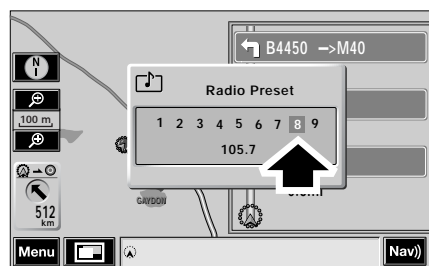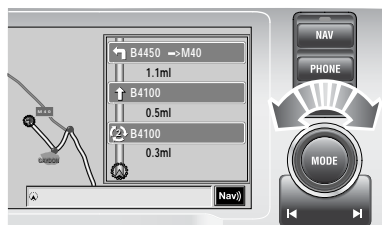


LAN1067 ENG

Alternatively, rotate the audio control. The first click displays the current station and each subsequent click moves to the next station. Clockwise rotation moves up, anti-clockwise moves down.

**Note:** See also **Quick Start** section at the front of this book.

# Radio Operation

## Seeking stations

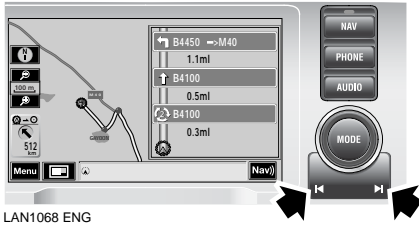


LAN1068 ENG

Press the up or down seek button to skip to the next available station in that direction.



LAN1178 ENG


When seeking from the main radio screen, the station information will be displayed in the data display at the top of the screen.

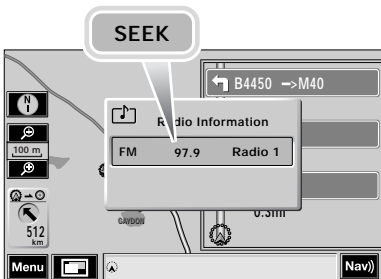

LAN1179 ENG

When seek is enabled from any view other than audio/video, the station information is displayed briefly as a pop-up.




## Manual tuning

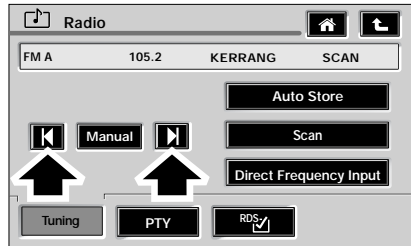

LAN1180 ENG

To manually input a frequency, touch the FM settings icon (arrowed), to display the settings screen. A new frequency may be selected by touching the icons indicated.

# Radio Operation

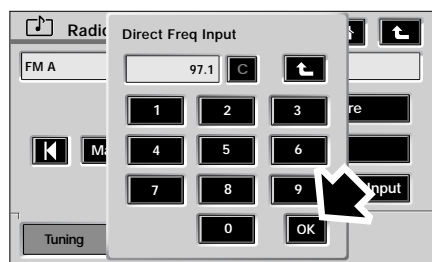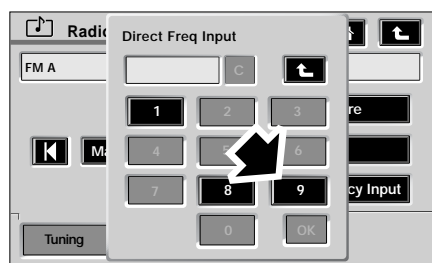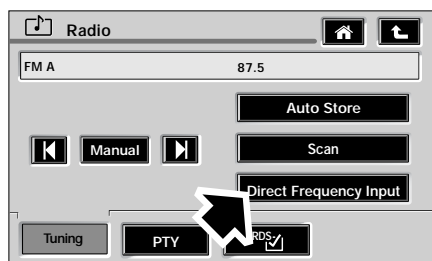


ICE2109 ENG

Touch the **Direct Frequency Input** icon and a pop-up will be displayed to allow the frequency to be entered using the numeric key pad.

**Note:** Only some of the digits will be enabled on the pop-up screen. These are the only digits available to start the frequency. When the first digits have been input further available digits will be displayed.

When the desired frequency has been entered, press the **OK** icon to confirm.

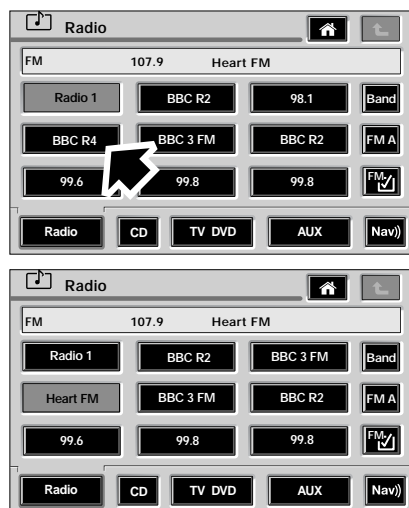


LAN1181 ENG

Once the frequency has been set, the station information (if available) will be displayed in the information display.

To save the station frequency as a preset, touch and hold a location icon for approximately three seconds. After a short delay the station name will be displayed at that preset location.

# Radio Operation

## Program search by type (PTY)

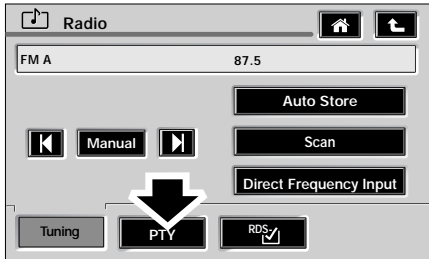

ICE1769 ENG

It is possible to search for stations of a certain type, for example Rock Music. From the settings screen, touch the **PTY** icon.

**Note:** The PTY menu is not available when the vehicle is moving.

A menu screen is displayed, which allows you to scroll up or down through a list of programme types. To select a type, touch the box icon to the left of the programme type required. **Searching** will then be displayed in the information display.

**Note:** To cancel the search, press either of the seek buttons.



ICE2014 ENG

# Radio Operation

---

## PTY Programme Types

The following list contains examples of programme types. Specific titles may vary.

NONE	No programme type defined
NEWS	News
AFFAIRS	Current affairs
INFO	Information
SPORT	Sport
DRAMA	Drama
SCIENCE	Science
POP M	Pop music
ROCK M	Rock music
EASY M	Easy listening music
CLASSICS	Serious classical
WEATHER	Weather
RELIGION	Religious reports
JAZZ	Jazz music
COUNTRY	Country music
FOLK M	Folk music

**Note:** *TEST and ALARM emergency broadcast stations may not be available currently. When the ALARM stations are available, they will broadcast important information in the event of an emergency. TEST will broadcast a test signal for the emergency information, to allow the public and emergency services to ensure that emergency procedures can be practised without causing alarm.*