

DRIVER CONTROLS

1. Map reading lamp switch. **32**
2. Main interior lamp switch. **32**
3. Passenger airbag warning lamp. **29**
4. Sunroof switches. **33**
5. Trip computer switch. **42**
6. High beam/Direction indicator. **30**
7. Cruise control switches. **75**
8. Instrument pack and message centre. **42**
9. Audio controls. **81**
10. Wiper/washer controls. **40**
11. START/STOP button. **60**
12. Audio system and controls. **81**
13. Display screen.
14. Parking aid switch.
15. Central locking, unlock.
16. Hazard warning light control switch.
17. Central locking, lock.
18. Stop/start system off button.
19. Main climate control panel. **48**
20. Air conditioning on/off button. **48**
21. Dynamic stability control on/off button. **65**
22. Terrain response control. **77**
23. Power socket. **52**
24. Handbrake lever. **68**
25. Gear selector. **63**
26. Hill descent control (HDC) switch. **79**
27. Climate control recirculation on/off switch. **48**
28. Remote control docking port. **60**
29. Telephone controls. **98**
30. Horn buttons.
31. Steering column adjustment lever. **16**
32. Exterior mirror adjustment controls. **35**
33. Window switches. **33**
34. Window isolator switch. **33**
35. Headlamp levelling control. **30**
36. Rear fog lamp switch. **30**
37. Main exterior lighting control. **30**
38. Front fog lamp switch. **30**
39. Instrument illumination dimmer control. **31**