



E132562

Use the left/right screen select keys on the rear media remote control, or the front touch screen controls, to allow further options to be set and selected.

Note: A help screen is available from each screen/menu. To view the help screen for guidance on the available functions and options, touch the question mark (?) icon.

HEADPHONES

The volume control for each set of headphones is adjusted on the headphones.

Press the channel selector button to cycle through available channels. Select the channel appropriate for the required screen.

Note: These headphones are not intended for use by the driver or outside the vehicle.

Note: The earpiece exteriors must remain exposed to the infra red transmitter in the overhead console. Any barrier will prevent them from working correctly.

When not in use, the headphones should be turned off.

REAR MEDIA SETTINGS

The rear media settings screen allows **Limousine Mode** and **Parental Control** to be turned on or off, and the **Age Warning** threshold to be set.

When TV **Limousine Mode** is on, the rear passengers will have control of the total cabin audio system via the remote control.

When TV **Parental Control** is on and the age limit is set, a message is sent to the rear screen if the content is unsuitable.



It remains the responsibility of the parent or guardian, even with parental control on, to ensure that the content is suitable for viewing by children.