

VOICE GUIDANCE

To turn voice guidance on or off but maintain route guidance, proceed as follows:

1. Touch **Nav menu** on the navigation screen.
2. Touch the **Route voice guidance** soft key. The soft key will be highlighted when voice guidance is enabled.

CANCEL ROUTE GUIDANCE

To cancel route guidance, proceed as follows:

1. Touch **Nav menu** on the navigation screen.
2. Touch the **Cancel guidance** soft key.

QUICK POI SELECTION

1. Touch the Map to display the additional options
2. Touch the **Point of interest** (POI) soft key.
3. The screen shows six suggested categories, 5 of which can be selected as quick points of interest.
4. Select a Quick POI category, or touch **More** to see further POIs. Touch **Ok** to confirm a selection.
5. The map with the POI icon(s) is displayed. Scroll the map to the POI icon, then touch **Set destination** to set and calculate route.
6. Touch **GO** to start journey.

RESTORE SYSTEM DEFAULTS

From the navigation menu, select **Nav set-up**. If you have made any changes to the system's default settings, use this menu to restore the original settings.

FAVOURITES

This enables you to manage destinations such as, place of work, home, favourite restaurant.

From the favourites sub menu in stored locations, you can save up to 400 stored favourites.

Use favourites to add your home address as a stored favourite.

1. From the **Nav menu**, select **Stored locations**.
2. Touch **Favourite**.
3. To store a favourite, select **Add** from the submenu.
4. Select any destination entry method and confirm desired location.

FAVOURITES DETAILS

1. From the **Stored locations** menu, select **Favourite**.
2. Select **Edit** or **Delete**.
3. Touch the selected favourite to display the details.
4. Select the chosen detail to edit. Details include Attribute, Name, Phone number, Location and Icon.

HOME

1. From the Nav menu, select **Stored locations**.
2. Touch **Home location**.
3. To store a home location, select **Add** from the submenu.
4. Select any destination entry method to set your home location. Touch **Ok** to confirm.
5. Touch **Ok** from the favorite summary, home location is now set.