

## STARTING THE ENGINE



**Never start the engine, or leave it running, when the vehicle is in an enclosed space. Exhaust gasses are poisonous and can cause unconsciousness and death if inhaled.**



If the engine fails to start, do not continue cranking as this will discharge the battery. It may also damage the catalytic convertor due to unburnt fuel passing through the exhaust.

**Note:** The Smart Key may not be detected if it is placed within a metal container or if it is shielded by a device with a back-lit LCD screen, such as a smart phone, laptop (including laptop bag), games console etc. Keep the Smart Key clear of such devices when attempting Keyless entry or Keyless starting.

To start the engine.

1. Ensure that a valid Smart Key is inside the vehicle.
2. Ensure that Park (P) or Neutral (N) is selected.
3. Firmly depress the brake pedal.
4. Press and release the engine **START/STOP** button.

**Note:** For diesel engined vehicles the delay period before cranking begins will be longer in low ambient temperatures due to extended glow plug operation. During this extended delay the brake pedal must remain depressed.

Once the engine has started, the brake pedal can be released if it safe to do so.

## SWITCHING OFF THE ENGINE




**Never stop the engine while the vehicle is in motion.**

1. Ensure that the vehicle is parked with Park (P) selected and the parking brake applied.

2. Press and release the engine **START/STOP** button.

## SWITCHING ON THE IGNITION

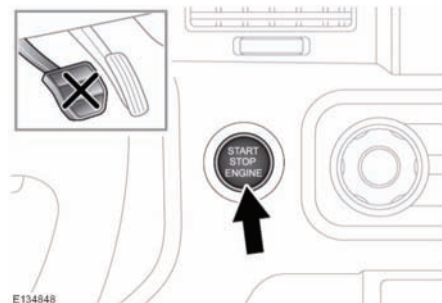

To switch on the ignition without starting the engine.

1. Ensure the brake pedal is not depressed and that a valid Smart Key is inside the vehicle.
2. Press and hold the engine **START/STOP** button until the warning lamps illuminate.
3. Release the engine **START/STOP** button.



If the brake pedal is applied when the engine **START/STOP** button is pressed, the engine will start.

## ROLLING RE-START

A rolling restart can be initiated by selecting Neutral (N) and pressing the engine **START/STOP** button.

## KEYLESS START BACKUP

If the vehicle has been unlocked using the emergency key blade or the Smart Key is not detected by the vehicle, it will be necessary to use the keyless start backup to disarm the alarm and start the engine.